

Using the LI-600

Porometer/Fluorometer



LI-COR[®]

Using the LI-600

Porometer/Fluorometer

Software v3.0

LI-COR Environmental

4647 Superior Street
Lincoln, Nebraska 68504
Phone: +1-402-467-3576
Toll free: 800-447-3576 (U.S. & Canada)
envsales@licor.com
envsupport@licor.com
licor.com/

LI-COR GmbH, Germany

Siemensstraße 25A
61352 Bad Homburg
Germany
Phone: +49 (0) 6172 17 17 771
envsales-gmbh@licor.com
envsupport-eu@licor.com

LI-COR Ltd., United Kingdom

St. John's Innovation Centre
Cowley Road
Cambridge
CB4 0WS
United Kingdom
Phone: +44 (0) 1223 422102
envsales-UK@licor.com
envsupport-eu@licor.com

Beijing LI-COR Bioscience Ltd.

Room 502-503, 5th Floor, Jimen No.1 Office Building
Xitucheng Road, Haidian District
Beijing, China
Phone: +86-400-1131-511
china-sales@licor.com
china-support@licor.com

LI-COR Distributor Network

licor.com/distributors

Notice

The information in this document is subject to change without notice.

LI-COR MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. LI-COR shall not be held liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without prior written consent of LI-COR, Inc.

Windows® is a trademark of Microsoft, Inc. macOS® is a trademark of Apple, Inc., registered in the US and other countries. Drierite is a registered trademark of the W.A. Hammond Drierite Company. All other trademarks and registered trademarks are property of their respective owners.

U.S. Patents: licor.com/patents

Printing History

© Copyright 2023, LI-COR, Inc. All rights reserved.

Publication Number: 984-19037

Created on Friday, June 27, 2025

Waste Electronic and Electrical Equipment (WEEE) Notice

This symbol indicates that the product is to be collected separately from unsorted municipal waste. The following applies to users in European countries: This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste. For more information, contact your local distributor or the local authorities in charge of waste management.



Notes on Safety

This LI-COR product has been designed to be safe when operated in the manner described in this manual. The safety of this product

cannot be assured if the product is used in any other way than is specified in this manual. The product is intended to be used by qualified personnel. Read this entire manual before using the product.

Equipment markings:	
	The product is marked with this symbol when it is necessary for you to refer to the manual or accompanying documents in order to protect against injury or damage to the product.
WARNING	Warnings must be followed carefully to avoid bodily injury.
CAUTION	Cautions must be observed to avoid damage to your equipment.
Manual markings:	
Warning	Warnings must be followed carefully to avoid bodily injury.
Caution	Cautions must be observed to avoid damage to your equipment.
Note	Notes contain important information and useful tips on the operation of your equipment.

California Proposition 65 Warning

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

CE Marking:

This product is a CE marked product. For conformity information, (typically EMC, Safety, RoHS, and/or Wireless) contact LI-COR Support at envsupport@licor.com for a Declaration of Conformity. Outside the U.S., contact your local sales office or distributor.

For ReaCH (Regulation (EC) n.1907/2006) related questions, information is available on the European Chemicals Agency maintained website for the Waste Framework Directive SCIP database.

You can search by product name (for this product “LI-600”), or request an “SCIP number” from the email above.

LI-COR scientific products are for professional use (non-consumer products). These products do not fall within the voluntary scopes of regulations: UNI EN ISO 14024, TCO Certified, EPEAT 2018, Blue Angel, TÜV Green Product Mark, Energy Star, EU GPP, or other similar regulations. The typical scope for these regulations is lighting, furniture, copiers, mobile phones, televisions, computer/servers, home appliances, to name a few. As such, our products do not use any labeling that indicates adherence thereof.

Federal Communications Commission Radio Interference Statement

WARNING: This equipment generates, uses, and can radiate radio frequency energy and if not installed in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC rules, which are designed to provide a reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.

Contents

Section 1. The LI-600

Components	1-2
Parts and accessories kit	1-3
Support	1-4
Power and battery	1-4

Section 2. Using the LI-600 interface

Select Configuration and Matching	2-1
Measurement	2-2
Data labels and remarks	2-4
Matching	2-5
Scan Barcode	2-6
Settings	2-6
Info	2-7

Section 3. Taking Measurements

Precautions and techniques	3-1
Precautions	3-1
Techniques	3-2
Taking a measurement	3-3
Match mode	3-3
Taking a measurement in Auto Mode	3-5
Taking a measurement in Manual Mode	3-6
Using the barcode scanner	3-7
Viewing measurement data on-screen	3-7

Section 4. Using the computer software

Download the software and connect the LI-600	4-1
Connection Overview	4-1
Home screen	4-3

Toolbar	4-3
Drop-down menu	4-3
Buttons	4-4
Configuration Management	4-5
Data Management	4-7
Live View	4-9
Offline Mode	4-10
Barcode generator	4-12
Barcode generator screen	4-12
Print preview screen	4-14

Section 5. Configurations

Configuration settings	5-1
Creating custom configurations	5-3
General	5-4
Data Labels	5-5
Automode Setup	5-6
Remarks	5-7
Measurement Settings	5-7
Display Layout	5-9
Preview	5-10
Save Configuration	5-11
Upload configuration to instrument	5-11

Section 6. Data files

Downloading data from the LI-600	6-1
Exporting data files from the computer software	6-2
Data dumps	6-2
Data file structure	6-3
Groups, variables and units	6-3
Groups, labels and descriptions	6-4

Section 7. Troubleshooting

Instrument issues	7-1
Instrument will not power on	7-1

Instrument will not seal on a leaf	7-1
Instrument will not automatically log a measurement	7-2
The display layout is blank	7-2
Software warning when connecting the LI-600	7-2
Software warning when updating the firmware	7-3
The new RH sensor serial number has not updated	7-4
The RH values and sample RH are high	7-4
Instrument warnings	7-5
Matching. Do not clamp on leaf.	7-5
Low memory	7-5
Low battery	7-5
Blower off	7-5
Pump	7-6
No GPS map pin	7-6
Data download errors	7-6

Section 8. Maintenance

Storing the LI-600	8-1
Cleaning the LI-600	8-1
Barcode window and quantum sensor	8-1
Clamp and gasket	8-2
Infrared thermometer	8-3
Fluorometer	8-4
Removing the instrument shells	8-4
Cleaning the shell vents	8-5
Cleaning the RH sensors	8-6
Removing and inserting a battery	8-6
Replacing the air intake filter	8-8
Calibrating the sensors	8-10
RH sensors	8-10
Flow sensors	8-18
Fluorescence detector	8-19
Changing the RH sensors serial number	8-20

Section 9. Theory of operation

Leaf porometer	9-1
Derivation of equations	9-2
Boundary layer conductance	9-5
Water vapor sensors	9-5
Flow sensors	9-7
Leaf temperature sensor	9-8
PAR sensor	9-8
Vapor pressure deficit	9-8
Leak rate	9-9
Stability criteria	9-9
User calibration procedures	9-10
Fluorometer	9-11
Maximum fluorescence and saturating flashes ..	9-12
Minimum and steady-state fluorescence	9-14
Fluorescence output parameters	9-14
Leaf angle and GPS	9-15
Accelerometer/Magnetometer	9-16
GPS	9-17
Leaf angle software calculations	9-17
Clocks	9-19
References	9-20

Section 10. Specifications

General	10-1
Porometer	10-2
Fluorometer	10-3
GPS Receiver	10-3

Appendix A. FlashAnalysis App

Standard Terms and Conditions

Index

Section 1.

The LI-600

The LI-600 Porometer/Fluorometer is a lightweight hand-held instrument that takes combined stomatal conductance, and Pulse Amplitude Modulation (PAM) chlorophyll *a* fluorescence measurements of a leaf in seconds. It delivers precise, high-throughput stress evaluations over the same leaf area and can quickly survey plants under ambient conditions.

The LI-600 has a GPS receiver that records the latitude, longitude, and altitude for each measurement, allowing users to track, return to, and map locations. The LI-600 includes a magnetometer/accelerometer that measures the pitch, roll and heading of a leaf. These measurements, along with information from the GPS receiver, enable the LI-600 software to calculate the angle of incidence of a leaf for each measurement.¹

The LI-600 computer software is available for both Windows® and macOS®. It is used to create and upload configurations to the instrument, download data from the instrument, record live data, and create barcodes. The software is available for download at licor.com/support/LI-600/software.html

¹GPS and the accelerometer/magnetometer are included in models with a serial number higher than PFA-00553.

Components

The LI-600 components are as shown below.

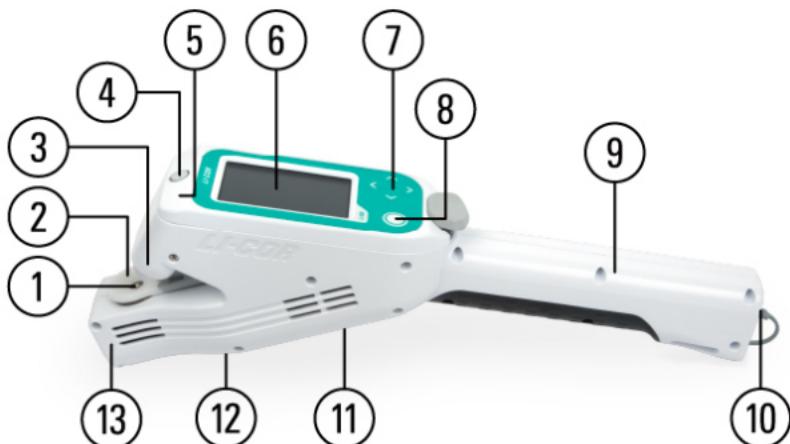


Figure 1-1. LI-600 Components.

- 1 **Aperture.** (0.75 cm diameter) Surrounds the leaf gasket, is the active measurement.
- 2 **Aperture clamp.** Closes onto the leaf.
- 3 **Fluorometer (optional).** Takes PAM chlorophyll *a* fluorescence measurements.
- 4 **Quantum sensor.** Measures ambient light level.
- 5 **Accelerometer / Magnetometer (internal).** Measures pitch, roll, and heading.
- 6 **Display.** Shows measurement workflow, instrument settings, and variables data.
- 7 **Navigation arrows.** Moves up, down, right, and left through options and screens.
- 8 **Enter button.** Powers on the instrument and selects options.
- 9 **Handle.** Encloses the rechargeable battery.
- 10 **Micro-USB port.** Connects the instrument to the computer or universal charging adapter via micro-USB cable.
- 11 **Barcode scanner.** Scans barcodes.

- 12 **Tripod mount.** (1/4-20 UNC) Attaches to a tripod.
- 13 **Porometer.** Takes stomatal conductance measurements.

Parts and accessories kit

The LI-600 comes with a kit that includes the following accessories and replacement parts. Additional parts and accessories can be purchased separately (see *Support* on the next page).

Table 1-1. LI-600 Parts and Accessories Kit

Description	Quantity	Part Number
Aperture clamp	2	6360-350
Face seal O-rings	2	192-17935
Filters	2	301-19838
Foam swabs	6	610-16093
Leaf gasket	2	6360-356
Microfiber cloth	1	229-16069
Radial seal O-rings	4	192-18368
Scrub tube zero kit	1	9968-258
Spare screws	20	150-14386
Charging adapter	1	591-19074
Charger prong kit	1	591-19075
USB cable	1	392-19077
Wrist strap	1	610-19076
Zero adapter assembly	1	9960-327

600-01F Fluorometer upgrade kit (optional)

The 600-01F Fluorometer Upgrade Kit adds the fluorometer module to the porometer model.

The LI-600 porometer-only includes a fluorometer blank. If the instrument is upgraded and the fluorometer needs to be removed, reinsert the fluorometer blank. The gray ribbon cable does not attach to the fluorometer blank.

Store the fluorometer in the carrying case with the instrument.

Support

The user manual, instructional videos, technical documents, webinars, FAQs, and other resources are available online at licor.com/support/LI-600/home.html. The user manual can be downloaded as a PDF.

To contact LI-COR environmental support, go to <https://www.licor.com/contact/>.

Power and battery

The LI-600 is powered by a rechargeable lithium ion battery. The LI-600 is shipped partially charged. Before using it the first time, charge the battery to 100% following the instructions below.

Charging considerations

A power supply—either the universal charging adapter or an external battery pack—can be connected to the LI-600. If using an alternate USB wall charger, ensure that it has at least 1 Amp at 5 VDC.

The LI-600 can be charged when powered on or off. Before using the LI-600 for the first time, charge the battery to 100%. Charging with the instrument powered off and using the universal charging adapter takes approximately 3.5 hours. Charging with the instrument powered off and from a computer USB port takes 8 to 10 hours and is not recommended. To charge in less than two hours, use a USB wall adapter that supports Qualcomm® Quick Charge™ (QC) 2.0 or 3.0. When fully charged, the instrument will operate for approximately 8 hours of active use;

however, battery life can vary due to age and amount of use. External battery packs are suggested for expected use longer than 8 consecutive hours.

Charging temperature: the battery will only charge when the pack temperature is within 0 to 45 °C. If the pack reaches a temperature outside this range, it will automatically stop charging.

Powering the LI-600 on and off

To power on the LI-600, press and hold the round enter button on top of the instrument.

To power off the LI-600, navigate to **Settings** by pressing the left arrow at the Select Configuration screen, then select **Shut Down** and press the Enter button. If the LI-600 is not responding and the settings cannot be accessed, power off the instrument by pressing and holding the Enter button for seven seconds; avoid this, as the last data record could be lost. Power off the instrument when not in use.

Using the universal charging adapter

The included universal charging adapter is compatible with main power in most localities globally (input: 90 to 264 VAC, 50 to 60 Hz; output: 5 VDC, 1 Amp). You may need to install different blades from the outlet adapter kit to fit your outlets.

Battery warnings and disposal

The LI-600 includes a rechargeable lithium ion battery (3.7 V, 5.2 AH) that must be disposed of safely. Contact LI-COR for a replacement battery. The exclamation point label on the exterior and a warning label on the interior

indicate the location of the lithium ion battery compartment.



Caution: Lithium ion batteries may cause environmental damage or damage to human health if they are disposed of improperly. Do not dispose of the batteries in unsorted municipal waste or an incinerator. Many localities have battery recycling facilities that accept lithium ion batteries. Contact your local distributor or the local authorities in charge of waste management to determine how to safely dispose of the battery.

Section 2.

Using the LI-600 interface

The LI-600 user interface includes four arrow buttons, a round enter button, and the display. The up and down arrows navigate through options in the display, and the left and right arrows navigate through the screens. The **Enter button** powers the LI-600 on, selects highlighted options, and initiates or logs a measurement.

The LI-600 instrument display has four parts: GPS map pin (when GPS is on), time, and battery percentage icons at the top, headings and prompts, options or information in the main portion of the screen, and navigation icons and text at the bottom.

Select Configuration and Matching

Select Configuration appears when the LI-600 is powered on. It lists the configurations loaded onto the instrument (see *Configurations* on page 5-1).

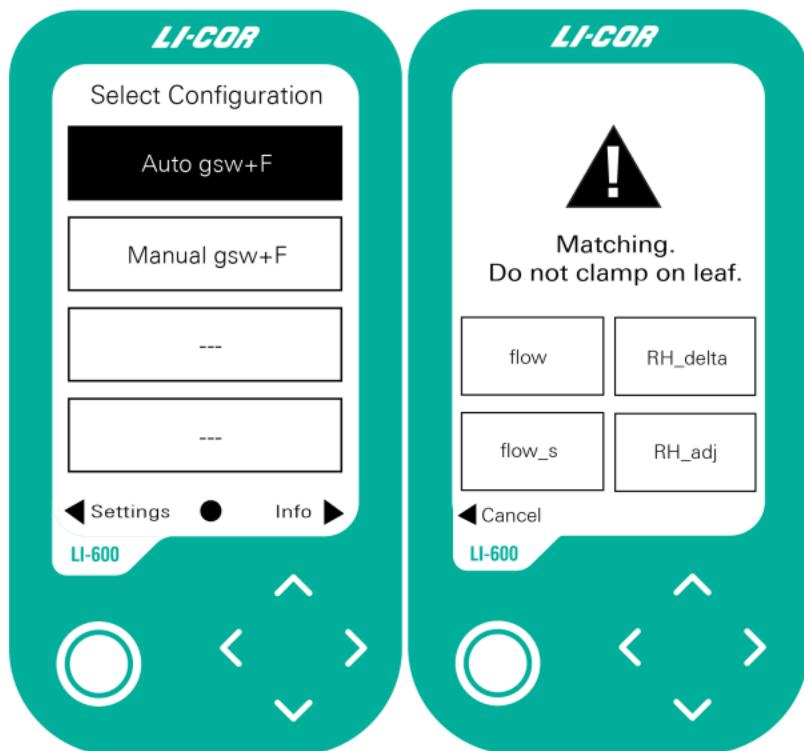


Figure 2-1. The Select Configuration and Matching screens.

Select Configuration is **Home** in the navigation, and from it you access **Settings** and **Info** with the arrow buttons.

After a configuration is selected, the LI-600 will go into **Matching**. Matching may include user prompts asking whether a leaf is in the chamber. For a full description of RH sensor matching and user prompts, see *Match mode* on page 3-3. Matching should only be done when the chamber is empty.

Measurement

After a configuration has been selected, the **Measurement** screen appears. The screen headings include a prompt, measurement status, and how many measurements have been logged. The main part of the display includes the

variables and layout set in the configuration (see *Display Layout* on page 5-9). The bottom includes navigation to labels and remarks, and indicates whether to log or initiate a new measurement with the **Enter** button.

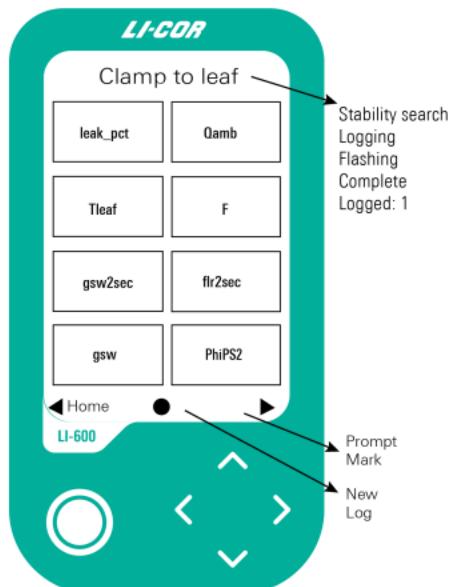


Figure 2-2. The Measurement screen.

Clamp to leaf and **Stability search** appear when the instrument is in Auto mode; they do not appear in Manual mode. When taking a measurement with the LI-600 Porometer/Fluorometer, the heading cycles through **Logging**, **Flashing**, **Complete**, and **Logged**. When taking a measurement with the LI-600 Porometer, the heading cycles through **Logging**, **Complete**, and **Logged**. At the bottom of the screen, the prompt for the **Enter button** in Auto mode is **New**; in manual mode it is **Log** then **New**. The right arrow is either **Mark** or **Prompt**. The left arrow navigates back to **Select Configuration**.

At the Measurement screen, the leak percent and stability variables will invert to white text on a black background

to alert that the leak percent is too high or the stability criteria set in the configuration are not met.



Figure 2-3. Inverted variables on the Measurement screen.

Since the LI-600 has an open cuvette, the *leak_pct* variable will be inverted when the chamber is empty.

Data labels and remarks

Data labels and remarks are configured in the LI-600 computer software (see *Data Labels* on page 5-5 and *Remarks* on page 5-7) and correspond to **Prompt** and **Mark** on the instrument. The data labels heading is **Press enter to edit highlighted values**, and the remarks heading is **Mark Reason**.

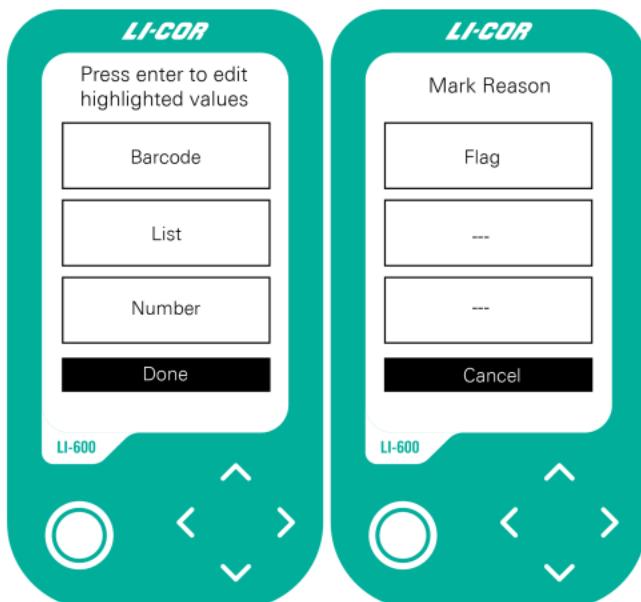


Figure 2-4. Data labels and remarks are selected in the "Press enter to edit highlighted values" and "Mark Reason" screens.

The data label options appear (**Press enter to edit highlighted values**) *after* each measurement if **Prompt on log** is enabled in the configuration. If **Prompt on log** is not enabled, the options are accessed with the right arrow *before* taking a measurement. When accessed and selected manually, data labels and barcodes apply to subsequent measurements until a new label or barcode is selected. **Done** takes you back to Measurements. See *Data Labels* on page 5-5.

Remarks are accessed with the right arrow after logging a measurement (**Mark Reason**). You can select one of up to three remarks in a configuration. **Cancel** takes you back to Measurements. See *Remarks* on page 5-7.

Matching

This screen appears when the RH sensors are matching, and goes to **Measurements** with a beep when matching is

complete. Matching can only be done when the cuvette is empty. If the instrument is clamped onto a leaf when the instrument is matching, the instrument will beep and prompt the user to unclamp the leaf.

Scan Barcode

Scan Barcode prompts you to scan a barcode when a barcode data label is selected and the onboard barcode scanner on the bottom of the instrument is activated. See *Using the barcode scanner* on page 3-7 and *Data Labels* on page 5-5.

Settings

Settings options include Shut Down, Match, Instrument Settings, and Warning(s). Navigate to **Settings** with the left arrow from **Select Configuration**.

- **Shut Down** powers off the LI-600.
- **Match** manually matches the RH sensors; it will beep when complete.
- **Instrument Settings** sets the time or clears all data. The percentage of memory used and the firmware version also appear at the top of the screen.
 - **GPS:** turn on or off. Indicates number of satellites, latitude, longitude, altitude, pitch, roll, and heading. Getting a GPS lock can take several minutes after turning on the instrument.
 - **Set Time:** sync with GPS, or set manually. For instruments with GPS, we recommend always syncing the time with GPS. See *Clocks* on page 9-19.
 - **Clear All Data:** erase all of the data on the instrument.
 - **Back:** go back to Select Configuration.

- **Warning(s)** shows instrument warnings (see *Instrument warnings* on page 7-5).

Info

From **Select Configuration**, navigate to **Info** with the right arrow button. The information lists porometer and fluorometer settings for the active configuration.

Section 3.

Taking Measurements

This section describes precautions, techniques, and processes for taking measurements with the LI-600.

Precautions and techniques

Observe these precautions and practice these techniques before and while taking measurements with the LI-600.

Precautions

To protect the LI-600 when not in use, turn it off and place it in the carrying case. Before using the LI-600, take the following precautions.

- **Charge the battery.** A fully charged battery provides approximately 8 hours of active use. See *Charging considerations* on page 1-4 for charging time.
- **Attach and use the wrist strap.** To protect the LI-600, attach the wrist strap to the instrument and adjust it to your wrist size. Use the wrist strap at all times (or risk being "the person who dropped it").
- **Insert the USB port protector.** To protect the USB port from debris, keep the protector inserted when the instrument is not connected to a computer.
- **Allow the instrument to come to ambient temperature.** If you are moving the instrument to a site with a higher or lower temperature than it is stored in, wait fifteen minutes before taking a measurement so the instrument can acclimate.

Techniques

Following these techniques helps ensure the quality and accuracy of your measurements. The LI-600 can measure the top or the bottom of a leaf.

- **Maintain the original orientation of the leaf.** Do not alter the angle or positioning of the leaf you are measuring. Alterations may affect leaf vascular structure, *PhiPSII*, or Electron Transport Rate (*ETR*).
- **Maintain the light conditions of the leaf.** Do not alter the light on or shade the leaf you are measuring.¹ If, while taking a measurement, you shade the leaf you plan to measure next, unshade the leaf and wait 60 seconds before measuring it. Changes to light at the leaf surface will affect *PhiPSII* and *gsw*.
- **Match the quantum sensor's light conditions to those of the leaf.** If the leaf you measure is in the light, ensure that the quantum sensor is also in the light. If the leaf you measure is in shade, ensure that the quantum sensor is also in the shade. A mismatch between the leaf and the quantum sensor may result in a significant error in *ETR* calculation.
- **Avoid measuring a leaf with water on it.** If the leaf you plan to measure has water or condensation on it, gently and thoroughly dry the top and bottom of the leaf. Measuring a wet leaf may result in overestimation of stomatal conductance, and water ingress into the instrument may cause damage.
- **Avoid clamping onto the veins of the leaf.** The uneven surface may prevent the aperture clamp from properly sealing. If in auto-mode, the instrument may not take

¹This is referred to as a "Madsen Error" within LI-COR.

the measurement. If in manual mode, the logged measurement may be inaccurate.

- **Fully fill the aperture with the leaf.** To get reliable stomatal conductance readings, the chamber must be completely covered and sealed. When using an LI-600 equipped with a fluorometer, fluorescence readings can be taken without filling the aperture.
- **Maintain unblocked vents on the instrument.** Do not cover any of the vents on the instrument when taking measurements.
- **Turn GPS off when not in use.** GPS uses more power when it is searching for satellites. If you're indoors or in an area with poor satellite fix, turn off GPS to save battery power. GPS can be turned off on the instrument by going to Settings (left arrow from Select Configuration), or can be turned off in a configuration by leaving "Use GPS and Leaf Angle" unchecked in the General screen in Configuration Management.

Caution: Do not apply pressure to the aperture clamp to achieve a seal on the leaf. This can warp the aperture clamp, interfere with the instrument's optics, and produce measurement errors.

Taking a measurement

The workflow for taking a measurement on the LI-600 will vary depending on two settings in the active configuration: whether the measurements are taken in **Auto mode** or **Manual mode**, and whether **Prompt on log** is enabled for optional data labels.

Match mode

After selecting a configuration and at intervals specified in the configuration (default is 10 minutes), the instrument

goes into match mode, as indicated on the instrument screen. In match mode, the instrument checks to make sure the RH sensors are reading the same.

When the LI-600 is in match mode, it assumes the cuvette is empty. Because the LI-600 has an open cuvette, the leak percent will be higher than the leak maximum recommended for a good measurement.

If the leak percent is higher than the leak maximum, the LI-600 will activate the match valve, wait 10 seconds, compute the match adjustment, then deactivate the match valve and go to the measurements screen. This is a valved match.

If the leak percent is lower than the leak maximum, the LI-600 will prompt the user to ask if a leaf is in the chamber. If the user answers **yes**, the instrument prompts the user to remove the leaf. If the user answers **no**, the instrument will wait 10 seconds and compute the match adjustment without the valve. This is a serial match.

An LI-600 user may want to use the serial match for leaves that have extremely low conductance, such as houseplants.

To have the LI-600 perform a serial match, clamp onto something flat and non-porous, like aluminum foil or a credit card, before selecting a configuration. When the instrument asks if there is a leaf in the chamber, answer "no" and the LI-600 will perform a serial, valveless match.



*Do not enter match mode with a leaf in the chamber.
Matching with a leaf in the chamber will ruin subsequent
measurements.*

Taking a measurement in Auto Mode

In **Auto Mode**, the LI-600 automatically logs a measurement when the stability criteria set in the configuration are met.

To take a measurement in Auto Mode:

- 1 **Power on** the LI-600.
- 2 **Select a configuration** with Auto mode enabled and press Enter. The instrument will match the RH sensors and go to the Measurement screen. If **Prompt on log** is not enabled and you want to add data labels or scan a barcode, press the right arrow (Prompt) to Data labels (**Press enter to edit highlighted values**). Select a data label, press the Enter button, and choose from the options. If you've enabled the barcode scanner with a data label, follow the steps below for using the barcode scanner. Select Done and press Enter to go back to the Measurement screen.
- 3 At the prompt **Clamp on leaf**, open the aperture with the aperture clamp and close it onto the leaf. The instrument will **Search for stability**, and automatically log the measurement and beep when the stability criteria are met.
- 4 **Unclamp** the leaf. If **Prompt on log** is enabled, the data labels screen will appear. Follow the instructions for data labels in Step 2.
- 5 **Add remark:** after a measurement is taken, you can add an optional remark to the measurement by pressing the right arrow key (Mark). Remarks are set in the computer software when editing or creating a configuration.
- 6 **Press Enter** to initiate a new measurement.
- 7 **Shutdown** the instrument when you are done taking measurements. Press the left arrow key (Home) to go back to the Select Configuration screen, then press it again to go to Settings, and press Enter while Shutdown is highlighted.

Taking a measurement in Manual Mode

In **Manual Mode**, the instrument does not search for stability or automatically log a measurement.

To take a measurement in manual mode:

- 1 **Power on the LI-600.**
- 2 **Select a Configuration** set to Manual mode. Press Enter. The instrument will match the RH sensors and go to the Measurement screen. If **Prompt on Log** is disabled: Press the right arrow (Prompt) to add optional data labels and scan a barcode. Select Done and press the Enter button to return to the measurement screen. (See Step 2 in "Taking a measurement in Auto Mode.")
- 3 **Clamp to leaf:** Watch for stability in the g_{sw} variable.
- 4 **Press the Enter button (Log)** to take the measurement when your stability criteria are met.
- 5 **Unclamp the leaf.**

If "prompt on log" is enabled, the Data labels screen will appear. See step 2 in "Taking a measurement in Auto mode."

- 6 **Add remark (optional):** press the right arrow (Mark) to add a remark. Select the remark and press the Enter button. You will go back to the Measurement screen.
- 7 **Press Enter (New)** to initiate a new measurement, then repeat from step 3 for subsequent measurements.
- 8 **Shutdown** the instrument when you are done taking measurements. Press the left arrow key (Home) to go back to the Select Configuration screen, then press it again to go to Settings, and press Enter while Shutdown is highlighted.

Using the barcode scanner

To enable the barcode scanner for a configuration, see *Data Labels* on page 5-5.

You will scan a barcode either before or after a measurement is logged, depending on whether **Prompt on log** is enabled in the configuration (see *Data Labels* on page 5-5). If it is enabled, you can scan a barcode after each measurement. If it is not enabled, you can scan the barcode before a measurement by pressing the right arrow (Prompt) from the Measurement screen, and then selecting the barcode label. If you scan the barcode before a measurement, that barcode will apply to subsequent measurements until you scan another barcode.

To scan a barcode:

- 1 At the Data labels screen, navigate to the barcode label and press the Enter button. The barcode prompt will appear.
- 2 At the Scan Barcode prompt, pass the red light from the barcode scanner on the bottom of the instrument over the barcode. When it reads the barcode the LI-600 will beep and return to the Data labels screen and display characters from the scanned barcode..

The barcode scanner will time out after a few seconds. If this happens, repeat the process. When finished, navigate to Done and press Enter to return to the Measurement screen.

Viewing measurement data on-screen

Data from the most recent measurement appear on the Measurement screen after taking a measurement, and before pressing the Enter button for a new measurement. For information on configuring the variables shown on the Measurement screen, see *Display Layout* on page 5-9.

Section 4.

Using the computer software

The LI-600 computer software is the interface for managing configurations and data, performing user calibrations, and for generating custom barcodes. The software can be used with or without an LI-600 connected.

Download the software and connect the LI-600

Take the following steps to download the software and connect the LI-600 to your computer.

- 1 Install the computer software, which is downloaded at licor.com/support/LI-600/software.html
- 2 Press and hold the **Enter button** to power on the LI-600.
- 3 Connect the LI-600 with your computer using the micro USB cable.

The LI-600 will automatically connect with the computer software if the computer software and instrument firmware are up to date. If the software and firmware are not up to date, the computer software will prompt you to update.

Connection Overview

Connection Overview is the software startup screen, and shows the firmware and computer software versions. From

here, you can proceed with or without a connected LI-600 or safely eject a connected instrument.

The software may display warning messages. See *Software warning when connecting the LI-600* on page 7-2 and *Software warning when updating the firmware* on page 7-3.

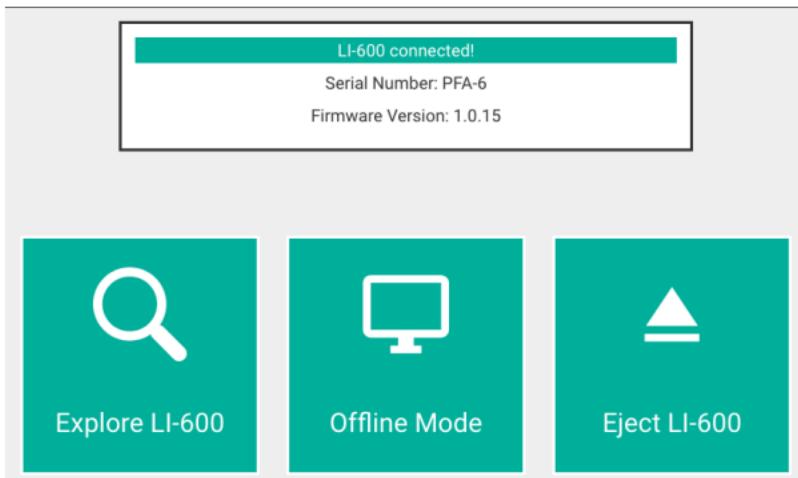


Figure 4-1. Connection overview.

At the Connection Overview screen, you will receive one of two prompts.

LI-600 connected! An LI-600 is powered on and has been discovered by the computer software.

- Select **Explore LI-600** to access Configuration Management, Data Management, Live View, Connection Overview, and Barcode Generator.
- Select **Offline Mode** to access the Configuration Management, Data Management, Connection Overview, and Barcode Generator options that are available without an LI-600 connected.
- Select **Eject LI-600** to safely disconnect and power down the instrument.

No LI-600 detected! Connect the instrument to the computer via USB, then wait for the **LI-600 connected!** prompt to appear, or select **Offline Mode** to proceed without a connected LI-600.

Home screen

When the LI-600 is connected, select **Explore LI-600** to access the Home screen. The Home screen includes a toolbar, a drop-down menu, and tiles for accessing Configuration Management, Data Management, Live View, Connection Overview, and Bar Code Generator.

Toolbar

The Toolbar includes a drop-down menu in the upper left and three buttons in the upper right.

Drop-down menu

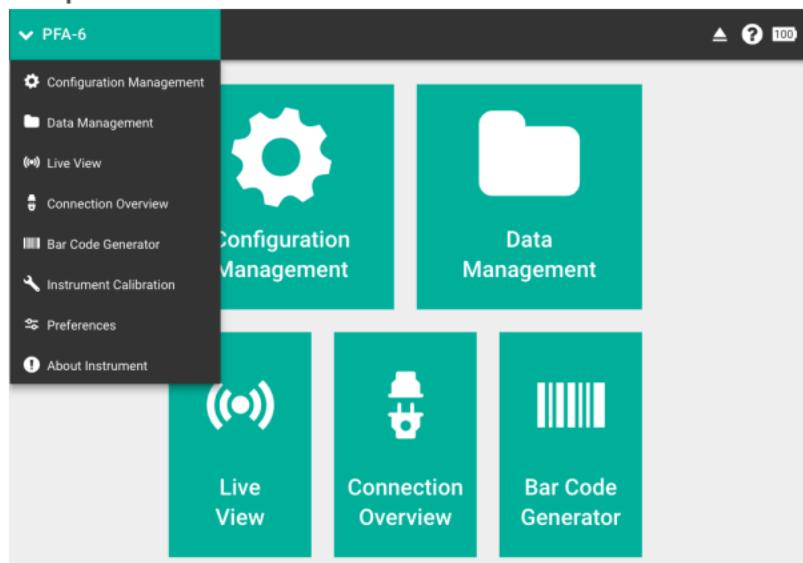


Figure 4-2. The drop-down menu (LI-600 connected).

In addition to Configuration Management, Data Management, Live View, Connection Overview, and Bar Code

Generator, the drop-down menu offers access to the following:

Instrument Calibration shows user calibration coefficients and user-adjustable parameters. Calibration parameters can be adjusted for the relative humidity (RH) sensors, flow sensors, and a fluorescence detector if there is a fluorometer. See *Calibrating the sensors* on page 8-10 and *User calibration procedures* on page 9-10 for instructions.

Factory Calibration appears in the drop-down menu when Allow Factory Calibration is checked in Preferences. Fluorometer, Intensity, Flow In, Flow Out, IRT, RH, and Miscellaneous values can be edited. Perform a factory reset, download a calibrations file from the LI-COR website, or perform a manual reset using a downloaded file. Select RH in the left menu to change the RH sensor serial number and to calibrate.

Preferences: select the text delimiter for data and log files (comma or tab). Check **Allow Factory Calibration** to enable Factory Calibration.

About Instrument displays the instrument serial number, instrument firmware version, instrument time, porometer serial number, fluorometer serial number, and the RH sensor serial number.

Buttons

Table 4-1. Toolbar buttons.



Home: Goes back to the home screen.



Safely Eject Instrument: Safely powers down and ejects the LI-600 from the computer software.

Table 4-1. Toolbar buttons. (...continued)

	View Help: Goes to the LI-COR support website.
	Battery Level: Displays the percent battery charge of the connected instrument.

Configuration Management

When an LI-600 is connected, the Configuration Management menu shows two configuration lists: LI-600 Configurations (those stored on the instrument) and Local Configurations (those stored on the local computer).

LI-600 Configurations

PFA-09876 Configurations				
Slot	Name	Author	Last Updated	ID
1	Manual gsw+F	LI-COR Default	2020-08-13 09:44:48 (05:00)	ba5604f9-55d1-44f7-a3d6-97a8c98990de
2	Auto gsw+F	LI-COR Default	2020-08-13 09:44:25 (05:00)	7204eb68-2d13-470e-adb2-490b43469541
3	Upload Or Drag-And-Drop A Config To This Slot!			
4	Upload Or Drag-And-Drop A Config To This Slot!			

Figure 4-3. Configurations loaded onto the LI-600.

Two configurations come preloaded onto each LI-600: Manual gsw and Auto gsw for the LI-600 Porometer, and Manual gsw+F and Auto gsw+F for the LI-600 Porometer/Fluorometer. They cannot be edited but can be saved as new configurations. If a downloaded configuration has the same name as another, it will be given a randomly generated name (DL-XXX) to avoid a naming conflict. The author name **LI-COR Default** cannot be used for any other configurations.

Table 4-2. Buttons to download and remove configurations from the instrument.

	<i>Download To Computer:</i> Downloads the configuration to Local Configurations. Select Download on the confirmation prompt to finish.
	<i>Remove From Instrument:</i> Removes the configuration from the LI-600. Select Remove on the confirmation prompt to finish.

Local Configurations

Local Configurations						
New	Name	Author	Last Updated ▾	ID		
	Auto gsw	LI-COR Default	2023-07-24 16:12:11 (-05:00)	LICORBIO-PSAC-CONF-FILE-000000000001		
	Manual gsw	LI-COR Default	2023-07-24 16:12:11 (-05:00)	LICORBIO-PSAC-CONF-FILE-000000000002		
	Auto gsw+F	LI-COR Default	2023-07-24 16:12:11 (-05:00)	LICORBIO-PSAC-CONF-FILE-000000000003		
	Manual gsw+F	LI-COR Default	2023-07-24 16:12:11 (-05:00)	LICORBIO-PSAC-CONF-FILE-000000000004		

Figure 4-4. Local configurations.

Local Configurations are the configurations created in the computer software. **New** indicates a configuration that has not been uploaded to an LI-600 since its creation or most recent edit. Double-click on a column heading to sort. Configurations with the same name as another are assigned a randomly generated name to avoid a naming conflict. Configurations can be exported and imported as PSAC files and shared among users.

Table 4-3. Configuration management buttons.

	<i>Create New Configuration:</i> Creates a new configuration and saves it to the Local Configurations list.
	<i>Import Configuration:</i> Imports a configuration PSAC file.

Table 4-3. Configuration management buttons. (...-continued)

Edit Configuration: Edits a configuration locally. Edited configurations must be re-uploaded to the LI-600.



Upload To Instrument: Uploads a configuration to LI-600. To replace a configuration, select **Replace**. Select **Upload** to complete.



Export To File: Exports the configuration as a PSAC file.




Delete Configuration: Removes the configuration from the Local Configurations list.

Data Management

From Data Management, you download data from a connected instrument to the software, and export it to your computer as text and Excel files.

LI-600 data

Data on LI-600 lists the date of the last data download. This section indicates the instrument's serial number and percent of data storage used.

Table 4-4. Data management buttons.

Download Instrument Data: Downloads all processed data on the LI-600 to the computer software. A data dump is also downloaded as a precaution.



Clear Instrument Data: Removes all data from the LI-600.

Local Files

		Local Files		Export Flash Files		
<input type="checkbox"/>	Config Name	Config Author	Date Taken	Porometer	Fluorometer	Downloaded At
<input type="checkbox"/>	Auto gsw+F	LI-COR Default	2020-08-14	PSA-00101	PSF-00101	2020-08-18 12:38:32 (-05:00)
Number of Observations: 2 Flash Files: 2 Configuration Last Updated: 2020-08-11 15:04:19 (-05:00) Firmware Version: 1.0.0 RH Sensor Serial Number: RHS-00101						

Figure 4-5. Local data files.

Local Files lists data and metadata stored in the computer software. You can sort the files by column and toggle the metadata view.

Exporting files

The two check boxes and icons in the upper right give you options for exporting Excel files with embedded equations and fluorometer flash files. The two icons above the check boxes are for exploring and importing data dumps (see *Data dumps* on page 6-2).

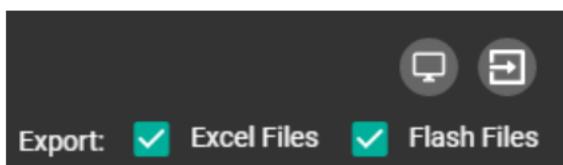


Figure 4-6. Export checkboxes and data dump icons.

Data files are managed and exported using the buttons listed in the table below.

Table 4-5. Data file buttons.

	<i>Export Selected Files:</i> Downloads the selected data files to the computer's local file system.
	<i>Toggle Selected Metadata:</i> Shows or hides selected metadata for the selected file.

Table 4-5. Data file buttons. (...continued)

Delete Selected Files: Removes the selected data files from the Local Files.

Live View

Live View streams data from a connected LI-600 and is useful for educational settings. Live data for each selected variable in graph format are displayed, allowing you to view and log data while taking measurements.

**Figure 4-7.** Live view.

To set up your parameters, select a layout from the top of the screen. Navigate through the five variable screens by selecting one of the five squares or by using the arrows. Drag and drop the desired variables into graph boxes; not all boxes need to be filled. Select **CLEAR ALL** to remove all variables and reset the graph boxes.

If the screen does not adequately display units, select the graph titles to toggle between chart title and units.

Table 4-6. Edit and remove variables buttons.

Edit a variable's YMin, YMax, and XSize.



Remove deletes a variable from the graph box.

When taking a measurement, data will appear in real time in the graph boxes. Using the connected LI-600, match and allow the graphs to stabilize, then take a measurement. Measurement data will appear on the computer screen and any additional connected screen.

Select **Log** in the upper right corner to save the last sixty minutes of data on a per-second basis to the local computer; measurement data can also be downloaded from the LI-600 in the Data Management menu at any given time. If you navigate away from the Live View menu, sixty minutes of live data are automatically saved.

Connection Overview

Connection Overview returns to the computer software startup screen.

Offline Mode

Offline Mode can be accessed with or without a connected LI-600.

When you launch the software without an instrument connected, you go to the Connection Overview screen, where you choose the instrument you're working with.

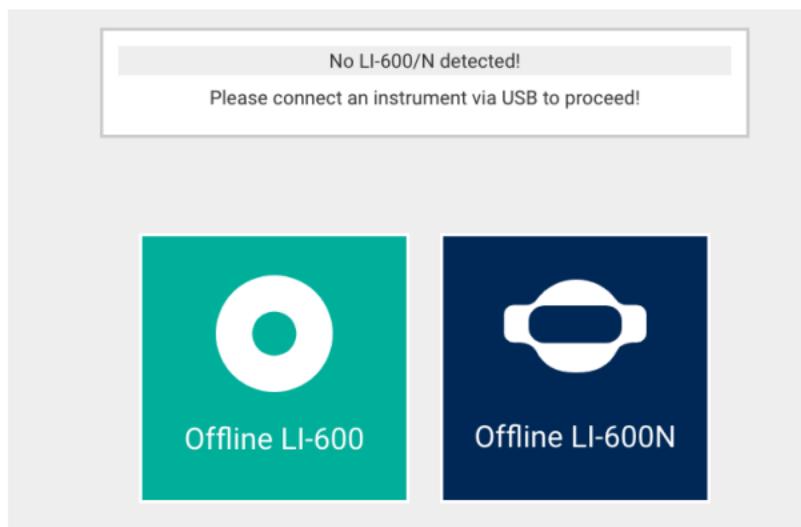


Figure 4-8. The Connection Overview screen in offline mode.

After you select an instrument, you're taken to the Offline Mode Home screen. The drop-down menu includes access to Configuration Management, Data Management, Connection Overview, Barcode Generator, and Preferences. If you have both an LI-600 and an LI-600N and want to switch instruments, go back to Connection Overview.

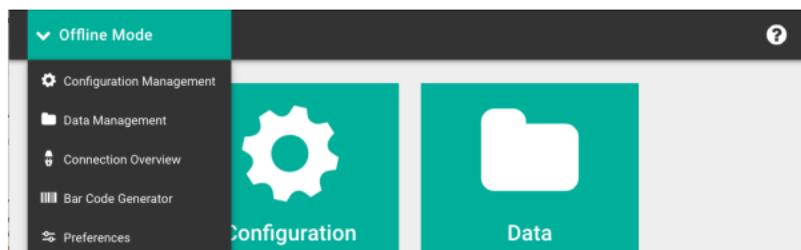


Figure 4-9. Offline Mode drop-down menu.

When an LI-600 or LI-600N is not connected to the software, you can create and edit configurations locally, manage data that's been downloaded from the instrument, manage preferences, and create barcodes. The functionality of these features is the same as when an instrument is con-

nected, with the exceptions of not being able to upload configurations, download data, or view live measurements.

Barcode generator

The LI-600 computer software can generate custom bar-codes for use with the LI-600 barcode scanner.

From the home screen of the LI-600 computer software, select **Bar Code Generator**.

Barcode generator screen

The barcode generator screen includes options for barcode format, importing and pasting text, and the barcodes text area.

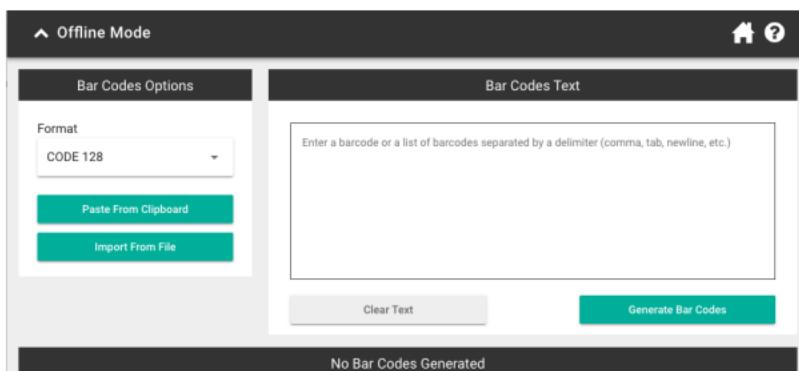


Figure 4-10. The barcode generator screen.

Barcodes Text: Type, paste, or import delimited text into this field. Each barcode is limited to 31 characters.

Format: Choose from CODE128 or QR CODE.

Code 128



QR Code



PASTE FROM CLIPBOARD: Paste delimited text that has been copied onto your computer's clipboard.

IMPORT FROM FILE: Select a delimited text file from your computer and import it to the Barcodes Text field.

CLEAR TEXT: Clear the contents of the Barcodes Text field.

GENERATE BARCODES: Generate barcodes from the text field and displays them in the bottom portion of the window. The length of the text determines the width of the barcode.



PRINT PREVIEW: View the barcodes with text as they will appear on a printed page.



REMOVE ALL: Clear the generated barcodes.

You can continue to add barcodes in either format until you're ready to print or save them as a PDF.

Once generated, barcodes can be edited or removed individually by using the icons in the upper right corner.


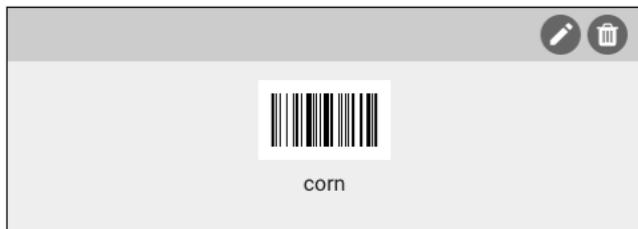


Figure 4-11. An editable barcode.

Print preview screen

The **Print Preview** screen displays barcodes as they will appear on a page, with options for paper size and page template.

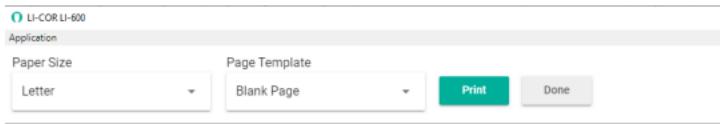

corn

Figure 4-12. The Print Preview screen.

Paper Size: U.S. Letter (8.5 x 11") or A4 (8.25 x 11.75")

Page Template: Blank page: plain paper; U.S. Letter: Avery 5163 labels 10 per page; A4: Avery L7992 labels 10 per page.

Print: Print or save as a PDF.

Done: Go back to the barcode generator screen.

When used with the LI-600 barcode scanner, the barcode text for each measurement appears in the **USERDEF** group in LI-600 data files.

Section 5.

Configurations

The LI-600 Porometer/Fluorometer comes with default configurations preloaded: auto and manual modes for the porometer-only, and auto and manual modes for the porometer/fluorometer. Configurations are uploaded to the instrument from the computer software (see *Configuration Management* on page 4-5).

Auto gsw	LI-COR Default	2022-01-06 09:35:20 (-06:00)	LICORBIO-PSAC-CONF-FILE-000000000001	 
Manual gsw	LI-COR Default	2022-01-06 09:35:20 (-06:00)	LICORBIO-PSAC-CONF-FILE-000000000002	 
Auto gsw+F	LI-COR Default	2022-01-06 09:35:20 (-06:00)	LICORBIO-PSAC-CONF-FILE-000000000003	 
Manual gsw+F	LI-COR Default	2022-01-06 09:35:20 (-06:00)	LICORBIO-PSAC-CONF-FILE-000000000004	 

Figure 5-1. Default configurations on the LI-600.

Configuration settings

Configurations include settings for auto or manual mode, porometer and fluorometer options, measurement settings, data labels, remarks, and the instrument display layout.

General

General settings specify the name and author of the configuration, and the fluorometer and GPS/leaf angle options. If the fluorometer option is unchecked, the settings for the fluorometer will be hidden.

Data Labels

Data Labels are user-specified labels that can be applied to each measurement, for example genotype, plot number, or replicate. A label can be formatted as a number, list, or barcode. A configuration can have up to three labels, and at least one label must be a barcode to enable the barcode scanner on the instrument.

Automode Setup

Automode Setup enables or disables Auto Mode measurements on the instrument (see *Taking a measurement in Auto Mode* on page 3-5) and *Taking a measurement in Manual Mode* on page 3-6). Auto Mode automatically monitors stability criteria.

When **Auto Mode** is enabled, the LI-600 determines when to log a data point. It computes stability criteria and compares it to the settings. Once two consecutive data points are below the set threshold, the measurement is considered stable, and the LI-600 logs the data point. This is based on monitoring changes over time (in seconds) to both the computed stomatal conductance (*gsw*) and/or the de-modulated fluorescence signal (*F*).

When **Auto Mode** is not enabled, the instrument is in **Manual Mode**, and a measurement is logged by pressing the **Enter button** when the user observes that stability criteria are met.

Remarks

Remarks are optional comments that can be added to each measurement. You can create up to three remarks; one of those remarks can be applied to each measurement.

Remarks are selected on the instrument when a user

chooses to mark a record after taking a measurement. See *Taking a measurement* on page 3-3.

Measurement Settings

Measurement Settings control the following aspects of measurements taken with the LI-600. If the fluorometer option is not available, the fluorometer measurement settings are not included in the configuration.

Flow is the flow rate generated by the pump to the leaf aperture: Low (75), Medium (115), or High (150).

Match Frequency indicates how often a match of the RH sensors is triggered, specified in minutes. The default is 10 minutes.

Flash indicates whether the measurements are light or dark adapted, type of flash, flash intensity, and flash length in milliseconds.

Fluorescence Constants are Leaf Absorptance (*abs*) and Fraction Abs PSII (*PS2/1*).

Modulation (*modrate*) is the modulation rate of the LEDs used to take the fluorescence measurement. The input Actinic Modulation Rate in Hz is shown with the automatically calculated Integrated Modulation Intensity.

Display Layout

Display Layout determines the layout of the instrument display. The options include a 2- or 8-panel layout that displays selected variables after a measurement is taken.

Creating custom configurations

Custom configurations can be created in the LI-600 computer software with or without an LI-600 connected.

Go to **Configuration Management** from the drop-down menu in the upper left. At **Local Configurations**, use the green plus icon to **Create New Configuration**. You can also open a default configuration and save it as a new one.

General

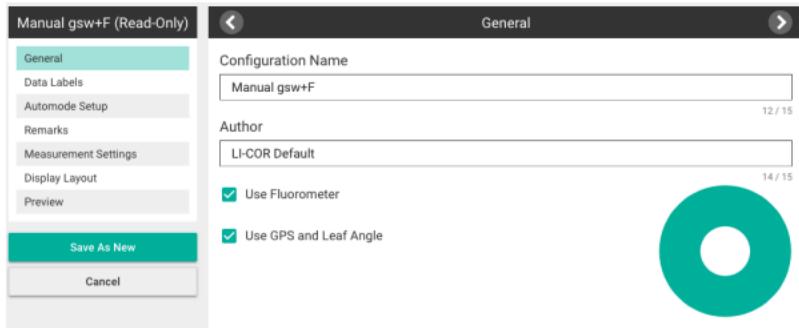


Figure 5-2. The General screen.

In **General**, add a **Configuration Name** and an **Author**. For the LI-600 with a fluorometer, check **Use Fluorometer**; fluorometer options are hidden if unchecked. For the LI-600 with leaf angle and GPS capability, check **Use GPS and Leaf Angle**.

Data Labels

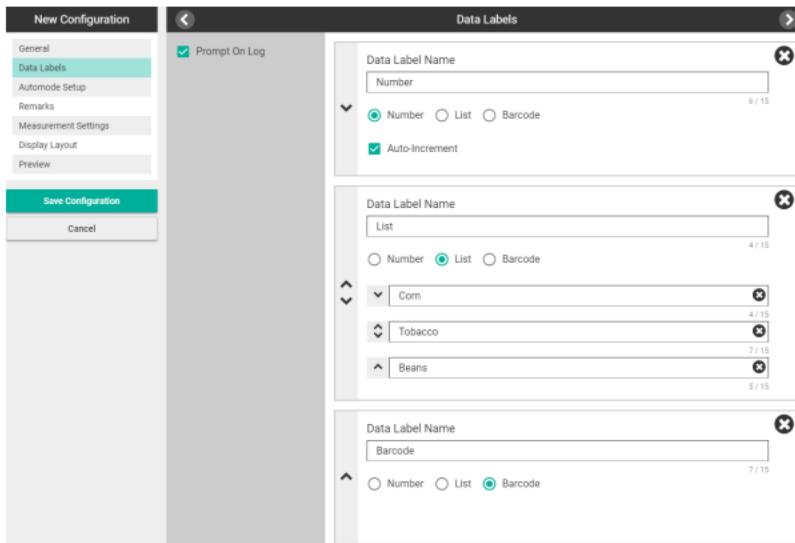


Figure 5-3. The Data Labels screen.

In **Data Labels**, you can create labels using a number, list, or barcode format. One label must be a barcode to enable the barcode scanner. Each configuration can have up to three labels.

Check **Prompt On Log** if you want to set a data label after taking each measurement. If **Prompt On Log** is not checked, you set data label values prior to taking a measurement.

Enabling **Prompt On Log** is useful when measuring a variety of leaves that require individual labeling, for example, when screening different genotypes.

When **Prompt On Log** is unchecked, each label selected prior to taking a measurement will apply to subsequent measurements until a new label is chosen.

Select **New Data Label**. Add a Data Label Name, then select Number, List, or Barcode.

Number: Check the Auto-Increment box for automatic numbering.

List: Add up to three selections with the plus button; drag and drop them to change their order.

Barcode: Enable the barcode scanner.

Automode Setup

In **Automode Setup**, select Automode, *gsw*, and/or *F* (fluorometer).

Select Automode to access the *gsw* and *F* variable options. At least one variable must be selected to enable Auto Mode.

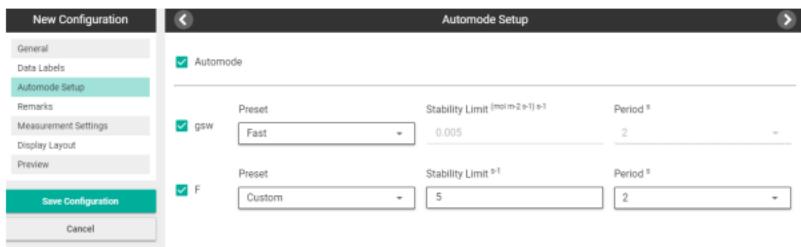


Figure 5-4. Automode Setup screen.

Then select the variables (*gsw*, *F*, or both), then a Preset (Fast, Medium, or Custom). If selecting Fast or Medium: the Stability Limit (*gsw*-specific option), Slope Limit (*F*-specific option), and Period over which to calculate the change are automatically determined. If selecting Custom, you can set Stability Limit, Slope Limit, and Period (1, 2, or 4 seconds). (See *Table 5-1* below.)

Table 5-1. Automode Setup variable options.

Preset	Stability Limit (<i>gsw</i>)	Slope Limit (<i>F</i>)	Period (s)
Fast	0.005	5	2
Medium	0.001	1	2
Custom	user specified	user specified	1, 2, or 4

To set the instrument to **Manual** mode, uncheck **Autemode**. In manual mode, you set the display to view the F and g_{sw} slopes and decide when to log the data by observing those variables on the instrument display (see *Display Layout* on page 5-9).

Remarks

Remarks are optional comments (e.g. Poor Clamp or Chlorotic Leaf) that can be added to a measurement to help exclude outlier data during analysis. Select **Add Remark** and add text. You can create up to three remarks to choose from.

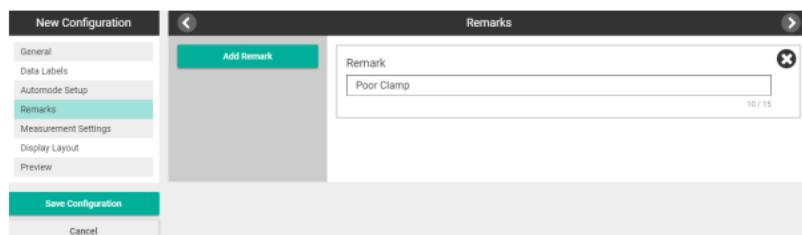


Figure 5-5. Remarks setup screen.

Measurement Settings

In **Measurement Settings**, you can select values for Flow Rate and Match Frequency for the porometer, and Flash, Fluorescence Constants, and Modulation values for the fluorometer.

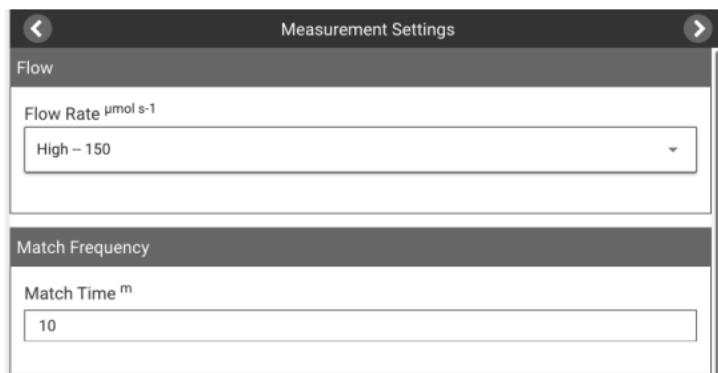


Figure 5-6. Flow Rate and Match Frequency settings.

High flow is recommended for most applications to provide the fastest measurement speed with no observed reduction in sensitivity.

Match frequency determines how often the instrument will automatically match. Enter the interval in minutes.

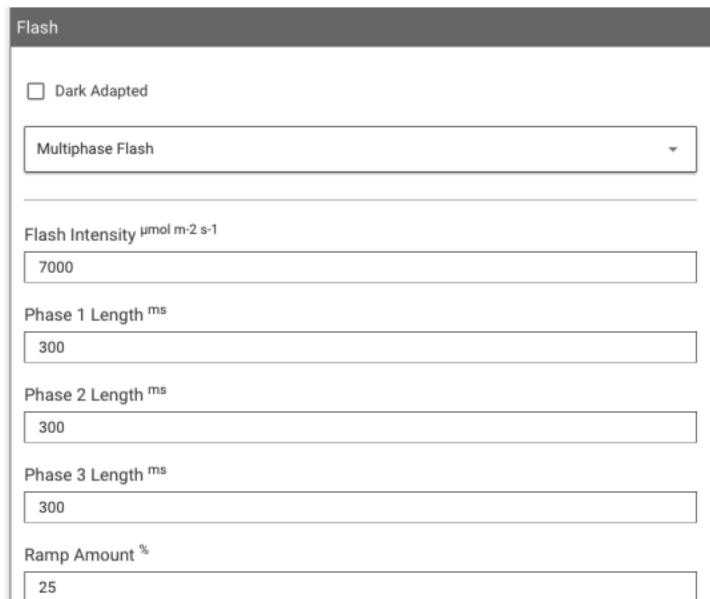


Figure 5-7. Flash settings.

Flash sets the fluorometer flash to light (default) or dark adapted, whether the flash will be rectangular or

multiphase (light-adapted measurements), and sets flash intensity and flash length.

If the **Dark Adapted** box is checked or the **Rectangular** or **Multiphase Flash** options are selected, values in Flash and Modulation automatically set to default.

Fluorescence Constants	
Leaf Absorptance	0.8
Fraction Abs PSII	0.5
Modulation	
Actinic Modulation Rate Hz	500
Integrated Modulation Intensity	6.670000 μmol m⁻² s⁻¹

Calculated as Transmission * 0.01334 * Actinic Modulation Rate

Figure 5-8. Fluorescence Constants and Modulation.

Fluorescence Constants include Leaf Absorptance and Fraction Abs PSII.

Modulation inputs the Actinic Modulation Rate. Integrated Modulation Intensity is automatically calculated.

Display Layout

In **Display Layout**, you can customize the layout and variables that are visible on the LI-600 Measurement screen.

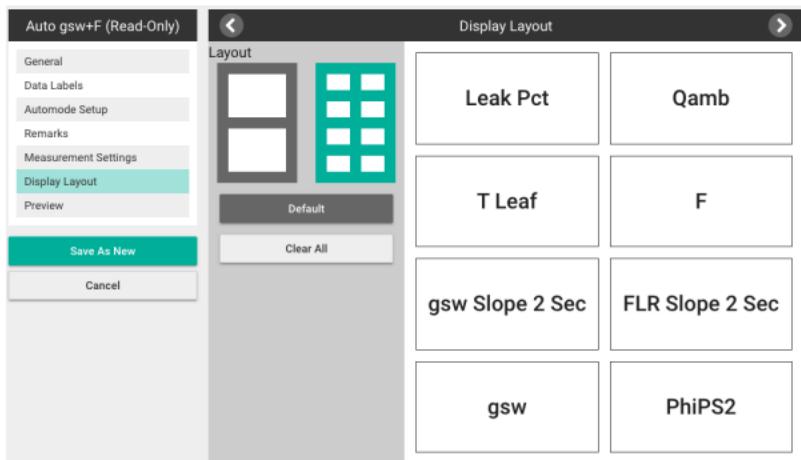


Figure 5-9. The Display Layout. Select a 2- or 8-panel layout for the Measurement screen.

To change variables, click into the variable box then select a variable from the list. Select **CLEAR** to leave a variable box blank, **Clear All** to remove all variables, and **Default** to reset the layout.

All variables are recorded in the data files; this setting only indicates the variables seen in the display.

Preview

In **Preview**, you can view a simulation of the Measurement and Data labels screens.

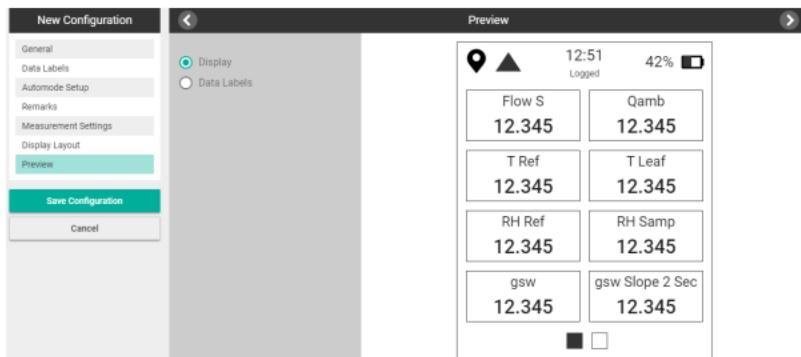


Figure 5-10. Display preview.

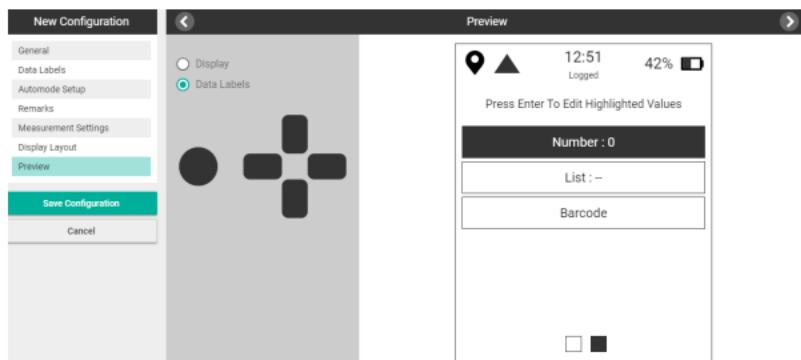


Figure 5-11. Preview of data labels.

Save Configuration

Select **Save Configuration** to save the configuration.

Upload configuration to instrument

If your instrument is not connected, go to **Connection Overview** from the drop-down menu and connect it. Once connected, select the **Upload** button under Local Configurations to add it to the LI-600. Up to four configurations can be loaded onto the instrument at a time.

Section 6.

Data files

Getting data from the LI-600 onto your computer for use in a spreadsheet application is done in two steps: download the data from the instrument to the software, then export it from the software to your computer.

Downloading data from the LI-600

To download data from the LI-600 to the computer software, launch the LI-600 software and connect the instrument. Select **Data Management**.



Under **Data** on LI-600, select **Download Instrument Data** then **Download** on the prompt.

All data on the LI-600 will be downloaded to the computer software.


Clear on the confirmation prompt to clear all data from the instrument or **Cancel**. Clearing removes all data from the LI-600, not from the computer software.

It is a good practice to clear the data from the instrument after it is downloaded to the software. Otherwise, new measurement data are appended to existing data, which are then downloaded again.

Exporting data files from the computer software

To export data files from the computer software to your computer file system, select files to download under Local Files. Check the box next to **Flash Files** to save the fluorometer files with the data file.¹ To export Excel files with embedded equations, check the box next to **Excel Files**.


The delimiter for data files is set in the software preferences from the dropdown menu, and is comma-delimited by default. Tab-delimited files are for users in locations where the comma is used as a decimal separator.



Select **Toggle Selected Metadata** to view a data file's metadata. Metadata is also recorded in the exported data file for each measurement.



Select **Export Selected Files** to save the selected data files to the computer's local file system.



Select **Delete** to delete the data from the software after exporting it. This will not delete the exported files.

All data files are saved as .zip files that contain text files in .csv or .txt format, as well as optional Excel files with embedded equations and flash files. When unzipped, the files are in directories organized by configuration and date.

Data dumps

Data dump files are data that have been unsuccessfully imported to the software. These are useful in the event of

¹For information about software that can help with flash file analysis, see *FlashAnalysis App* on page A-1.

download errors. They are stored in the following locations:

Windows OS

C:/Users/Username/AppData/Roaming/licor-li600/data_dump

To view this hidden folder, type **%AppData%** into the Windows search bar and press **Enter**.

MacOS

Macintosh HD/Users/Username/Library/Application Support/licor-li600/data_dump

You can access and import data dump files from Data Management in the LI-600 Software (see *Data Management* on page 4-7).

Data file structure

After a data file is exported from the computer software as a tab-delimited or comma-delimited text file, it can be imported into a spreadsheet application. Data are organized into groups as indicated in the first row. The second row contains the data label, and the third row contains additional information such as unit, format, or equation.

The fluorometer, leaf angle, and GPS groups will be absent from the data files of previous LI-600 models without those features.

Groups, variables and units

To view a variable's unit of measure or format, see the third row of the data table as imported into a spreadsheet application. The example below shows information in the fluorometer configuration group.

FL_CONFIG	FL_CONFIG	FL_CONFIG	FL_CONFIG	FL_CONFIG
flash_intensity	modrate	flr_limit	flr_period	P1_dur
umol+1m-2s-1	Hz	s-1	s	ms

Figure 6-1. Variables and units in the fluorometer configuration group.

Groups, labels and descriptions

Following is a list of groups and labels in each data file, and the description for each label. See *Flash files* on page 6-11 for information on flash files. The tables are organized as follows.

Group	
label	Description

System

The System group consists of five parameters for each measurement. *Time* and *Date* are set manually in **Settings** or synced from GPS (recommended) on the device. See *Settings* on page 2-6 and *Clocks* on page 9-19.

SYS	
Obs#	Observation/record number
Time	Time of observation: HHMMSS
Date	YYYYMMDD
configName	Configuration name
configAuthor	Configuration author

User Defined

The User Defined group contains the remarks and labels created in **Configuration Management** in the computer software. See *Remarks* on page 5-7 and *Data Labels* on page 5-5 for configuring them. See *Taking a measurement* on page 3-3 for adding them to measurements. At least

one label must be formatted as a barcode to enable the barcode scanner.

USERDEF

<i>remark</i>	Mark reason -alphanumeric
<i>barcode</i>	Label 1 barcode, list, or number
	Label 2 barcode, list, or number
	Label 3 barcode, list, or number

Porometry

The Porometry Group contains the data collected from the LI-600 porometer.

PORO

<i>gsw</i>	Stomatal conductance
<i>gbw</i>	One-sided boundary layer conductance
<i>gtw</i>	Total conductance
<i>E_apparent</i>	Transpiration
<i>VPcham</i>	Chamber vapor pressure
<i>VPref</i>	Reference vapor pressure
<i>VPrefleaf</i>	Leaf vapor pressure
<i>VPDleaf</i>	Vapor pressure deficit
<i>H2O_r</i>	Reference H ₂ O mole fraction
<i>H2O_s</i>	Chamber H ₂ O mole fraction
<i>H2O_leaf</i>	Leaf H ₂ O mole fraction
<i>leaf_area</i>	Leaf area in cm ²
<i>leaf_width</i>	Leaf width in mm

Fluorometry

The Fluorometry Group contains the data collected from the LI-600 Fluorometer.

FLUORO

<i>flashID</i>	Flash file ID
<i>Fo</i>	Minimum fluorescence in dark
<i>Fm</i>	Maximum fluorescence in dark

FLUORO

F_v/F_m	Quantum efficiency in dark
F_s	Minimum fluorescence in light
F_m'	Maximum fluorescence in light
Φ_{PS2}	Quantum efficiency in light
$PS2/1$	Ratio of PSII to PSII absorptance
abs	Leaf light absorptance
ETR	Electron transport rate
$TRANS$	Transmission factor

Sensor

The Sensor group contains the values recorded by the relative humidity, temperature, flow, pressure, and PAR sensors as well as the battery voltage. The output in the SENSOR group is calculated from the SENSOR_V and calibration coefficients determined at the factory.

SENSOR

rh_s	Sample relative humidity
rh_r	Reference relative humidity
T_{ref}	Block reference temperature
T_{meas}	IRT leaf (sample) temperature
T_{leaf}	Calculated leaf temperature
P_{atm}	Atmospheric pressure
$flow$	Flow rate to cuvette
$flow_s$	Exhaust flow leaving cuvette
$leak_pct$	Flow percent leak
Q_{amb}	Ambient light
$batt$	Battery voltage

Leaf angle

The leaf angle group contains measurements from the magnetometer, accelerometer, GPS, and calculated variables. See *Leaf angle and GPS* on page 9-15. This group will

not be included in data files from instruments without an accelerometer/magnetometer.

LEAF_ANGLE

<i>pitch</i>	Slope from horizontal
<i>roll</i>	Rotation from horizontal
<i>heading</i>	Rotation from North
<i>angle_inc_leaf</i>	Angle of incidence between the leaf and the sun
<i>direct_pct</i>	Proportion of direct irradiance incident on leaf
<i>slope_leaf</i>	Leaf inclination from horizontal
<i>az_leaf</i>	Leaf rotation from south
<i>dec_solar</i>	Angular position of sun with respect to equator
<i>az_solar</i>	Solar rotation
<i>zenith_solar</i>	Solar zenith angle

GPS

The GPS group contains the GPS coordinates, altitude, number of satellites, and horizontal dilution of precision. For important information about GPS time, see *Clocks* on page 9-19. This group will not be included in data files from instruments without a GPS receiver.

GPS

<i>gps_time</i>	YYYYMMDD
<i>gps_date</i>	HHMMSS
<i>latitude</i>	Latitude
<i>longitude</i>	Longitude
<i>altitude</i>	Altitude (meters)
<i>gps_sats</i>	Number of GPS satellites
<i>gps_HDOP</i>	GPS horizontal dilution of precision

Match

The Match group records the time and date of the RH sensor matching and the sensor correction. See *Measurement Settings* on page 5-7, and *Taking a measurement* on page 3-3

MATCH

<i>match_time</i>	Match time
<i>match_date</i>	Match date
<i>rh_adj</i>	Relative humidity sensor correction
<i>type</i>	Valved (0) or serial (1) match

Stability

The Stability group records the measurement stability of stomatal conductance (*gsw*), slope, and fluorescence (*flr*) at 1, 2, and 4 seconds. See *Taking a measurement* on page 3-3, step 6.

STABILITY

<i>gsw1sec</i>	Stomatal conductance at 1 sec
<i>gsw2sec</i>	Stomatal conductance at 2 sec
<i>gsw4sec</i>	Stomatal conductance at 4 sec
<i>flr1sec</i>	Slope and fluorescence at 1 sec
<i>flr2sec</i>	Slope and fluorescence at 2 sec
<i>flr4sec</i>	Slope and fluorescence at 4 sec

Porometer configuration

See *Measurement Settings* on page 5-3.

P_CONFIG

<i>auto</i>	Auto mode (0 for LI-600N)
<i>flow_set</i>	Flow set point
<i>gsw_limit</i>	g_{sw} slope limit
<i>gsw_period</i>	g_{sw} period
<i>aw</i>	Area to width conversion factor
<i>Bla</i>	Boundary layer coefficient a
<i>Blb</i>	Boundary layer coefficient b
<i>Blc</i>	Boundary layer coefficient c
<i>Bld</i>	Boundary layer coefficient d
<i>Ble</i>	Boundary layer coefficient e
<i>chamber</i>	Standard (0) or Needle (1)

Fluorometer configuration

See *Measurement Settings* on page 5-3.

FL_CONFIG	
<i>dark</i>	Dark adapted or not
<i>flash_type</i>	Flash type
<i>flash_intensity</i>	Flash intensity
<i>moderate</i>	Modulation rate
<i>flr_limit</i>	Flr slope limit
<i>flr_period</i>	Flr period
<i>P1_dur</i>	MPF phase 1 duration
<i>P2_dur</i>	MPF phase 2 duration
<i>P3_dur</i>	MPF phase 3 duration
<i>P1_Fmax</i>	Phase 1 maximum fluorescence
<i>P2_ramp</i>	Phase 2 ramp depth
<i>P2_slp</i>	Phase 2 regression slope
<i>P3_Fmax</i>	Phase 3 maximum fluorescence
<i>P3_Pred</i>	Phase 3 predicted fluorescence
<i>P3_DeltaF</i>	Phase 3 measured–phase 3 predicted

Sensor voltage

The Sensor Voltage group reports the voltage for each of the sensors. The output in the SENSOR group is calculated from the SENSOR_V values and calibration coefficients determined at the factory.

SENSOR_V	
<i>v_humA</i>	Reference RH sensor (poro)
<i>v_humB</i>	Sample RH sensor (poro)
<i>v_flowIn</i>	Inlet flow sensor (poro)
<i>v_flowOut</i>	Outlet flow sensor (poro)
<i>v_temp</i>	Thermistor (poro)
<i>v_irt</i>	IRT target temperature (poro)
<i>v_pres</i>	Pressure sensor (poro)
<i>v_par</i>	Quantum sensor (poro)
<i>v_F</i>	De-modulated fluorescence (fluoro)

SENSOR_V

<i>i_LED</i>	LED current (optional) (fluoro)
--------------	---------------------------------

User calibrations

See *Calibrating the sensors* on page 8-10, and *Drop-down menu* on page 4-3.

USERCAL

<i>b_rhr</i>	Ref RH sensor zero intercept (poro)
<i>m_rhr</i>	Ref RH sensor slope (poro)
<i>span_rhr</i>	Ref RH sensor span (poro)
<i>b_rhs</i>	Sam RH sensor zero intercept (poro)
<i>m_rhs</i>	Sam RH sensor zero slope (poro)
<i>span_rhs</i>	Sam RH sensor span (poro)
<i>z_flowIn</i>	Flow in zero (poro)
<i>z_flowOut</i>	Flow out zero (poro)
<i>z_quantum</i>	Quantum sensor zero (poro)
<i>z_flr</i>	Fluor zero (optional) (fluor)

Metadata

The metadata for each measurement includes instrument and sensor serial numbers, embedded firmware version, and when the configuration was last updated. Metadata for each data file can be viewed in the LI-600 computer software. See *Local Files* on page 4-8.

META

<i>flashId</i>	Flash ID (fluoro)
<i>lciSerNum</i>	Instrument serial#
<i>lcpSerNum</i>	Porometer serial#
<i>lcfSerNum</i>	Fluorometer serial#
<i>lcrhSerNum</i>	RH sensor serial number
<i>version</i>	Embedded version
<i>configUpdatedAt</i>	Configuration update date

Flash files

Flash files are fluorometer data files. If a data file contains fluorometer measurements, a flash file for each measurement is downloaded and included in the .zip file exported from the computer software. See *Measurement Settings* on page 5-3.

Flash Files	
<i>flashId</i>	Flash file ID
<i>time</i>	HHMMSS
<i>date</i>	YYYYMMDD
<i>lciSerialNumber</i>	Instrument serial#
<i>lcpSerialNumber</i>	Porometer serial#
<i>lcfSerialNumber</i>	Fluorometer serial#
<i>Fm</i>	Fm
<i>Fo</i>	Fo
<i>Fv/Fm</i>	Fv/Fm
<i>Fm'</i>	Fm'
<i>Fs</i>	Fs
<i>PhiPS2</i>	Φ_{PSII}
<i>LightIntensity</i>	Light intensity

Section 7.

Troubleshooting

This section describes how to identify possible issues with the LI-600 and any warnings that may appear on the instrument display. If you cannot find a solution in this section, contact your local distributor or LI-COR support (see *Support* on page 1-4).

Instrument issues

This section describes the potential issues with the LI-600 and how to address them.

Instrument will not power on

If the instrument will not power, ensure that your battery is charged and the power supply is adequate when charging; the power supply needs to source at least 1 Amp at 5 VDC.

Ensure that your cable and battery are functioning properly (see *Removing and inserting a battery* on page 8-6).

Instrument will not seal on a leaf

If the instrument will not seal on a leaf when taking a measurement, re-clamp on the leaf while avoiding the veins. If there is debris in the aperture clamp or leaf gasket, carefully remove it with a foam swab then re-clamp.

Caution: Do not apply pressure to the aperture clamp to achieve a seal on the leaf. This can warp the aperture clamp, interfere with the instrument's optics, and produce measurement errors.

Instrument will not automatically log a measurement

If the instrument will not automatically log a measurement, check that Auto Mode is enabled for the given configuration (see *Autemode Setup* on page 5-2).

Ensure that the instrument is properly sealing on a leaf.

Ensure that stability criteria are adequate for your measurement. See *Stability criteria* on page 9-9.

The display layout is blank

A blank layout will appear on the display if no variables are selected in the configuration. A measurement can still be taken if the display layout is blank. The user selects variables for the display layout in configuration management in the software (see *Display Layout* on page 5-9).

A blank layout will appear on the display if a configuration was removed from the instrument before exiting a corresponding menu. Upload the configuration using the computer software then select it on the instrument.

A completely blank display (without time, battery percentage, or other indicators) indicates a problem with the display itself.

Software warning when connecting the LI-600

If the computer software displays a warning message when connecting the LI-600, the firmware version or computer

software version may require updates.

Your application software is currently at version 1.0.0...
An update to version 1.1.0 exists!
CLICK HERE to download!

Figure 7-1. A software update is available..

Your application software is currently at version...": An updated version of the LI-600 computer software is available for download. **CLICK HERE to download!** to update the computer software and proceed to *LI-600 connected!*.

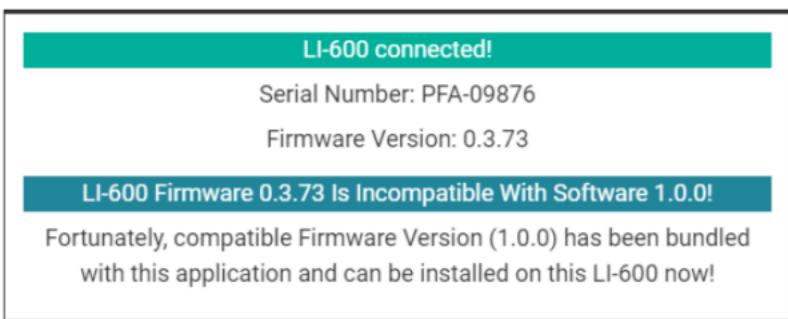


Figure 7-2. A firmware update is available.

LI-600 Firmware Is Incompatible With Software!: An LI-600 is powered on and has been discovered by the computer software via USB, but the instrument firmware is incompatible with the computer software. Select **Install Bundled Firmware** to update the firmware and proceed to the *LI-600 connected!* screen. Select **Offline Mode** to access the Configuration Management, Data Management, and Connection Overview menus without updating the firmware.

Software warning when updating the firmware

If you get a warning message when updating the firmware, the instrument may have been disconnected while updating the firmware.

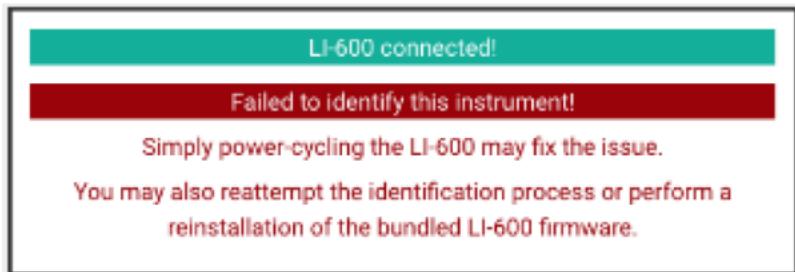


Figure 7-3. Failed to identify this instrument!

An LI-600 is powered on and has been discovered by the computer via USB, but it was disconnected while updating the firmware. Power cycle the LI-600 by turning it off and on, then **Reattempt Identification**, or reinstall the firmware. Check the USB cable and connection.

The new RH sensor serial number has not updated
If the new RH sensor has not updated, it may have been installed without updating the serial number. The RH sensor serial number does not automatically update and must be updated in the computer software to obtain the correct calibration information.

If a new RH sensor is installed without updating the serial number, the LI-600 will continue logging data using the previous RH sensor serial number. Ensure that the new RH sensor serial number has been updated in the computer software(see *Changing the RH sensors serial number* on page 8-20).

The RH values and sample RH are high

If the RH values on the display are 95% or above, water may have entered the cuvette (see *Cleaning the LI-600* on page 8-1). If the sample RH (RH Sample) value on the display is 95% or above, clamp onto a stable object, such as a piece of printer paper, and flush the instrument's system

until the sample RH value drops to match the reference RH (RH Ref).

Instrument warnings

This section describes the warnings that can appear on the LI-600 display and how to address them.



Instrument warnings will appear with this symbol on the instrument display.

To determine the warning type, open **Instrument Settings** by pressing the left arrow from the Select Configuration screen, then select **Warnings**.

Matching. Do not clamp on leaf.

Matching happens automatically when the LI-600 is powered on, and when you select Match on the Instrument Settings screen. Always allow the instrument to match before clamping onto a leaf.

Low memory

The Low Memory warning appears when there is less than 10% of data storage space remaining. Stop using the instrument; download the data, then clear all data from the instrument.

Low battery

The Low Battery warning appears when there is less than 10% of battery charge remaining. Stop using the instrument and charge the battery.

Blower off

The Blower Off warning appears when the blower is off. To turn the blower on, power on the LI-600 and select a configuration; the blower should automatically turn on.

If the warning persists, power on the LI-600 then connect it to a computer via USB. Open the computer software. From the drop down menu select Instrument Calibration. Select and begin any of the four calibrations then **Turn Blower On**.

Pump

The Pump warning appears when the Flow In sensor is < 90% of the flow set point (i.e., unable to reach the desired flow). Ensure that the inlet is not blocked. If the warning persists, ensure that the filter is clean; if it is dirty, replace the filter. If the warning persists, replace the pump (see *Support* on page 1-4).

No GPS map pin

It can take several minutes after powering on the instrument to get a GPS satellite lock.

If no GPS map pin appears in the top of the instrument display, go to Settings and make sure GPS is enabled. If GPS is enabled and still no map pin, go to GPS settings from **Instrument Settings** on the device and check **NumSats**; if <3, move to a location away from buildings and wait to see if GPS can get a satellite lock. If you are working inside, you may not have the necessary reception. GPS can be turned off to conserve battery power.

Data download errors

Data download error messages pop up with "Data Download Failed!" However, if a data download error occurs, the raw data file is still saved to your local computer. Find and open the data file, and reference the error message to identify the problem. Following are known data download errors and their causes.

Duplicate Flash ID

This is caused by a user taking measurements, manually changing the clock back an hour from Daylight Saving Time to Daylight Standard Time, then continuing to take measurements that result in a duplicate Flash ID (time stamp).

Unpaired Flash ID Detected

This error occurs when the fluorometer option is enabled "on the fly." The user picks a configuration with the fluorometer disabled and takes measurements. With the instrument connected to the computer, the user enables the fluorometer option and re-uploads the configuration to the same spot on the instrument and continues taking measurements.

Orphaned Flash ID Detected

This error occurs when the fluorometer option is disabled "on the fly." The user picks a configuration with the fluorometer enabled, takes measurements, then connects the instrument to the computer. The user then disables the fluorometer option, and uploads the updated configuration to the same spot on the instrument and takes more measurements.

Unrecognized Row Type

This error occurs when a barcode with a newline character is scanned.

Malformed Flash Data Reading

If this error repeatedly pops up, each time referencing a different row, then the problem is likely a bad USB cable.

Section 8.

Maintenance

This section describes typical maintenance procedures for the LI-600. For many of these procedures, support videos are available at licor.com/support/LI-600/videos.html.

Storing the LI-600

Follow these guidelines when storing the LI-600.

- Power down and store it in the carrying case when not in use; this will keep dust, insects, and other contaminants out of the aperture.
- Store it in a climate-controlled environment.
- Charge the battery to 60% capacity prior to long-term storage.
- Disconnect the power supply.

Cleaning the LI-600

These are basic cleaning procedures for the exterior components of the LI-600.

Caution: Always turn off the LI-600 before cleaning.

Barcode window and quantum sensor

Regularly check that the barcode window and quantum sensor are clean, as dirt and debris may accumulate after active use.

Use a foam swab and deionized water to clean the quantum sensor and barcode window. Use the microfiber cloth to dry the surface if necessary.

Clamp and gasket

To clean the clamp and gasket, first remove them. Remove the clamp by pulling it straight out. The gasket can be gently pried and pulled off from its edge using a fingernail or toothpick. Do not clean the gasket while it is on the instrument.



Figure 8-1. Removing the clamp.



Figure 8-2. Removing the gasket.

Use foam swabs and deionized water to carefully clean the clamp window. Do not use soap on the window.

If dirt remains on the leaf gasket, gently wash it in water and a mild detergent and completely dry it before reinserting. If needed, replace it with a new gasket (included in the accessories kit, part number 6360-356).

Note: Prevent water from entering the cuvette. Water can damage sensitive components. If water enters the cuvette, disassemble the instrument and remove the water using a foam swab.

Infrared thermometer

Check that the infrared thermometer is clean after periods of heavy use, or before or after long-term storage. A dirty infrared thermometer will throw off *t_{leaf}* values.

- 1 Power off the instrument.
- 2 Remove the leaf clamp (pull straight out).
- 3 Remove the aperture gasket by lifting one edge and peeling it from the aperture.

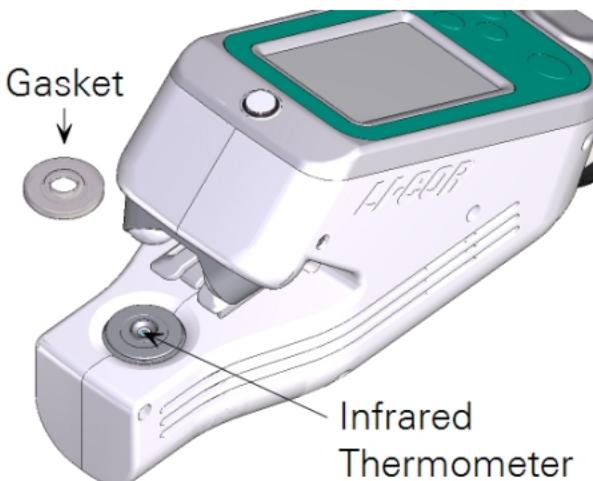


Figure 8-3. The infrared thermometer is under the center of the aperture.

- 4 Use a foam swab and isopropyl alcohol to carefully clean the sensor.

Fluorometer

Regularly check that the fluorometer LEDs and fluorescence detector are clean. Use foam swabs, a microfiber cloth, and isopropyl alcohol to carefully clean the fluorometer optics.



Figure 8-4. The fluorometer LEDs and fluorescence detector.

Removing the instrument shells

Work indoors in a clean environment when removing the instrument shells. Use a #1 Philips screwdriver to remove the screws.

- 1 Remove seven screws on the left side of the instrument.

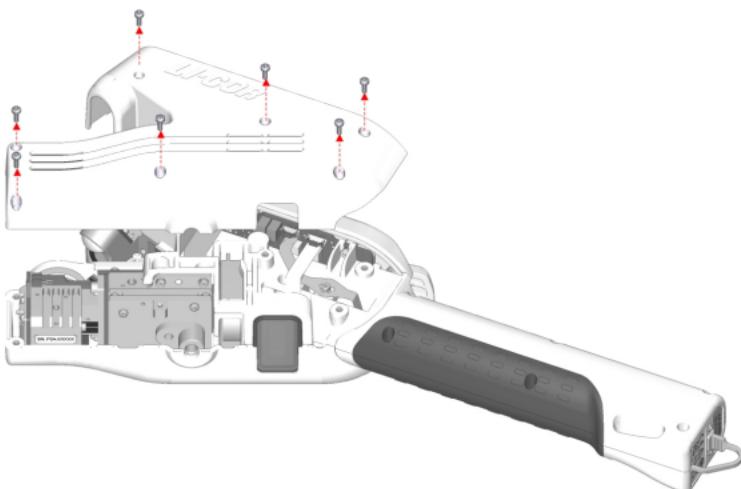


Figure 8-5. Seven screws secure the left shell.

- 2 Remove five screws on the right of the instrument.

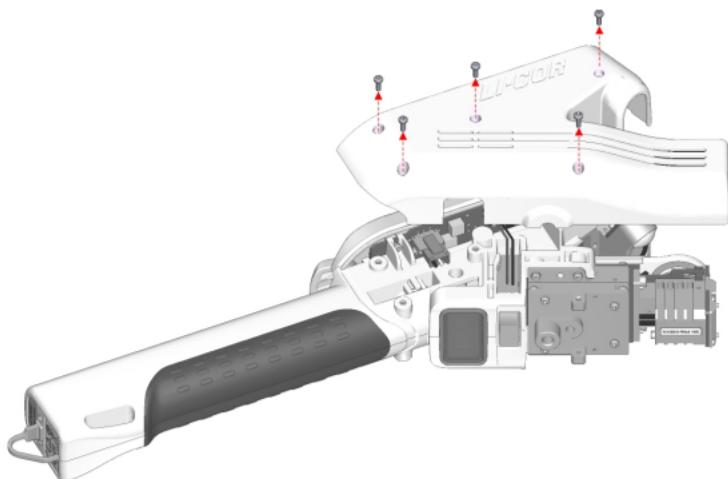


Figure 8-6. Five screws secure the right shell.

Reassembly is the reverse of removal.

Cleaning the shell vents

Check that the four vents on the instrument head shells are clean. With the shells removed, use compressed air to carefully clean the vents and other enclosure parts.

Cleaning the RH sensors

Regularly check that the RH sensors are clean, for example after a campaign, before extended storage, or if a shift in ambient RH is noted.

- 1 Use a squeeze bottle with deionized water to carefully rinse the RH sensors.
Do not touch the active side of the sensors with your fingers or a swab. Do not use isopropyl alcohol.
- 2 Dry them with compressed air, then bake them for 6 hours at 100 to 120 °C.

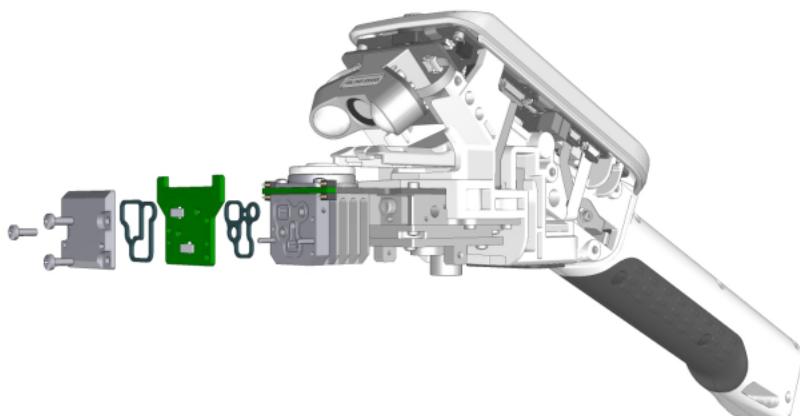


Figure 8-7. The RH sensors board.

Never touch the RH sensors or H₂O buffer material in the instrument head, as oils on the skin and scratches can affect the instrument's performance.

Removing and inserting a battery

Removing and inserting the battery is only required when the battery no longer functions and needs replacement.

- 1 Power off the instrument and ground yourself to avoid potential electrostatic discharge.
- 2 Remove the shells.

Remove the shells on the instrument head. Set the shells safely aside.

3 Unplug the battery connector.

On the right side of the instrument head, locate the cable clip. Push down on the clip and disconnect the battery connector.

4 Remove the coverings on the instrument handle.

Remove the six screws nearest the USB port on the handle using a Phillips screwdriver; do not remove the two hex screws at the end of the handle. Gently spread apart the left and right handle coverings but do not remove completely.

5 Detach the endcap.

The dust cap may dislodge while removing the endcap. Set both safely aside.

6 Remove the old battery.

To the right of the connector slot, ease the wires out from behind the tab. Gently remove the old battery from the handle, guiding the battery connector out through the connector slot in the instrument head.

7 Insert the new battery.

Gently insert the new battery into the handle, guiding the battery connector in through the connector slot in the instrument head. Place the wires behind the tab.

8 Replace all parts in reverse order.

Replace the dust cap, endcap, and instrument handle coverings. Plug in the battery connector and replace the instrument head shells.

After a battery replacement or any other repair, verify the safe state of the instrument by checking that the display and the fan are powered off.

Replacing the air intake filter

The air intake filter serves to remove solid particles from air before it is drawn through the LI-600 porometry system. A 0.45 micron filter (part number 301-19838) is a direct replacement for the original 1.0 micron filter (part number 301-16918).

Follow these steps to replace the air intake filter.

- 1 Remove the shells.
- 2 Remove the filter cover.

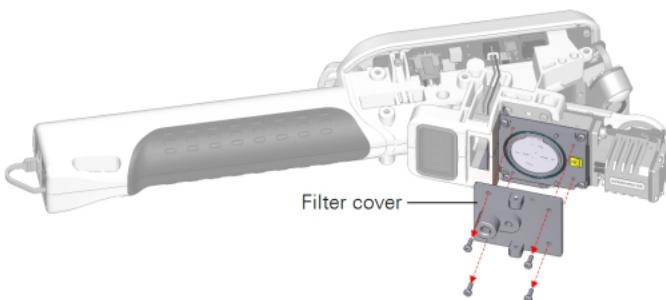


Figure 8-8. Remove the screws to remove the filter cover.

- 3 Remove the filter using gloves or tweezers.

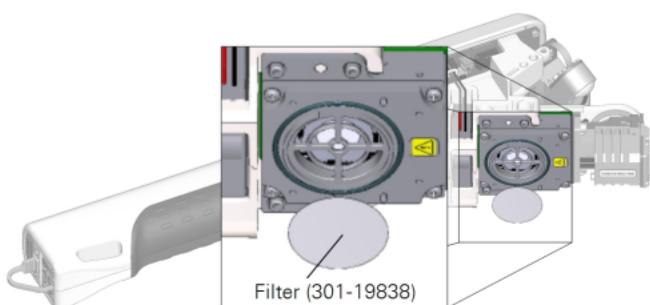


Figure 8-9. Filter part number 301-19838.

- 4 Install the replacement filter from the accessories kit.
Always use gloves or tweezers, as oils on the skin and

scratches can damage the filter.

- 5 Replace the filter cover and instrument head shells.

Calibrating the sensors

The LI-600 includes sensors whose calibration parameters can be adjusted by the user: relative humidity (RH) sensors, flow sensors, and a fluorescence detector. This section describes the process of setting the available parameters for each sensor.

To view user calibration coefficients and change the user-adjustable parameters, connect the LI-600 to the computer software. In the drop-down menu on the Toolbar, select Instrument Calibration. (For sensor equations, see *Theory of operation* on page 9-1)

All calibration coefficients can be viewed in **Factory Calibration** if enabled in the software Preferences. See *Drop-down menu* on page 4-3.

RH sensors

RH sensor parameters include Zero, or the sensor's response to dry air, and Span, or the sensor's response to a known dew point or H_2O mole fraction.

Using the LI-600 pump

Take the following steps to dry the RH sensors using the internal pump and zero kit.

- 1 Power off the LI-600.
- 2 Remove the shells (see *Removing the instrument shells* on page 8-4).
- 3 Remove the filter cover and filter.

The H_2O buffer material is in the flow path and must be removed to zero the RH sensors. Remove the filter cover and filter using gloves or tweezers.

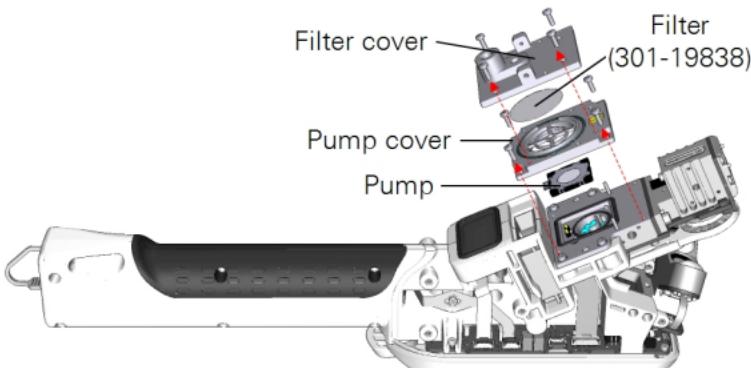


Figure 8-10. Filter part number 301-19838 is a direct replacement for the original filter (301-16918).

4 Remove the pump cover and pump.

Remove the four screws on the pump cover then remove it. Using gloves, remove the pump to gain access to the H₂O buffer material. The pump part number is 286-17946.

Handle the black plastic corners only.

5 Remove the H₂O buffer material.

Use gloves or tweezers to remove the H₂O buffer material, as oils on the skin and scratches can reduce its buffering efficacy.

Alternatively, turn the LI-600 over a container to collect the H₂O buffer material.

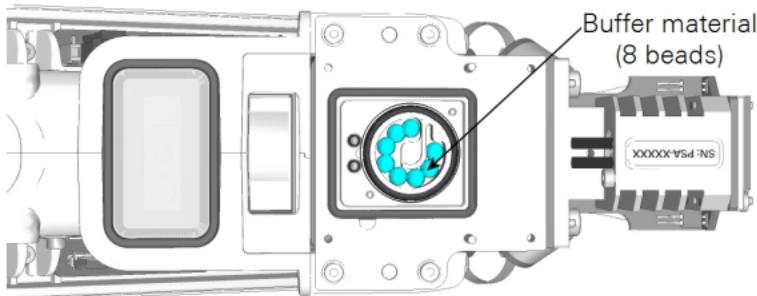


Figure 8-11. The buffer material.

- 6 Reinstall the filter cover, filter, pump cover, and pump.
Reinstall the parts with the H₂O buffer material removed.
- 7 Connect the zero kit.
Attach the zero kit to the air inlet next to the tripod mount via the 10-32 fitting.

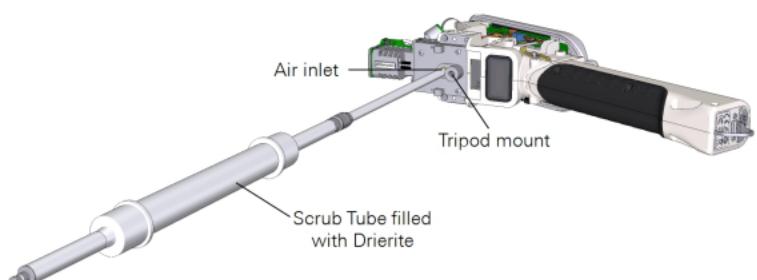


Figure 8-12. Attach the zero kit.

- 8 Seal the leaf aperture.
To seal the leaf aperture, clamp on a plastic bag or similar material.
- 9 Open Instrument Calibration.
Power on the LI-600. Connect it to a computer via USB then open the computer software. Click the drop-down menu on the Toolbar then select Instrument Calibration.

10 Power on the internal pump.

Select RH Zero then click **Begin RH Zero Calibration** to view the RH Ref and RH Sample. Click **TURN PUMP ON**.

11 Dry the RH sensors.

Wait for RH to stabilize at $\pm 1\%$ then select Zero in the computer software. If trending down, zeroing is not required.

Ensure that the chemicals are fresh, such as Drierite® (P/N 622-10509), to provide a low dew point.

12 Reinstall all parts in reverse order.

Reinstall the H_2O buffer material, pump, pump cover, filter, filter cover, and instrument head shells.

Using a user-supplied airstream

Follow these steps when drying the RH sensors using a user-supplied airstream from an air tank. Alternatively, you can use a user-supplied pump and the zero kit (P/N 9968-258) with chemicals to dry the RH sensors. If using an external pump with the zero kit, ensure that the chemicals are fresh, such as Drierite, to provide a low dew point.

Using an airstream in the RH sensor zeroing process requires the least disassembly.

1 Prepare the LI-600.

Power on the instrument.

2 Open Instrument Calibration.

Connect the LI-600 to a computer via USB then open the computer software. Click the drop-down menu on the Toolbar then select Instrument Calibration.

3 Power off the pump.

Select RH Zero then click **Begin RH Zero Calibration** to view the RH Ref and RH Sample. Click **TURN PUMP OFF**.

4 Remove the leaf clamp.

Gently but firmly pull on the leaf clamp to remove it from the instrument.

5 Attach the calibration clamp.

Gently but firmly attach the calibration clamp. The calibration clamp is equipped with a 10-32 hose barb for tube connection (9960-327).



Figure 8-13. The calibration clamp fits in place of the leaf clamp.

6 Attach the air tank.

Connect a tank of ultrapure dry air to the calibration clamp, ensuring that the tube connection does not prevent the clamp from sealing properly.

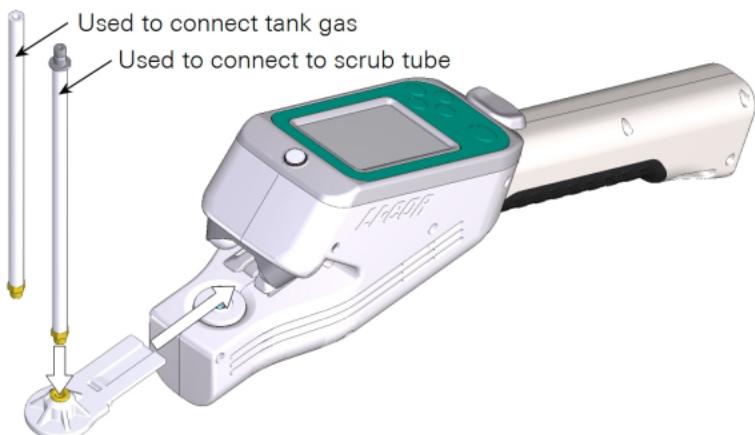


Figure 8-14. One tube is for tank gas. The other is for a scrub tube.

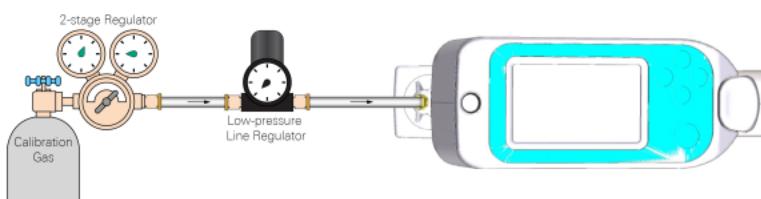


Figure 8-15. A line regulator may be needed to reduce pressure from a compressed gas tank.

7 Dry the RH sensors.

Deliver an airstream across the RH sensors for 30 minutes to 1 hour. Do not allow maximum airflow to exceed 0.25 LPM. The flow or inlet flow sensor will read negative values (i.e., approximately -30 to -100 $\mu\text{mol s}^{-1}$) due to the air flow toward both the air exhaust and air inlet. Flow_s will read positive values (i.e., approximately 100 to 200 $\mu\text{mol s}^{-1}$).

RH sensor zero

Follow these steps when zeroing the RH sensors.

1 Pump for drying the RH sensors.

Proper drying of the RH sensors can take up to 30 minutes, as water adheres to all surfaces in the flow path. This ensures that no water remains in the system.

Dry the sensors using one of two methods: using user-supplied airstream or using the LI-600 pump. If drying the sensors by delivering an airstream across the sensors using either a tank of dry gas (recommended) or an alternate airstream method, see *Using a user-supplied airstream* on page 8-13. If delivering airflow across the sensors via the LI-600 pump only, see *Using the LI-600 pump* on page 8-10. If the resulting RH is <1% and trending down after several minutes, the zero does not require resetting.

2 Open Instrument Calibration.

Connect the LI-600 to a computer via USB then open the computer software. Click the drop-down menu on the Toolbar then select Instrument Calibration.

3 Power off the pump and power on the blower.

Select RH Zero then click **Begin RH Zero Calibration** to view the RH Ref and RH Sample. Click **TURN PUMP OFF** then click **TURN BLOWER ON**.

4 Zero the RH sensors.

When the RH stabilizes, click **Zero** for RH Ref then again on the confirmation prompt to reset the zero. Click **Apply** on the second confirmation prompt to finish. Repeat for RH Sample.

RH sensor span

A known H₂O input is required to span the RH sensors using another H₂O analyzer or a dew point generator. Take the following steps to span the RH sensors.

1 Prepare the LI-600.

Power on the instrument.

2 Open Instrument Calibration.

Connect the LI-600 to a computer via USB then open the computer software. Click the drop-down menu on the Toolbar then select Instrument Calibration.

3 Set the H₂O input.

Select RH Span then click **Begin RH Span Calibration** to view the RH Ref and RH Sample. Select either Dew Point or Mole Fraction then enter the desired H₂O input.

4 Power off the pump.

Select Utility then click **TURN PUMP OFF**.

5 Remove the leaf clamp.

Gently but firmly pull on the leaf clamp to remove it from the instrument.

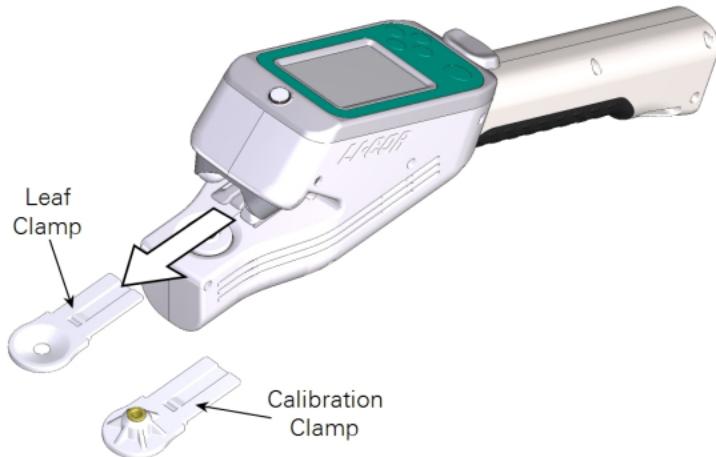


Figure 8-16. Leaf clamps.

6 Attach the calibration clamp.

Gently but firmly attach the calibration clamp. The calibration clamp is equipped with a 10-32 hose barb for tube connection.

7 Attach the dew point generator.

Connect a dew point generator to the calibration clamp, ensuring that the tube connection does not prevent the clamp from sealing properly.

8 Span the RH sensors.

Deliver an airstream across the RH sensors then click **Span** in the computer software when they stabilize, which can take approximately 30 minutes. Do not allow maximum airflow to exceed 0.25 LPM. The Flow or inlet flow sensor will read negative values (i.e., approximately -30 to -100 $\mu\text{mol s}^{-1}$) due to the airflow toward both the air exhaust and air inlet. Flow_s will read positive values (i.e., approximately 100 to 200 $\mu\text{mol s}^{-1}$).

Flow sensors

The flow sensors' response to no active flow can alter over time and can be reset. Take the following steps to reset the flow sensors. No disassembly is required.

1 Open Instrument Calibration.

Connect the LI-600 to a computer via USB then open the computer software. Click the drop-down menu on the Toolbar then select Instrument Calibration.

2 Power off the pump and blower.

Select Flow Zero then click **Begin Flow Zero Calibration** to view Flow In Zero and Flow Out Zero. Click **TURN PUMP OFF** then click **TURN BLOWER OFF**.

3 Zero the flow sensors.

When Flow In Zero and Flow Out Zero stabilize, click **Zero** for Flow In Zero then again on the confirmation prompt to reset the zero. Click **Apply** on the second confirmation prompt to finish. Repeat for Flow Out Zero. If Flow In Zero stabilizes at ± 1 or Flow Out Zero at ± 5 , the zero does not require resetting.

Fluorescence detector

The fluorescence detector can be reset to remove any offsets in the detector electronics. Take the following steps to reset the fluorescence detector.

1 Open Instrument Calibration.

Connect the LI-600 to a computer via USB then open the computer software. Click the drop-down menu on the Toolbar then select Instrument Calibration.

2 Check the fluorometer response.

Select FLR Zero then click **Begin FLR Zero Calibration** to view FLR Zero. Click **Zero** then ensure that the Flr Response with an empty cuvette is approximately ± 5 units.

3 Zero the fluorescence detector.

If Flr response is not approximately ± 5 units, click **Zero** to reset the zero for the fluorescence detector.

Changing the RH sensors serial number

The RH sensors board can be user replaced. However, the RH sensors serial number does not automatically update and must be updated in the computer software to obtain the correct calibration information. If a new RH sensors board is installed without updating the serial number, the LI-600 will continue logging data using the old sensor serial number.

Take the following steps to change the RH sensors serial number.

- 1 Connect the LI-600 to a computer via USB then open the computer software.
In **Explore the LI-600**, open the drop-down menu and select **Preferences**.
- 2 Check the **Allow Factory Calibration** box then click **Close**.
Select the drop-down menu again to allow the software to register the change then click **Factory Calibration**.
- 3 Select RH under **Factory Calibration** then click **Calibrate**. Click **OK** on the confirmation prompt.
The **Change RH Sensor Serial Number** and **Automatic RH Sensor Calibration** buttons will appear. Click **Change RH Sensor Serial Number** then input the serial number.
- 4 Click **OK** on the confirmation prompt.
- 5 Click **Automatic RH Sensor Calibration** to calibrate the RH sensor.

Section 9.

Theory of operation

The LI-600 is equipped to measure two different aspects of leaf photosynthesis. The porometer uses a mass balance for water vapor flux from the leaf to compute stomatal conductance. The fluorometer uses optical techniques to probe the quantum yield of photosystem II.

The LI-600 also has a GPS receiver and an accelerometer/magnetometer that measures the pitch, roll, and heading of a leaf. Those measurements, along with GPS information, are used by the LI-600 software to calculate a leaf's angle of incidence.

This section describes the theory and equations behind these measurements and provides an overview of other sensors in the LI-600.

Leaf porometer

The LI-600 porometer is a steady-state open flow-through gas exchange system. Stomatal conductance is computed from apparent transpiration measured in the leaf cuvette and leaf temperature. Apparent transpiration is computed from the water vapor differential across the leaf cuvette and the molar flow rate of air through it (*Figure 9-1* on the next page).

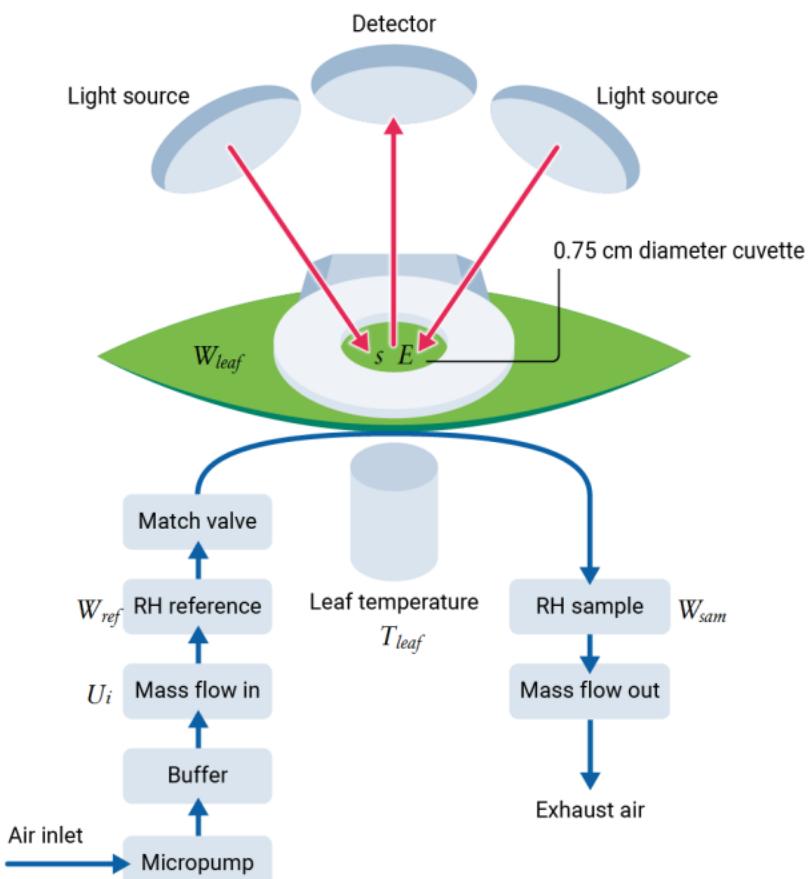


Figure 9-1. Flow path and optical arrangement of the LI-600.

Relative humidity (RH) sensors on either side of the cuvette measure the air stream before and after it interacts with a leaf or needle. Flow rates are measured before and after passing through the cuvette, though only the flow rate of air entering the cuvette is used in the calculation of apparent transpiration. Leaf temperature is measured in the cuvette via a non-contact infrared thermometer (IRT).

Derivation of equations

Apparent transpiration and stomatal conductance from the LI-600 are both expressed on a per unit area basis and as such the sampled leaf area (s_a) in the cuvette must be

known. Other calculations in the instrument are dependent on leaf width (s_w). Both leaf area and leaf width therefore must be known to make a measurement. Either leaf area or leaf width, not both, may be input by the user (see *Measurement Settings* on page 5-3), and the other is calculated:

$$s_a = s_w aw \quad 9-1$$

$$s_w = \frac{s_a}{aw} \quad 9-2$$

Where aw is a ratio relating leaf width to projected area for a leaf crossing the full length of the cuvette.

Table 9-1. Default leaf geometry parameters for the LI-600, found in P_CONFIG or Pоро groups in the data file.

Symbol	Label	LI-600	Units
aw	aw	0.05890480	dimensionless
s_a	Leaf_area	0.44178600	cm^2
s_w	Leaf_width	7.50	mm

The mass balance of water vapor in an open system at steady state is given by:

$$SE = M_s W_s - M_r W_r \quad 9-3$$

where S is leaf area (m^2), E is apparent transpiration ($\text{mol m}^{-2} \text{ s}^{-1}$), M_r and M_s (mol s^{-1}) are molar flow rates into and out of the leaf cuvette, respectively, and W_r and W_s are water vapor mole fractions into and out of the leaf cuvette ($\text{mol H}_2\text{O mol air}^{-1}$).

Flow out of the cuvette (sample flow) in the LI-600 is not measured with sufficient precision to be used in the water vapor mass balance, and is accounted for by noting that:

$$M_s = M_r + SE \quad 9-4$$

Substituting 9-3 into 9-4:

$$SE = (M_r + SE)W_s - M_r W_r \quad 9-5$$

Solving 9-5 for E gives the mass balance used on the LI-600:

$$E = \frac{M_r(W_s - W_r)}{S(1 - W_s)} \quad 9-6$$

It is important to note here that the units in 9-6 for most variables are different than the measurement units on board the instrument. Water vapor mole fractions in the LI-600 (w_x) are reported in mmol H₂O mol air⁻¹, not mol H₂O mol air⁻¹ ($w_x = W_x 10^3$), flow (μ_r) is reported in $\mu\text{mol s}^{-1}$, not mol s⁻¹ ($\mu_r = M_r 10^6$), and area (s_a) is in cm^2 , not m^2 ($s_a = S 10^4$).

Total conductance to water vapor (g_{tw} , mol m⁻² s⁻¹) is given by:

$$g_{tw} = \frac{E \left(1 - \frac{W_l + W_s}{2} \right)}{W_l - W_s} \quad 9-7$$

Where W_l (mol H₂O mol air⁻¹) is the mole fraction of water vapor in the leaf's intercellular air space. W_l is calculated from saturated vapor pressure ($e_{(T)}$, kPa) at the leaf temperature ($T = T_l$, C) following Buck (1981):

$$e_{(T)} = 0.61365 \exp \frac{17.502T}{240.97 + T} \quad 9-8$$

$$e_{(T_l)} = 0.61365 \exp \frac{17.502T_l}{240.97 + T_l} \quad 9-9$$

And atmospheric pressure (P , kPa):

$$W_l = \frac{e_{(T_l)}}{P} \quad 9-10$$

Calculation of stomatal conductance (g_{sw} , mol m⁻² s⁻¹) from g_{hw} requires separating boundary layer conductance (g_{blw} , mol m⁻² s⁻¹):

$$g_{sw} = \frac{1}{\frac{1}{g_{tw}} - \frac{1}{g_{blw}}} \quad 9-11$$

Boundary layer conductance

Boundary layer conductance in the LI-600 is characterized as a function of flow rate through the cuvette (μ_r , $\mu\text{mol s}^{-1}$) using a temperature controlled water source where g_{blw} is assumed to be the only limitation to E .

$$g_{blw} = Bl_a + Bl_b \mu_r + Bl_c \mu_r s_w^2 + Bl_d s_w + Bl_e \mu_r^2 \quad 9-12$$

Table 9-2. Default boundary layer conductance coefficients for the LI-600, found in the P_CONFIG group in the data file.

Symbol	Label	LI-600	Units
Bl_a	Bla	0.0	dimensionless
Bl_b	Blb	0.02923020	dimensionless
Bl_c	Blc	0.0	dimensionless
Bl_d	Bld	0.0	dimensionless
Bl_e	Ble	-0.00006755	dimensionless

Water vapor sensors

Water vapor measurements in the LI-600 are made using a pair of relative humidity (RH) sensors. Voltage output from each of these sensors is related to relative humidity (rh_x , %) through a unique polynomial fit determined at the factory:

$$rh_r = a_{rh_r} y_{rh_r}^3 T_{ref} + b_{rh_r} y_{rh_r}^2 T_{ref} + c_{rh_r} y_{rh_r}^2 + d_{rh_r} y_{rh_r} \quad 9-13$$

$$rh_{s_{raw}} = a_{rh_s} y_{rh_s}^3 T_{ref} + b_{rh_s} y_{rh_s}^2 T_{ref} + c_{rh_s} y_{rh_s}^2 + d_{rh_s} y_{rh_s} \quad 9-14$$

Where $a_{r_{hx}}$, $b_{r_{hx}}$, $c_{r_{hx}}$, and $d_{r_{hx}}$ are the factory calibration coefficients of the polynomial fit, T_{ref} is the reference temperature measured by a thermistor embedded in the block adjacent to the RH sensors and $y_{r_{hx}}$ is the sensor voltage ($V_{r_{hx}}$, volts) corrected for zero ($Z_{r_{hx}}$) and span ($S_{r_{hx}}$) offsets:

$$y_{r_{h_r}} = (V_{r_{h_r}} - Z_{r_{h_r}})S_{r_{h_r}} \quad 9-15$$

$$y_{r_{h_s}} = (V_{r_{h_s}} - Z_{r_{h_s}})S_{r_{h_s}} \quad 9-16$$

Initial values for both the zero and span offsets (both nominally 1.0) are determined at the factory but can be adjusted by user calibration (see *Calibrating the sensors* on page 8-10).

There is a residual temperature dependence in the zero adjustment that is calculated from a linear fit to T_{ref} using two additional factory determined coefficients (m_x and b_x):

$$Z_{r_{h_r}} = m_r T_{ref} + b_r \quad 9-17$$

$$Z_{r_{h_s}} = m_s T_{ref} + b_s \quad 9-18$$

To reduce errors in the mass balance a cross-calibration, known as matching, is done between the reference and sample RH measurements. Match adjustment (rh_{adj} , %) is calculated as the mean difference between the reference and sample RH measurements when the instrument is in match mode:

$$rh_{adj} = \overline{rh_r - rh_{s_{raw}}} \quad 9-19$$

This adjustment is applied to the raw, uncorrected, sample RH measurement ($rh_{s_{raw}}$) to get the sample RH (rh_s) reported by the instrument (see *Match mode* on page 3-3):

$$rh_s = rh_{s_{raw}} + rh_{adj} \quad 9-20$$

Water vapor mole fraction (w_x , mmol H₂O mol air⁻¹) in the reference and sample air streams is calculated by first converting the measured RH to vapor pressure (P_{vx} , kPa):

$$P_{vr} = \frac{rh_r}{100} e_{(T_{ref})} \quad 9-21$$

$$P_{vs} = \frac{rh_s}{100} e_{(T_{ref})} \quad 9-22$$

Where $e_{(T_{ref})}$ is the saturation vapor pressure at T_{ref} calculated following 9-8 ($T = T_{ref}$). Mole fraction is then given from the ratio of the vapor pressure to atmospheric pressure (P , kPa):

$$w_r = \frac{P_{vr}}{P} 1000 \quad 9-23$$

$$w_s = \frac{P_{vs}}{P} 1000 \quad 9-24$$

Flow sensors

Flow in the LI-600 is determined using a pair of flow sensors positioned to measure flow entering the cuvette (μ_r , $\mu\text{mol s}^{-1}$) and that exiting it (μ_s , $\mu\text{mol s}^{-1}$). Voltage output from each of these sensors is related to molar flow rate through a unique polynomial fit determined at the factory:

$$\mu_r = a_{\mu_r} y_{\mu_r}^4 + b_{\mu_r} y_{\mu_r}^3 + c_{\mu_r} y_{\mu_r}^2 + d_{\mu_r} y_{\mu_r} \quad 9-25$$

$$\mu_s = a_{\mu_s} y_{\mu_s}^4 + b_{\mu_s} y_{\mu_s}^3 + c_{\mu_s} y_{\mu_s}^2 + d_{\mu_s} y_{\mu_s} \quad 9-26$$

Where a_{μ_x} , b_{μ_x} , c_{μ_x} , and d_{μ_x} are the factory calibration coefficients of the polynomial fit and y_{μ_x} is the flow sensor

voltage ($V_{\mu x}$, volts) corrected for zero ($Z_{\mu x}$) and span ($S_{\mu x}$) offsets:

$$y_{\mu_r} = (V_{\mu_r} - Z_{\mu_r}) S_{\mu_r} \quad 9-27$$

$$y_{\mu_s} = (V_{\mu_s} - Z_{\mu_s}) S_{\mu_s} \quad 9-28$$

Initial values for the zero (nominally 0.6) and span (nominally 1.0) offsets are determined at the factory but can be adjusted by user calibration (see *Flow sensors* on page 8-18).

Leaf temperature sensor

Leaf temperature (T_l , C) is computed from T_{ref} and the IRT voltage (V_l , volts) using a set of factory determined calibration coefficients (a_{Tl} to g_{Tl}):

$$T_l = a_{Tl} V_l^2 + b_{Tl} V_l + c_{Tl} T_{ref}^2 + d_{Tl} T_{ref} + e_{Tl} V_l T_{ref} + f_{Tl} V_l^2 T_{ref}^2 + g_{Tl} \quad 9-29$$

PAR sensor

Photosynthetically active radiation (Q_{amb} , $\mu\text{mol photons m}^{-2} \text{ s}^{-1}$) is measured with a photodiode. Voltage output by the photodiode (V_Q , volts) is related to Q_{amb} using a single factory determined calibration coefficient (Q_{coeff}) and a user-settable zero adjustment (Z_Q):

$$Q_{amb} = \frac{V_Q - Z_Q}{499000} 10^6 - Q_{coeff} \quad 9-30$$

Vapor pressure deficit

Vapor pressure deficit (VPD, kPa) is calculated as the difference between the saturation vapor pressure in the leaf ($e_{(T_l)}$) and the vapor pressure in the cuvette (P_{vs}):

$$VPD = e_{(T_l)} - P_{vs} \quad 9-31$$

Leak rate

The cuvette leak rate (L , %) is calculated from the difference in flow across the cuvette:

$$L = \frac{\mu_r - \mu_s}{\mu_r} 100 \quad 9-32$$

Note that due to the difference in accuracy between the reference and sample flow sensors, the reported leak rate at times may be greater than 100% when the cuvette is open or empty, and less than 0% when sealed. This behavior does not impact quality of any measured parameter.

Stability criteria

A measurement is considered stable based on monitoring changes over time to both the computed stomatal conductance g_{sw} , and the de-modulated fluorescence signal F . In a given configuration, a user selects which variables to monitor (g_{sw} , F or both) and a stability limit, and the periods over which to calculate the change. Since the LI-600 is designed for rapid survey measurements, the time period is limited to 1, 2, or 4 seconds.

The LI-600 retains up to 4 seconds of 2 Hz data to calculate stability criteria as follows:

$$X_{1sec} = X[t] - X[t - 1] \quad 9-33$$

$$X_{2sec} = \frac{1}{2} \sum_{t=-1}^0 X - \frac{1}{2} \sum_{t=-3}^{-2} X \quad 9-34$$

$$X_{4sec} = \frac{1}{4} \sum_{t=-3}^0 X - \frac{1}{4} \sum_{t=-7}^{-4} X \quad 9-35$$

where X is either the computed stomatal conductance g_{sw} , or the de-modulated fluorescence signal F if a fluorometer is used, and t is the time for a given measurement.

Since a limited number of data points (2, 4 or 8) are used, the stability criteria is not a regression slope, but represents the amount of change in the parameter over the selected time period. When two consecutive data points are below the threshold of the slope limit, then the measurement is considered stable.

User calibration procedures

Users can adjust calibrations for the flow sensors (zero only) and the RH sensors (zero and 1-point span). See also *Calibrating the sensors* on page 8-10.

RH sensor zero

Resetting the zero set-point on an RH sensor will alter the offset parameter for a given sensor. A prerequisite to starting a calibration is access to tank air or a column of chemical to scrub H₂O from the airstream. Ensure dry conditions prior to resetting a zero, which can take 30 minutes or more of flowing dry air across the sensors.

Upon initiation, the calibration routine averages 10 seconds of data for T_{ref} and V_x and then recalculate the zero intercept:

$$b_{xnew} = V_x - (m_x * T_{ref}) \quad 9-36$$

After calculating b_{xnew} , the user must confirm the new set-point. The new value will then stored to memory.

RH sensor span

Resetting the span setpoint is an adjustment of the parameter S_x . A prerequisite to starting a calibration is access to a known H₂O source, such as a dewpoint generator. The known quantity might be in a dewpoint temperature, or potentially in mole fraction units. The software will accept either unit and convert to the correct relative

humidity at the sensor, with $Press$ coming from the LI-600 pressure sensor and T_{ref} coming from the LI-600 reference thermistor.

The span setting requires all calibration parameters for a given sensor, as well as rh_{true} , current reference temperature T_{ref} and the voltage of the sensor V_x .

Upon initiation, the calibration routine averages 10 seconds of data for T_{ref} and V_x and then re-calculate the span

$$S_{xnew} = \frac{f^{-1}(rh_{true}, T_{ref})}{V_x - (m_x * T_{ref} + b_x)} \quad 9-37$$

where T_{ref} and V_x are the current values read by the RH and temperature sensors, and m_x and other parameters are the current calibration values for the sensor. After calculating S_{xnew} , the new value is stored to memory.

Flow sensors zero

Resetting the zero setpoint on a flow sensor will alter the offset parameter for a given sensor ($Z_{\mu x}$ in 9-27 and 9-28). If you select the option to zero the flow sensors, the software powers down the pump and the blower before resetting the zero. The calibration routine averages 10 seconds of data for $V_{\mu x}$ to determine the new zero:

$$Z_{\mu_r} = \bar{V}_{\mu_r} \quad 9-38$$

$$Z_{\mu_s} = \bar{V}_{\mu_s} \quad 9-39$$

Fluorometer

The LI-600 fluorometer is a Pulse-Amplitude Modulated (PAM) fluorometer with a measuring beam provided by two LEDs focused on the portion of leaf in the porometer

cuvette. Fluorescence is detected via a single detector located between the LED measuring beams, filtered by a 740 ± 40 nm band-pass filter. Fluorescence is detected then from ~ 700 to 780 nm, which gathers the majority of fluorescence from PSII but is also contaminated with PSI fluorescence in a similar fashion to the LI-6800 Portable Photosynthesis System fluorometer (Genty et al., 1989, Pfundel et al., 2013).

Actinic light is not provided by the LI-600 fluorometer but rather by ambient light which could be natural sunlight or any number of artificial light sources. The two LEDs are both modulated at a constant frequency and provide both the measuring beam and saturating flash. One unique aspect of the design is that the saturating flash is not delivered as a constant output but is modulated at high frequencies to achieve the necessary high light intensity. The use of both LEDs for providing the measuring beam and saturating flash has a few advantages over using a single LED for each purpose, including improved light uniformity from light reaching the leaf from multiple angles and increased peak intensity for the measuring beam, leading to 3) improved signal-to-noise ratio.

Maximum fluorescence and saturating flashes

The LI-600 can perform two types of saturating flashes, either a traditional rectangular flash to measure F_m or F_m' , or a MultiPhase Flash™ (MPF) to measure F_m' . MPF is typically used in situations where achievable flash intensities are either too low to be saturating or may be damaging to the leaf (see Loriaux et al., 2013). MPF is the flash type in the pre-loaded factory default configurations.

A rectangular flash is of a single fixed intensity (Q_{flash} , $\mu\text{mol photons m}^{-2} \text{ s}^{-1}$) held for a single fixed duration. F_m

or F_m' is taken as the maximum de-modulated fluorescence signal (F , dimensionless) observed during the flash.

An MPF is split into three phases, each of an independent duration. The first and third phases are similar to a traditional rectangular flash and are both of a fixed intensity. F_m' is calculated using only fluorescence observed during the second phase. During the second phase a linear ramp, of a user specified depth, is applied to the flash intensity. F_m' is calculated from the intercept of a linear regression of F over $1/Q_{\text{flash}}$ during the linear ramp in flash intensity.

While the target Q_{flash} is a user specified parameter in the configuration, reported values are calculated from the modulation rate (f , Hz) and the width of each modulated pulse:

$$Q_{\text{flash}} = 6.67e^{-7} \tau f Q_{\text{peak}} \quad 9-40$$

Where τ is a cuvette specific transmission factor (1.0 for the LI-600) and Q_{peak} ($\mu\text{mol photons m}^{-2} \text{ s}^{-1}$) is the combined output of the LEDs:

$$Q_{\text{peak}} = Q_{\text{left}} + Q_{\text{right}} \quad 9-41$$

Q_x is calculated from each LED's digital to analog converter setpoint (V_{DAC_x}) and calibration factor (Q_{coeff_x}), both determined at the factory:

$$Q_{\text{left}} = V_{\text{DAC}_{\text{left}}} + Q_{\text{coeff}_{\text{left}}} \quad 9-42$$

$$Q_{\text{right}} = V_{\text{DAC}_{\text{right}}} + Q_{\text{coeff}_{\text{right}}} \quad 9-43$$

Modulation rate during the flash is calculated from the target Q_{flash} specified in the instrument configuration as:

$$f = \frac{\frac{Q_{\text{flash}}}{2\tau}}{Q_{\text{peak}} 6.67e^{-7}} \quad 9-44$$

Minimum and steady-state fluorescence

Minimum fluorescence in the dark (F_o) and steady-state fluorescence in the light (F_s) are measured when only a low frequency (4 to 8 Hz) modulated light is applied to the leaf. Logged values for both are taken as the last value of the de-modulated fluorescence signal before the saturating flash is initiated. The light intensity during the modulation is calculated from the user specified modulation frequency analogously to the intensity during the flash (9-40).

The de-modulated fluorescence signal (F , dimensionless) used to determine F_o and F_s can be subject to measurement biases that arise from imperfect discrimination of the fluorescence signal and noise from the measurement circuitry. A user settable zero adjustment (Z_F) is applied to the raw voltage from the fluorescence detector (V_F) compensate for this:

$$F = V_F - Z_F \quad 9-45$$

Fluorescence output parameters

The LI-600 calculates one of two fluorescence yields depending on the instrument configuration. Because the LI-600 uses ambient light as its actinic source, the instrument must be told by the user whether the fluorescence measurements will be light- or dark-adapted and measurements must be made in a light environment that matches the instrument configuration (e.g., don't try to make dark-adapted measurements at mid-day outside, or light-adapted measurements at night).

When configured for dark-adapted measurements the LI-600 reports the maximum quantum yield (F_v/F_m , dimensionless):

$$\frac{F_v}{F_m} = \frac{F_m - F_o}{F_m} \quad 9-46$$

And when configured for light-adapted measurements, it reports the operating efficiency of PSII (Φ_{PSII} , dimensionless):

$$\Phi_{PSII} = \frac{F'_m - F_s}{F'_m} \quad 9-47$$

Additionally, when configured for light-adapted measurements the LI-600 will make an estimate of linear electron flow (ETR , $\mu\text{mol electrons m}^{-2} \text{ s}^{-1}$) from Φ_{PSII} :

$$ETR = \Phi_{PSII} Q_{amb} \alpha p_{PSII/PSI} \quad 9-48$$

Where α (dimensionless) is light absorption by the leaf under the measurement (actinic) lighting and $p_{PSII/PSI}$ (effectively dimensionless) is a proportioning coefficient that describe the partitioning of absorbed photons between PSII and PSI. On the LI-600, α is set by default to 0.8, but can (and should) be adjusted by the user for their specific plant material and light source. $p_{PSII/PSI}$ is set by default to 0.5. Where the user has a more appropriate value, it too can be adjusted.

Leaf angle and GPS

Using measurements from the accelerometer / magnetometer and GPS receiver, the LI-600/LI-600N computer

angle of incidence.¹

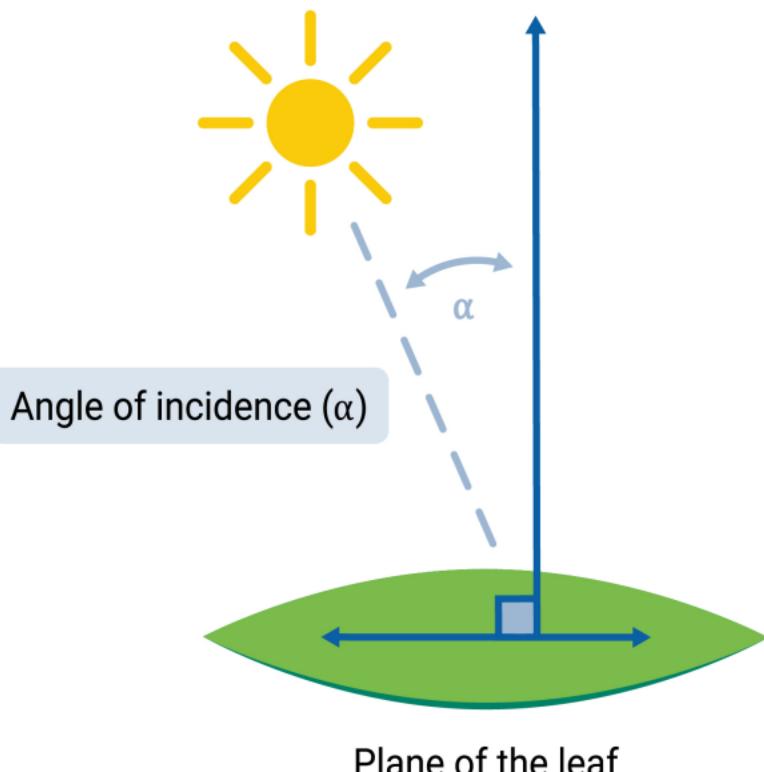


Figure 9-2. The angle of incidence of a leaf.

Accelerometer/Magnetometer

The accelerometer and magnetometer measure three aspects of a leaf's angle:

Pitch: slope from horizontal in degrees (accelerometer)

Roll: rotation from the horizontal in degrees (accelerometer)

Heading: rotation from North in degrees (magnetometer)

¹ GPS and the accelerometer/magnetometer are included in LI-600 models with a serial number higher than PFA-00553, and in all LI-600N.

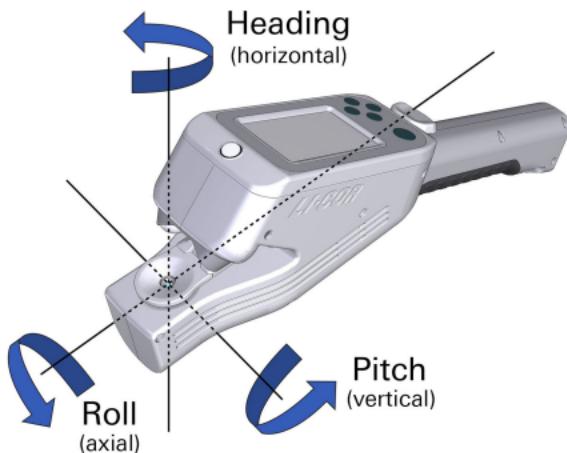


Figure 9-3. Pitch, roll, and heading.

GPS

If GPS is enabled in the instrument settings and there are a minimum of 3 satellite signals, a GPS map pin will appear in the upper left of the device screen. To view the number of satellites available, go to **Instrument Settings** on the device, select **GPS**, then **NumSats**.

Note: It can take up to five minutes after powering on the instrument to get a satellite fix. Therefore, if you take measurements before seeing the GPS pin at the top of the instrument display, those measurements will not include GPS/leaf angle data.

Leaf angle software calculations

The LI-600/LI-600N software application combines data from GPS and rotational information to compute parameters related to solar position and leaf angle position relative to the sun. The angle of incidence of a surface (here, a leaf) arbitrarily oriented with respect to the sun at a given time and place can be given by:

$$\cos(\text{angle_inc}_{\text{leaf}}) = \cos(\text{slope}_{\text{leaf}}) \cos(\text{zenith}_{\text{solar}}) + \sin(\text{slope}_{\text{leaf}}) \sin(\text{zenith}_{\text{solar}}) \cos(\text{az}_{\text{solar}} - \text{az}_{\text{leaf}}) \quad 9-49$$

where $\text{angle_inc}_{\text{leaf}}$ is the incidence angle between the leaf and direct sunlight ($\text{angle_inc}_{\text{leaf}} = 0$ for leaf plane perpendicular to direct sunlight). The equation above is Equation 47 from Reda & Andreas 2004. Input parameters are calculated from either GPS location information or accelerometer/magnetometer information as follows below.

The proportion of direct sunlight incident on the leaf at the given angle can also be calculated

$$\text{direct}_{\text{pct}} = 100 \times \cos(\text{angle_inc}_{\text{leaf}}) \quad 9-50$$

where $\text{direct}_{\text{pct}}$ is the % of available photons incident on the leaf relative to the amount of photons if the leaf were normal to direct sunlight.

Solar position calculations

Location and time from GPS are used to calculate solar parameters. The solar parameters can be solved using equations from Michalsky 2008. Those equations are valid for the years 1950-2050 with uncertainty of $\pm 0.01^\circ$.

Leaf plane calculations

Two parameters are needed to describe the plane of the leaf:

$\text{slope}_{\text{leaf}}$ Inclination of a surface from the horizontal position

az_{leaf} Surface azimuth angle or deviation of the normal to the surface with respect to the south

The following equations are similar to those from Escribano-Rocafort et al. 2014, with modifications to fit the LI-600/LI-600N framework.

$$\text{slope}_{\text{leaf}} = \text{acos}(\cos(\text{pitch}) \times \cos(\text{roll})) \quad 9-51$$

$$\text{az}_{\text{leaf}} = \text{heading} - \text{atan} \left(\frac{\tan(\text{roll})}{\sin(\text{pitch})} \right) \quad 9-52$$

Clocks

With the addition of GPS, the LI-600/LI-600N reports two different time stamps in the data file: a date/time stamp in the SYS group, and a date/time stamp in the GPS group. The date/time stamp in the SYS group is either set manually by the user or synced to GPS (when available).

GPS not available

If the user is unable to get enough satellites for GPS, the clock needs to be set manually (Instrument Settings > Set Time > Manual). In this case, the SYS Date/Time will update based on user settings. GPS time will not be available and is logged as time = '0:00:00' and date = '0000-00-00'.

GPS available

When GPS is available, the GPS clock will reflect Universal Time. The user can use the SYNC function to update the SYS clock and set their UTC offset for local time (Instrument Settings > Set Time > GPS Sync).

If SYS is not synced to GPS, the time reported in the SYS group reflects the last manual update, and may not match the GPS clock. The real-time clock for the SYS group will drift over time, typically a few seconds a month, therefore it is good practice to sync with GPS once lock is achieved before taking measurements. In a logged

data set, the SYS and GPS times can be compared to determine the UTC offset. UTC offset is maintained through power cycling of the instrument.

References

Buck, A.L. (1981). New equations for computing vapor pressure and enhancement factor. *J. Appl. Meteor.* 20:1527-1532.

Escribano-Rocafort, A.G., Ventre-Lespiaucq, A.B., Granado-Yela, C., Lpez-Pintor, A., Delgado, J.A., Muoz, V., Dorado, G.A. and Balaguer, L. (2014), Simplifying data acquisition in plant canopies- Measurements of leaf angles with a cell phone. *Methods Ecol Evol*, 5: 132-140. <https://doi.org/10.1111/2041-210X.12141>

Genty, B., Wonders, J. & Baker, N.R., 1990. Non-photochemical quenching of F_0 in leaves is emission wavelength dependent: consequences for quenching analysis and its interpretation. *Photosynthesis Research*, 26(2), pp.133–139.

Iqbal, M. “An Introduction to Solar Radiation”. New York: 1983; pp. 23-25. (Chapter 1, Google Books).

Loriaux SD, et al. (2013). Closing in on maximum yield of chlorophyll fluorescence using a single multiphase flash of sub-saturating intensity. *Plant Cell Environ.* 36:1755-1770.

Michalsky, J. J. “The Astronomical Almanac’s Algorithm for Approximate Solar Position(1950-2050)”. *Solar Energy*. Vol. 40, No. 3, 1988; pp. 227-235, USA.

Pfndel, E.E. et al., 2013. Deriving fluorometer-specific values of relative PSI fluorescence intensity from quenching of F_0 fluorescence in leaves of *Arabidopsis thaliana* and *Zea mays*. *Photosynthesis research*, 114(3), pp.189–206.

Reda, I.; Andreas, A., Solar Position Algorithm for Solar Radiation Applications, *Solar Energy*. Vol. 76(5), v2004; pp. 577-589) See also C code and a web calculator here: <https://mid-cdmz.nrel.gov/spa/>

Section 10.

Specifications

General

Measurement time:

Porometer: 5 to 15 seconds typically, depending on species, leaf surface characteristics, and leaf conditions

Fluorometer: 1 second

Operating conditions:

Temperature: 0 to 50 °C

Pressure: 50 to 110 kPa

Humidity: 0 to 85%; non-condensing

Weight: 0.68 kg (porometer only); 0.73 kg with fluorometer

Dimensions: 32.4 cm x 16.9 cm x 6.2 cm (L x W x H)

Display:

Dimensions: 6.8 cm diagonally

Resolution: 400 x 200 pixels; sunlight readable monochrome

Keypad: 5-button membrane pad

Battery:

Built-in Li-ion

Operating hours: 8 hours typically

Capacity: 5200 mAh

Recharging time: 3.5 hours typically; 2 hours with Qualcomm® Quick Charge™ 2.0 or 3.0

Data storage: 128 MB

USB specifications:

Communication/charging interface: Micro-B

Qualcomm® Quick Charge™ 2.0 or 3.0 for rapid charging

Universal charging adapter:

Input: 90 to 264 VAC; 50 to 60 Hz

Output: 5 VDC; 1 Amp

Configuration Software: Windows® and macOS® applications

Data Output: Plain text files (comma or tab delimited), and Excel files with embedded equations.

Barcode scanner: 1-D and 2-D, including Code 39, Code 128, PDF417, 100% UPC, Data Matrix, QR Code

Photosynthetically Actively Radiation (PAR) measurement:

Units: Photosynthetic Photon Flux Density (PPFD); $\mu\text{mol m}^{-2} \text{ s}^{-1}$

Calibration accuracy: $\pm 10\%$ of reading; traceable to NIST

Cosine correction: Cosine corrected up to 60° angle of incidence

Porometer

Leaf sizes:

7.5 mm minimum length and width

2.8 mm maximum thickness

Flow rates:

Low: $75 \mu\text{mol s}^{-1}$

Medium: $115 \mu\text{mol s}^{-1}$

High: $150 \mu\text{mol s}^{-1}$

RH sensor accuracy: $\pm 2\%$ RH

Reference temperature: $\pm 0.2^\circ\text{C}$

Leaf temperature sensor accuracy: $\pm 0.5^\circ\text{C}$

Inlet flow measurement: $\pm 1\%$ of reading from $75 \mu\text{mol s}^{-1}$ to $150 \mu\text{mol s}^{-1}$

Exhaust flow measurement: $\pm 5\%$ of full scale up to $150 \mu\text{mol s}^{-1}$

Parameters:

$g_{sw} \text{ mol m}^{-2} \text{ s}^{-1}$; $g_{bw} \text{ mol m}^{-2} \text{ s}^{-1}$; $g_{tw} \text{ mol m}^{-2} \text{ s}^{-1}$; $E \text{ mmol m}^{-2} \text{ s}^{-1}$

$\text{VP}_{\text{cham}} \text{ kPa}$; $\text{VP}_{\text{ref}} \text{ kPa}$; $\text{VP}_{\text{leaf}} \text{ kPa}$; $\text{VPD}_{\text{leaf}} \text{ kPa}$

$\text{H}_2\text{O}_{\text{ref}}$ mmol mol⁻¹; $\text{H}_2\text{O}_{\text{samp}}$ mmol mol⁻¹; $\text{H}_2\text{O}_{\text{leaf}}$ mmol mol⁻¹

Fluorometer

Flash types: User configurable Rectangular and Multiphase Flash™ (MPF)

Measuring light peak wavelength: 625 nm

Measuring light peak intensity:

0 to 10,000 $\mu\text{mol m}^{-2} \text{s}^{-1}$

Flash intensity: 0 to 7500 $\mu\text{mol m}^{-2} \text{s}^{-1}$

LED Risk Group: Exempt group in acc. with IEC 62471:2006. The LED does not pose any photobiological hazard.

Parameters:

F_o ; F_m ; F_v ; F_v/F_m ; F_s ; F_m' ; Φ_{PSII} ; ETR

GPS Receiver

GPS: Accuracy 2.5 m CEP (circular error probable)

Appendix A. FlashAnalysis App

FlashAnalysis is an application to help optimize flash protocol, and also to summarize and export data of interest. You can import downloaded and extracted flash files saved to your computer into the application, then plot and graph the flash variables for analysis (see *Flash files* on page 6-11.)

FlashAnalysis was built on Windows® 10 and macOS® Catalina 10.15.6 with Python 3.8, with limited testing on other operating system versions. The macOS® version of the app is not signed by Apple, so you have to allow the system to open the app by going to System Preferences > Security & Privacy > General to allow the system to open the application.

For more information on the FlashAnalysis application, and for links to the download, go to:

licor.com/support/Photosynthesis/topics/flash-analysis-application.html

Standard Terms and Conditions

1. General. LI-COR Inc. (“LI-COR”) is delivering these goods and products (“Products”) and/or performing services (“Services”) subject to these Terms and Conditions of Sale (“Conditions”). Buyer will be deemed to have assented to these Conditions upon Buyer’s placement of order. Notwithstanding the above, failure of LI-COR to object to provisions contained in any purchase order or other form or document from Buyer shall not be construed as a waiver of these Conditions nor an acceptance of any such provision.
2. Buyer’s Use Only/No Resale. The purchase of Products only conveys to Buyer the non-transferable right for only Buyer to use the quantity of Products and components of Products purchased in compliance with the applicable intended use statement, limited use statement or limited label license, if any, in LI-COR catalogues or on the label or other documentation accompanying the Products (all such statements or licenses being incorporated herein by reference as if set forth herein in their entirety). Buyer has no right to resell the Products, or any portion of them to a third party outside Buyer’s corporate organization, and any such purchase by a reseller for the purpose of resale is strictly prohibited unless LI-COR first accepts and approves a purchase order and acknowledges in writing that the Products may be resold by Buyer and the terms of such resale.
3. Prices/Taxes. All prices are quoted for delivery to Buyer when goods are loaded on the carrier at LI-COR premises in Lincoln, Nebraska, USA exclusive of shipping, insurance and installation charges, all of which are Buyer’s sole responsibility. All prices are exclusive of all sales, use, excise, value added, withholding and other taxes, all customs, duties, documentation charges, and freights forwarder charges and charge of any nature now or hereafter claimed or imposed by any governmental authority upon the sale of the Products or performance of the Services. Any such charges will be added to the product invoice or subsequently invoiced to the Buyer. In the event LI-COR is required to pay any such tax, duty or charge, Buyer will promptly reimburse LI-COR.
4. Payment Terms. All payments shall be made in immediately available U.S. Dollars net thirty (30) days from the date of invoice for qualified

accounts, without set-off, deduction or withholding of any kind, unless otherwise stated by LI-COR in writing and may be paid by check (drawn on a U.S. bank), wire transfer or major credit card. All open account invoicing must be pre-approved. Any amounts not paid when due will accrue interest at the rate of 1 1/2% per month, or the maximum amount allowed by law, if lower. In the event that any payment is more than thirty (30) days late, LI-COR shall have the right to suspend doing business with Buyer until all past due balances are made current. Buyer shall pay for all costs (including reasonable fees) incurred by LI-COR in connection with the collection of late payments. Each accepted purchase order is a separate, independent transaction, and Buyer has no right of set-off against other purchase orders or other transactions with LI-COR. Buyer hereby grants LI-COR a security interest in the Products or any deliverable in the amount of the unpaid balance of the purchase price until paid in full. LI-COR may file a financing statement for such security interest and Buyer shall sign any such statements or other documentation necessary to perfect LI-COR security interest.

5. Return Policy. Buyer may return non-consumable Products to LI-COR within forty-five (45) days of invoice date only with prior authorization by LI-COR. The Product(s) being returned new and unused condition and must be resalable as new. Any returned Product(s) are subject to payment of a fifteen percent (15%) re-stocking fee on all items returned. Buyer shall be responsible to make payment to LI-COR for any and all expenses related to de-installation of the Product(s), including but not limited to shipping, duties, and taxes. All payments subject to this provision shall be made to LI-COR within thirty (30) days of return, or de-installation, of the Product(s).

6. Delays In Performance. LI-COR shall not be liable for any delay in performance hereunder due to unforeseen circumstances or due to circumstances beyond its control including, but not limited to, acts of nature, acts of government, labor disputes, delays in transportation, delays in customs clearance and delays in delivery or inability to deliver by LI-COR suppliers.

7. Shipment and Packing. All Product prices exclude costs of shipping and handling and insurance, in accordance with delivery terms designated by LI-COR. Unless otherwise agreed in writing, such costs will be paid by the Buyer and will appear as a separate item on LI-COR invoice. LI-COR shall ship in accordance with LI-COR standard practices. Buyer may specify different shipping instructions, subject to agreement by LI-COR. Unless otherwise agreed to in writing by LI-COR, all products shall be packaged, if

appropriate, for shipment and storage in accordance with standard commercial practices. All packing shall conform to carrier requirements.

8. Partial Shipments. LI-COR reserves right to make delivery in partial shipments (“Installments”). Any Products delivered in Installments may be invoiced individually and is payable subject to Section 4 of these Conditions. Additional shipping and handling charges for Installments may apply. Delay in delivery of any Installment shall not relieve Buyer of Buyer’s obligation to accept remaining deliveries.

9. Title/Risk of Loss. All domestic shipments are made FOB per Uniform Commercial Code. All international shipments are made per INCOTERMS 2020 designated by LI-COR. Title to the Products and the risk of loss of or damage to the Products ordered by the Buyer will pass to Buyer at time of LI-COR delivery of Products to the carrier. The carrier shall be deemed Buyer’s agent, and any claims for damages in shipment must be filed with the carrier. LI-COR is authorized to designate a carrier pursuant to LI-COR standard shipping practices unless otherwise specified in writing by Buyer.

10. Intellectual Property Rights. Title to and ownership of the documentation, and any improved, updated, modified or additional parts thereof, and all copyright, patent, trade secret, trademark and other intellectual property rights embodied in the Products, shall at all times remain the property of LI-COR or LI-COR licensors.

11. Acceptance. All sales are final and all Products shall automatically be deemed accepted upon delivery to Buyer when goods are loaded on the carrier at LI-COR premises in Lincoln, Nebraska, USA. Failure to provide written notice to LI-COR of any shortages, defects, or damages relating to the Products within fifteen (15) days after receipt shall conclusively deem that the Products conform to the terms set forth in these Conditions. Buyer may not return any Products to LI-COR except as provided for by LI-COR warranty or as provided herein.

12. Product Warranties. Unless otherwise specified by LI-COR:

a) LI-COR warrants that, for a period of twenty-four (24) months from the date of shipment of the Products from LI-COR (the “Warranty Period”), unless otherwise specified for individual Products (such as products with a specified shelf life) or extended by a Support Contract or Extended Warranty Contract (the “Extended Warranty”), the Products sold hereunder will be free from material defects in materials and workmanship and will conform to LI-COR published specifications in effect as of the date of manufacture. LI-COR SPECIFICALLY DISCLAIMS ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING LOSS OF USE OR

LOST PROFITS) WHICH MAY RESULT FROM THE USE OF PRODUCTS PURCHASED HEREUNDER, AS FURTHER SET FORTH IN SECTION 13 OF THESE CONDITIONS OF SALE. This limited warranty extends only to Buyer as original purchaser unless otherwise agreed upon in writing by LI-COR.

b) The foregoing warranty/extended warranty coverage shall not apply if the defective Product (i) has been subjected to abuse, misuse, neglect, negligence, accident, improper testing, improper installation, improper storage, improper handling or use contrary to any instructions issued by LI-COR, (ii) has been repaired or altered by persons other than LI-COR, (iii) has been moved/relocated once originally installed unless LI-COR approved deinstall/reinstall procedures are followed; (iv) has not been installed, operated, repaired and maintained in accordance with the documentation or operated outside of the environmental specifications for the Product; (v) has failed due an Act of God, including but not limited to fire, flood, tornado, earthquake, hurricane or lightning or (vi) has been used with any devices, accessories or products not manufactured by or approved by LI-COR. In addition, the foregoing warranty shall not apply to Products (i) marked or identified as "sample," (ii) loaned or provided to Buyer at no cost, or (iii) which are sold "as is."

c) If during the Warranty/Extended Warranty Period: (i) LI-COR is notified promptly in writing upon discovery of any defect in the Product, including a detailed description of such alleged defect, (ii) such Product is returned, transportation charges prepaid, to LI-COR designated manufacturing facility subject to the prior approval of LI-COR with a valid Return Material Authorization ("RMA") number, and (iii) LI-COR inspections and tests determine that the Product is indeed defective and the Product has not been subjected to any of the conditions set forth above, then, as Buyer's sole remedy and LI-COR sole obligation under the foregoing warranty, LI-COR will, at LI-COR option, repair or replace without charge the defective Product. In no event will the Buyer itself nor will the Buyer allow any party other than LI-COR or a third party authorized in writing by LI-COR to perform any service on the Products.

d) Any Product that has either been repaired or replaced under this warranty shall have warranty coverage (parts only) for the longer of one (1) year or the remaining original warranty period. Replacement parts and/or replacement Products used in the repair or replacement of Products may be new or equivalent to new at LI-COR sole discretion.

e) EXCEPT FOR THE WARRANTIES SET FORTH IN THIS SECTION, LI-COR MAKES NO OTHER WARRANTIES, EXPRESS,

IMPLIED OR STATUTORY, WITH RESPECT TO ANY SERVICES, PRODUCTS OR OTHER PRODUCTS PROVIDED IN CONNECTION WITH THESE CONDITIONS, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT, OR ARISING FROM COURSE OF PERFORMANCE, DEALING, USAGE OR TRADE.

f) Notwithstanding anything herein to the contrary, LI-COR makes no warranty with respect to any third party products provided under these Conditions. Buyer's sole remedy with respect to such third party products shall be pursuant to the original manufacturer's or licensor's warranty, if any, to Buyer, to the extent permitted by the original manufacturer or licensor.

13. Limitation of Liability. IN NO EVENT SHALL LI-COR, ITS LICENSORS OR ITS SUPPLIERS BE LIABLE TO BUYER OR ANY THIRD PARTY FOR COSTS OF PROCUREMENT OF SUBSTITUTE PRODUCTS OR SERVICES, LOST PROFITS, DATA OR BUSINESS, OR FOR ANY INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH THE USE OF THE PRODUCTS OR THESE CONDITIONS, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY (WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, PRODUCTS LIABILITY OR OTHERWISE). LI-COR TOTAL AND CUMULATIVE LIABILITY ARISING OUT OF OR IN CONNECTION WITH ANY PRODUCTS PURCHASED BY BUYER OR SERVICES PERFORMED BY LI-COR ON BEHALF OF BUYER HEREUNDER SHALL IN NO EVENT EXCEED THE PURCHASE PRICE PAID BY BUYER FOR SUCH PRODUCTS OR SERVICES. THE LIMITATIONS SET FORTH IN THIS SECTION SHALL APPLY EVEN IF LI-COR OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND NOTWITHSTANDING ANY FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

14. Severability. If any portion of these Conditions is held invalid, the parties agree that such invalidity shall not affect the validity of the remaining portions of these Conditions.

15. Export Control. Buyer acknowledges and agrees that the Products purchased under these Conditions or Services performed by LI-COR may be subject to restrictions and controls imposed by the United States Government and the regulations thereunder. BUYER WARRANTS THAT IT WILL NOT EXPORT OR RE-EXPORT ANY PRODUCTS PURCHASED OR DELIVERABLES FROM SERVICES PERFORMED BY LI-COR

WITHOUT PRIOR WRITTEN NOTIFICATION AND APPROVAL OF LI-COR.

16. Assignment. Buyer shall not assign or transfer these Conditions or any rights or obligations under these Conditions, whether voluntary or by operation of law, without the prior written consent of LI-COR. LI-COR may freely assign these conditions. LI-COR or any successor may assign all or part of the right to payments under these Conditions. Any assignment or transfer of these Conditions made in contravention of the terms hereof shall be null and void. Subject to the foregoing, these Conditions shall be binding on and inure to the benefit of the parties' respective successors and permitted assigns.

17. Entire Agreement. These Conditions of Sale and Performance of Services take precedence over Buyer's additional or different terms and conditions, to which notice of objection is hereby given. Acceptance by Buyer is limited to LI-COR Conditions of Sale. Neither LI-COR commencement of performance nor delivery shall be deemed or construed as acceptance of Buyer's additional or different terms and conditions. These Conditions supersede all prior communications, transactions, and understandings, whether oral or written, and constitute the sole and entire agreement between the parties pertaining to the referenced quotation or purchase order, provided that: (1) these Conditions shall not, without LI-COR prior written consent, supersede any conflicting terms of: (a) prior written agreements duly executed by LI-COR, or (b) governmental purchase orders, terms of purchase, requests for quotation or acquisition regulations relative to governmental purchasers; and (2) to the extent not in conflict with any such prior or governmental terms, these Conditions shall supplement them. No modification, addition or deletion, or waiver of any of the terms and conditions of these Conditions shall be binding on either party unless made in a non-preprinted agreement clearly understood by both parties to be a modification or waiver, and signed by a duly authorized representative of each party.

18. Force Majeure. Shipping/delivery dates are approximate and may be delayed absent prompt receipt from Buyer of all necessary information. LI-COR shall not be responsible for any failure to perform or delay attributable in whole or in part to any cause beyond its reasonable control, including but not limited to Acts of God, government actions, war, civil disturbance, insurrection, sabotage, labor shortages or disputes, failure or delay in delivery by LI-COR suppliers or subcontractors, transportation difficulties, customs clearance, shortage of energy, raw materials or equipment, or Buyer's fault or negligence. In the event of any such delay the date

of delivery shall, at the request of LI-COR, be deferred for a period equal to the time lost by reason of the delay.

19. Governing Law and Venue. These Conditions and performance by the parties hereunder shall be construed in accordance with the laws of the State of Nebraska, U.S.A., without regard to provisions on the conflicts of law.

Index

A

accelerometer/magnetometer 1-2
 angle of incidence 9-15, 9-15
 pitch, roll, and heading 9-16
accessories kit 1-3
air intake filter 8-8
aperture 1-2, 3-3
 clamp 1-2, 3-2

B

barcodes
 configuring 5-6
 generator 4-12
 scanner 1-2, 3-7
battery
 disposal 1-5
 lithium ion 1-2
 removing and inserting 8-6

C

calibration
 equations 9-10
 flow sensors 8-18

- fluorescence detector 8-19
- in software 4-4
- resetting to factory 4-4
- RH sensors 8-10
- user 8-10
- charging 1-4
 - battery warnings and disposal 1-5
 - qualcomm quick charge 1-4
 - universal adapter 1-5
- clocks 9-19
- configuration
 - management 4-5
- configurations 5-1
 - auto mode 5-2
 - custom 5-3
 - measurement settings 5-3
 - preview 5-10
 - settings 5-1

D

- dark-adapted 5-9
- data files 6-1
 - downloading
 - errors 7-6
 - instrument 6-1
 - dumps 6-2
 - exporting 6-2
 - flash files 6-11
 - groups, labels, descriptions 6-4
 - structure 6-3
 - variables, units, and equations 6-3
- data labels 5-2, 5-5
 - configuring 5-6
- display 1-2
- display layout 5-9

E

enter button 1-2

F

firmware

 update 7-2

flash 5-8

 files 6-11

flow 5-3

 theory of operation 9-7

fluorescence constants 5-9

fluorometer 1-2

fluorometer upgrade kit 1-3

G

GPS 1-1, 9-17

 clock 9-19

 configuring 5-4

 troubleshooting 7-6

 turning off 3-3

 view satellites 2-6

I

instrument

 components 1-2

 interface 2-1

instrument settings 2-6

L

leaf angle 9-15
calculations 9-17
light-adapted 5-9
lithium ion battery 3-1, 7-5

M

maintenance 8-1
storing 8-1
user calibrations 8-10
match
frequency 5-8
theory of operation 9-6
measurements 3-1
settings 5-7
taking 3-3
techniques 3-2
mode
auto 3-5
setup 5-6
manual 5-2
setup 3-6, 5-7
modulation 5-9

P

porometer 1-3
precautions 3-1
prompt on log
configuration 5-5
measurements 3-3
navigation 2-5

Q

quantum sensor 1-2, 3-2

R

remarks 5-2

 adding 3-5

 configuring 5-7

RH sensor

 changing the serial number 8-20

 user-supplied airstream 8-13

RH sensors

 cleaning 8-6

S

shut down 1-5

software 4-1

 configuration management 4-5, 5-4

 connection overview 4-1, 4-10

 data management 4-7

 download and install 4-1

 live view 4-9

 offline mode 4-10

 preferences 4-4

specifications 10-1

stability criteria 9-9

 auto mode 5-2, 5-2, 5-6

support 1-4

T

theory of operation 9-1
fluorometer 9-11
leaf angle 9-17
porometer 9-1
tripod mount 1-3
troubleshooting 7-1
 automatic logging 7-2
 data downloads 7-6
 display layout 7-2
 instrument warnings 7-5
 powering on 7-1
 RH values 7-4
 sealing 7-1

U

USB
 cable 4-1
 port 1-2
 port protector 3-1

W

wrist strap 3-1

LI-COR Environmental

4647 Superior Street

Lincoln, Nebraska 68504

Phone: +1-402-467-3576

Toll free: 800-447-3576 (U.S. & Canada)

envsales@licor.com

envsupport@licor.com

licor.com/

LI-COR GmbH, Germany

Siemensstraße 25A

61352 Bad Homburg

Germany

Phone: +49 (0) 6172 17 17 771

envsales-gmbh@licor.com

envsupport-eu@licor.com

LI-COR Ltd., United Kingdom

St. John's Innovation Centre

Cowley Road

Cambridge

CB4 0WS

United Kingdom

Phone: +44 (0) 1223 422102

envsales-UK@licor.com

envsupport-eu@licor.com

Beijing LI-COR Bioscience Ltd.

Room 502-503, 5th Floor, Jimen No.1 Office Building

Xitucheng Road, Haidian District

Beijing, China

Phone: +86-400-1131-511

china-sales@licor.com

china-support@licor.com

LI-COR Distributor Network

licor.com/distributors

984-19037 • 06/2025

LI-COR
®