

www.ysi.com/ecomapper

Sales, Rental and Support Centers

YSI Integrated Systems & Services 13 Atlantis Drive Marion, MA 02738 800 363 3269 +1 508 748 0366 systems@ysi.com

YSI Incorporated Yellow Springs, OH 45387 +1 937 767 7241 environmental@ysi.com

YSI Gulf Coast +1 225 753 2650 gulfcoast@ysi.com

SonTek/YSI +1 858 546 8327 inquiry@sontek.com

YSI Hydrodata (UK) +44 1462 673581 europe@ysi.com

YSI Middle East +971 2 56 31316 samer@nanotech.co.jp

YSI Australia +61 7 3162 1064 australia@ysi.com

YSI China +86 10 5203 9675 beijing@ysi-china.com

YSI/Nanotech (Japan) +81 44 222 0009 nanotech@ysi.com

Who's Minding the Planet?®


EcoMapper is a trademark of YSI Inc. All other trademarks are registered by their respective companies. © 2010 YSI Incorporated E87-04 0611

Specifications

Dimensions	Length: 60.1 in (152.6 cm) standard; 63.6 in (160.8 cm) with DVL Diameter: 5.8 in (14.73 cm)
Weight (air)	45 lbs (20.41 kg) standard; 60 lbs (27.2 kg) with DVL
Energy	600-800 WHrs of rechargeable Lithium-Ion batteries (>300 cycles)
Depth	200 ft (60 m)
Endurance	8 hours at speeds of 2.5 knots; battery configuration dependent
Speed Range	1-4 knots
Communication	Data: wireless 802.11g Ethernet 2.4 GHz radio link when on the surface
Navigation	Surface: GPS (WAAS corrected) Subsurface: A) Bottom tracking to 40 m with DVL; B) Dead reckoning with compass, depth sensors, and vehicle speed
Sensors	CTD (conductivity, temperature, depth), height from bottom, three-axis digital compass
Onboard Electronics	Intel® ATOM processor with Windows® XP embedded; 80 GB drive for data collection
Software	VectorMap: Mission planning and data viewing Sonar Mosaic: Processing sonar records for overlay in VectorMap UVC: Underwater Vehicle Control, operation, run mission, remote control
Options	
Sensors	Optical dissolved oxygen, turbidity, chlorophyll fluorescence, blue-green algae fluorescence, pH, ORP
Side-Scan Sonar	Triple-frequency 260/330/770 kHz nominal
Doppler Velocity Log	6-beam DVL for navigation, bathymetry, current profiling (down) 10-beam DVL for navigation, bathymetry, current profiling (up and down)
Security System	Safety tow float: Emergency airbag recovery system Acoustic pinger: Underwater location and tracking
17	

Mapping Service

YSI offers a complete mapping service with the EcoMapper AUV. Please contact us.

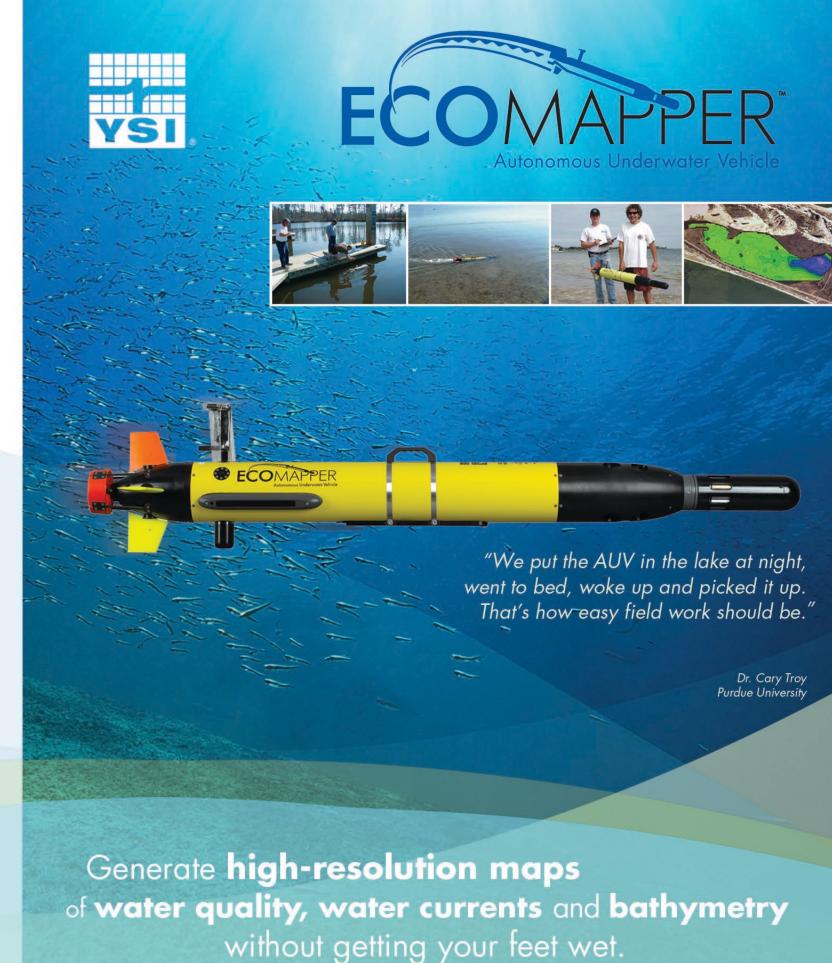

Data Collection Suite



side-scan sonar

DVL for current profiling

> DVL for navigation and profiling (on bottom)

blue-green algae chlorophyll dissolved oxygen pH/ORP turbidity

EcoMapper is a unique AUV designed specifically for mapping water quality, water currents, and bathymetry.

Navigate challenging natural environments with a monitoring platform that will generate the highest-resolution data at a low cost and low risk to your personnel.

Key features

- Reliable autonomous underwater vehicle with DVL
- Flexible options for water quality, bottom mapping, water current profiling, and side-scan sonar
- water column
- Deployable by one person

Baseline Monitoring

- Detailed data on horizontal and vertical planes
- Reduce number of personnel on the water
- Reduce costs to run monitoring program
- Simultaneous bathymetric, water quality and current mapping, sonar imaging

Source Water Mapping

ECOMAPPER

- Improve knowledge of raw water quality
- Early warning of algal blooms and low DO events
- Map sediment level and reservoir volume
- operating costs

Coastal & Ocean Research

- Surf-zone turbulence
- Benthic boundary layer studies
- Coral reef ecology
- Tidal inlet studies
- Fisheries research
- Reduce water treatment Physical-biological interaction

Bottom Mapping

- Depth sensor and acoustic
- Side-scan sonar optional
- Requires <1 m water
 - Track movement of point source

Mapping

map of plume

Point Source and Non-point Source


Generate high-resolution

- Map non-point source impacts to environment
- Monitor impacts by industry or development

5 Steps to an EcoMapper Mission



 Using VectorMap software, on a geo-referenced map.








Start EcoMapper with key fob. UsingWindows™ Remote Desktop, load mission onto EcoMapper's UVC Software.



O Place vehicle in water and start mission.





When EcoMapper is on the surface and within Wi-Fi range, view data and monitor progress. Or take manual control over vehicle.



Retrieve EcoMapper at planned PARK location. Download data via Wi-Fi link; transfer data to preferred graphing software (software not included).

