

# **Digitilt AT System Manual**

**50330999**

Copyright ©2014 DGSI. All Rights Reserved.

This equipment should be installed, maintained, and operated by technically qualified personnel. Any errors or omissions in data, or the interpretation of data, are not the responsibility of Durham Geo Slope Indicator (DGSI). The information herein is subject to change without notification.

This document contains information that is proprietary to DGSI and is subject to return upon request. It is transmitted for the sole purpose of aiding the transaction of business between DGSI and the recipient. All information, data, designs, and drawings contained herein are proprietary to and the property of DGSI, and may not be reproduced or copied in any form, by photocopy or any other means, including disclosure to outside parties, directly or indirectly, without permission in writing from DGSI.

## **SLOPE INDICATOR**

12123 Harbour Reach Drive  
Mukilteo, Washington, USA, 98275  
Tel: 425-493-6200 Fax: 425-493-6250  
E-mail: [solutions@slope.com](mailto:solutions@slope.com)  
Website: [www.slopeindicator.com](http://www.slopeindicator.com)

---

# Contents

System Components .....	1
Pairing Tablet & Reel.....	6
Installing the Reader App.....	7
Reader App Overview .....	8
Adding Inclinometers.....	9
Survey Basics.....	11
Survey Run-Through.....	16
Plotting Surveys.....	21
Sending Data.....	23
Options Menu.....	29
Inspection & Maintenance .....	31
Technical Details .....	34

# System Components

## About Inclinometers

An inclinometer system includes inclinometer casing, and a portable probe, control cable, and readout.

Inclinometer casing is permanently installed in a near-vertical borehole that passes through a zone of suspected movement. The probe, cable, and readout are used to survey the casing.

The first survey establishes the baseline profile of the installed casing. Subsequent surveys will reveal changes in the profile if ground movement has occurred. Plotting these changes reveals the rate, depth, and magnitude of ground movement.

## System Components

The Digitilt AT system includes an inclinometer probe, control cable, a Bluetooth reel, a cable gate, the Digitilt Reader app for certified Android-based tablet computer, and DigiPro2 software that runs on Windows.




## Inclinometer Probe

The Digitilt AT inclinometer probe is supplied in metric and English versions.

The metric version has a gauge length of 0.5m. The English version has a gauge length of 2 feet.


A + mark is engraved on the body of the probe. Use this mark to orient the probe during a survey.

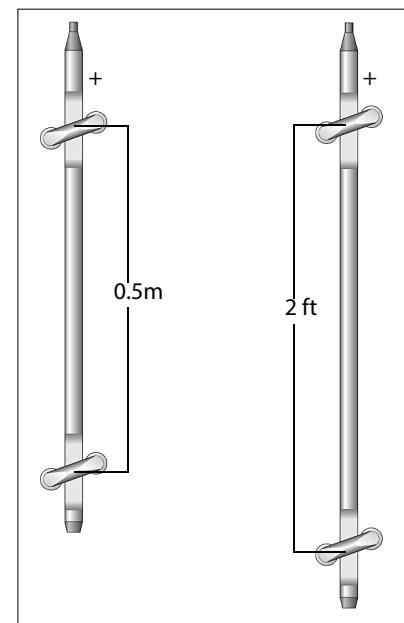

## Measurement Axes

There are two tilt sensors inside the probe. The A-axis sensor measures tilt in the plane of the wheels. The B-axis sensor measures tilt in the plane perpendicular to the wheels.

When the top of the probe is tilted in the + direction, tilt values are positive, and when the probe is tilted toward the - direction, tilt values are negative.

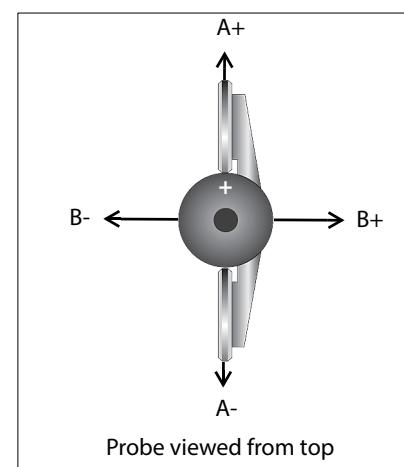

## Handling the Probe

The inclinometer probe is a sensitive measuring instrument. Handle it with care.

- Transport the probe in its carrying case, if applicable. If you drive to the site, carry the casing in the passenger compartment, preferably on a passenger seat.
- For systems with a removable probe, avoid over-tightening the nut when connecting the control cable to the probe, since this will flatten the O-ring and reduce its effectiveness.
- When you insert the probe into the casing, cup the wheels with your hands to compress the springs and allow smooth insertion.
- When you lower the probe into the borehole, do not allow it to strike the bottom.
- When you withdraw the probe from the casing, again cup the

---

wheels with your hands to prevent them from snapping out.

- When you rotate the probe, keep it upright and perform the rotation smoothly.
- The probe is rated for temperatures from -20 to 70 °C (-4 to 158 °F). Avoid using the probe in temperatures outside this range.

#### Control Cable


Control cable is used to control the depth of the inclinometer probe. It also conducts power and readings between probe and reel.

- Metric control cables have half-meter graduations with labels every meter. The first graduation is 0.5 meters from the top wheels of the probe.
- English control cables two-foot graduations with labels every four feet. The first graduation is 2 feet from the top wheels of the probe.

#### Cable Gate

The cable gate is pushed onto the top of the inclinometer casing to serve as the reference for the depth graduations.

During the survey, successive cable graduations are locked into the cable gate to hold the probe steady for readings.

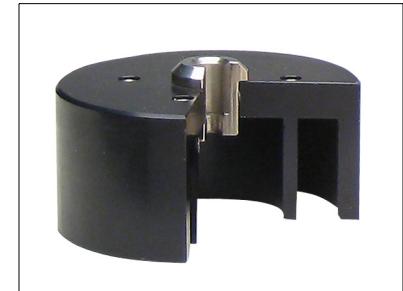


The cable gate fits three diameters of casing: 85, 70, and 48 mm (3.34, 2.75, and 1.9 inch).

---

**Bluetooth Reel** The Bluetooth reel transmits commands and readings between the Reader and the probe. A battery pack inside the reel powers both the reel and the probe.

**Front Panel LEDs** The front panel has three LED lamps and a power switch.

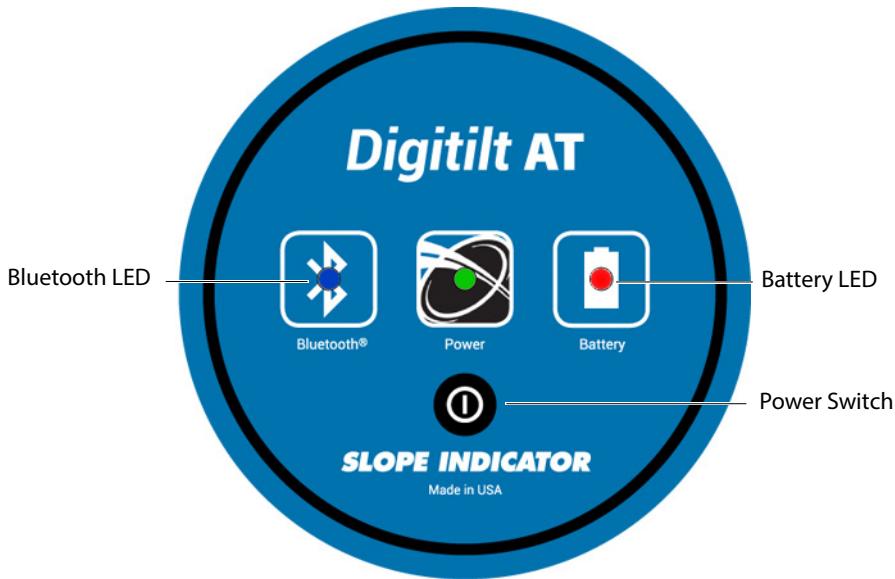

**Power Switch & Power LED** Press to switch on. Press again to switch off. The Power LED glows green when power is on.  
Power is switched off automatically if there is no bluetooth connection for 5 minutes or if there is no communication between reader and probe for 10 minutes.  
The power switch can also be used to reset the reel, if necessary. Check that the charge cable is disconnected, then press and hold the power switch for about 10 seconds. The Battery LED blinks once after the reset.

**Bluetooth LED** The Bluetooth LED blinks while the Bluetooth radio waits for a connection. Blinking is rapid at first and then slows. When a connection is made, the bluetooth LED glows a steady blue.

**Battery LED** The Battery LED stays off during normal use. A fully-charged battery provides about 40 hours of operation.  
If the battery charge is too low for operation, the Battery LED and Power LED blink rapidly for a few seconds and then turn off. Charge the battery as soon as possible.

---

Charging the Battery	<p>Plug the AC adaptor into a wall socket. Insert the barrel-plug into the charge socket on the back side of the reel.</p> <p>The Battery LED first blinks and then changes to a steady red glow when the battery is charging. When charging is finished, the green Power LED blinks slowly.</p> <p>You can charge the battery every night. A charging circuit inside the reel limits charge time to 5 hours.</p> <p>If the battery is fully discharged, a full recharge may take longer than 5 hours. In that case, it is possible to reset the charge timer by disconnecting and then reconnecting the AC adaptor.</p> <p>The adaptor provides 12 Vdc. Polarity of barrel connector is + inside and - outside.</p>
Reader	<p>The Reader (readout device) is an Android tablet running the Digitilt Reader app.</p> <p><b>Android Tablet:</b> Not all Android devices can run the Reader app. A list of certified devices can be found on the Digitilt AT page on the Slope Indicator website. Battery life varies with the device. We recommend that you charge the device every night. A typical survey requires 30 to 60 minutes. If you have a demanding survey schedule, an accessory battery pack or a second battery may be useful.</p> <p><b>Digitilt Reader App:</b> The Reader app is software that transforms the Android device into a full-featured inclinometer readout. The Reader app is available from Play.Google. Instructions are provided later.</p>
DigiPro2 Software	<p>DigiPro2 is a Windows program that creates a database to hold inclinometer surveys and generate plots for data analysis and printing. To download DigiPro2 and the DigiPro2 manual:</p> <ol style="list-style-type: none"> <li>1. Direct your browser to <a href="http://www.slopeindicator.com">www.slopeindicator.com</a>.</li> <li>2. Click Downloads - Software.</li> <li>3. Download both the software and the manual.</li> <li>4. Run the setup program for DigiPro2.</li> </ol>


# Pairing Tablet & Reel

## About Pairing

Pairing is normally a one-time process. During the pairing process, the tablet and the reel exchange Bluetooth IDs and store them in memory.

Pairing essentially gives permission to the tablet and reel to connect and communicate.

## How to Pair

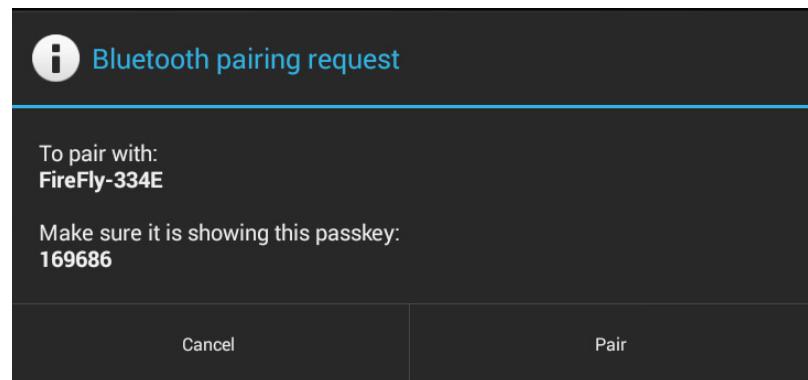1. Switch on the Bluetooth reel. The blue LED starts blinking.
2. Switch on the tablet.
3. Tap the “Settings” icon and find Wireless and Network.
4. Enable Bluetooth.
5. Enable “Search for devices.”  
(If you don’t see this setting, try tapping the Bluetooth entry.)
6. After a short delay, the tablet shows Bluetooth devices that are available for pairing. Each device has an ID or name.
7. Tap the ID that matches the “Bluetooth” label on the back-side of the reel. The example at right shows FireFly-4DC9 as the Bluetooth ID.  


50330100 100 ft  
Bluetooth: FireFly-4DC9
8. The tablet will either:
  - a. ask for a PIN. Enter 1234.
  - b. show the image below. Press “Pair”


9. Finally, look for a message confirming that the devices is paired.

# Installing the Reader App

## Downloading & Installing the Reader App

The Digitilt Reader app is available from the Google Play Store.

1. Start the Google Play app on your Android device.
2. Search for “Digitilt Reader.”
3. Tap “Install” when the app appears.

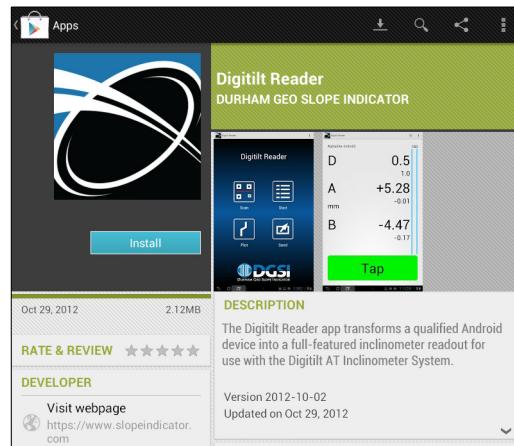

4. Tap “Accept & download” after reviewing permissions.
5. The Digitilt Reader icon appears on the tablet home screen.

If the icon does not appear, find the icon in the app drawer. Then tap and hold the icon, releasing it on one of the home screens.



# Reader App Overview

Digitilt Reader App      Tap the Digitilt Reader icon to open the app.



Action Bar      Tap icon to take action. Icons vary with screen.




# Adding an Inclinometer

## The Inclinometer List

The Reader keeps a list of inclinometers along with the survey data for each inclinometer. To see the list, tap the Survey icon.



- To add an inclinometer to the list, tap +.
- To start a survey, tap the inclinometer.
- To edit an inclinometer, tap-and-hold the inclinometer.

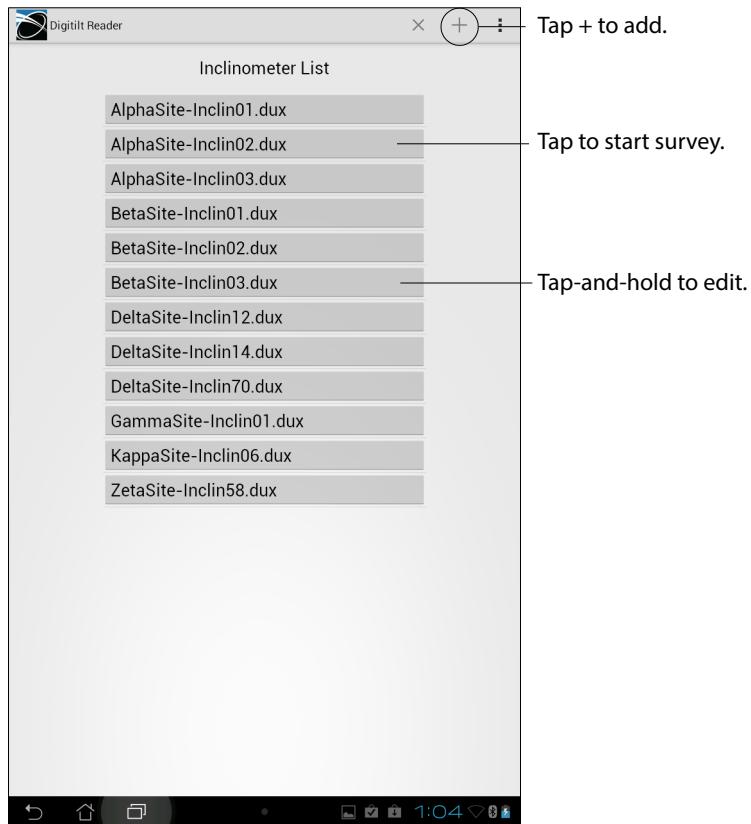

## Adding an Inclinometer

1. Tap “Survey” to display the list of inclinometers.

2. Tap “Add” to display an inclinometer form.



3. Make entries as explained below. If the keyboard hides part of the form, slide the form upwards with your finger.

4. Tap “Done” when the form is complete.



### Fields on the inclinometer form

**Site & Inclinometer:** These two fields are used together to identify an inclinometer. Each field can contain 12 characters. Spaces, punctuation, and special characters are not allowed.

**Description:** Optional.

**A0 direction:** Optional. Compass heading 0 to 359.

**Units:** Tap to switch between metric and English units.

**Display Unit:** Tap to switch between mm and Digi-metric or between inch and Digi-English. Digi units are explained in a later chapter.

**Depth Unit:** Fixed to meters or feet.

**Interval:** Typically 0.5 for metric and 2 for English.

**Top Depth:** Typically 0.5 for metric and 2 for English.

**Bottom Depth:** Enter a multiple of 0.5 for metric systems or a multiple of 2 for English systems.

### Note:

The reader turns a field red if it finds an unacceptable entry. Check that you have entered no spaces, punctuation, or special characters. Also check that top and bottom depths are multiples of the interval.

# Survey Basics


## Inclinometer Surveys

During a survey, the probe is drawn from the bottom to the top of the inclinometer casing. This is called a “pass”. A complete survey consists of two passes, a 0 pass and a 180 pass.

### A-Grooves

Inclinometer casing is installed with one set of grooves aligned with the expected direction of movement (downhill or towards the excavation). These are the “A” grooves.


Only the A-grooves are used in the survey. The A0 groove is usually marked for easy identification.

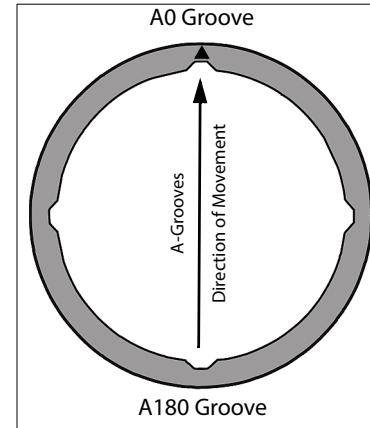

### Orientation of Probe for 0 Pass


For the 0 pass, insert the probe with the + mark facing the A0 direction.

The + mark appears on the body of the probe above the top wheels.

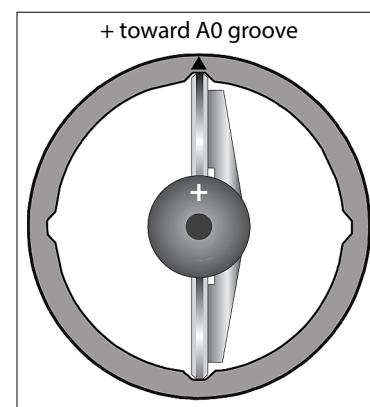

### Orientation of Probe for 180 Pass

For the 180 pass, remove the probe, rotate it 180°, and insert it with the + mark facing the A180 groove.

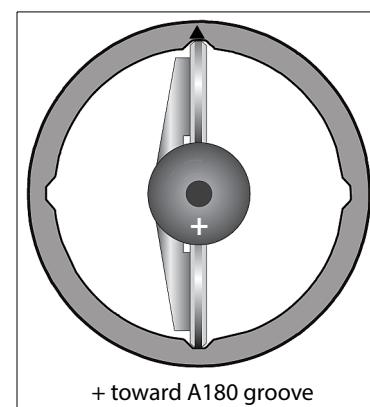


---

## The Survey Screen

The survey screen guides you through the survey.


### 0-Pass Screen

The elements of the survey screen are explained below.

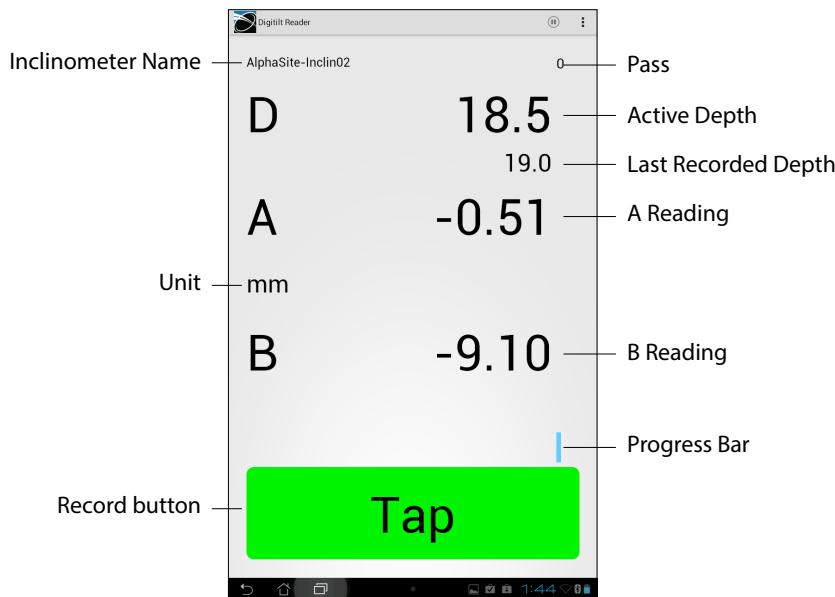

### 180-Pass Screen

The 180-Pass screen adds checksums and a second progress bar.

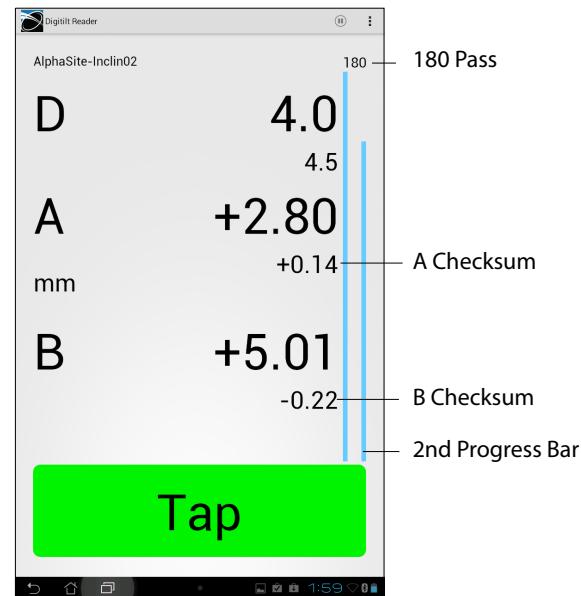


---

**The Record Button** The record button has multiple colors and functions.

**Start & End** The record button is orange at the start and end of each pass. Tap “Start” to enable recording. Tap “End” to disable recording. This prevents accidental recording of readings when you position the probe for each pass.



**Wait** The record button is yellow when readings are not stable. You can tap the Wait button to record a reading, if necessary.



**Tap or Pull** The record button is green when readings are ready to record. Tap the button or pull the cable (hands-free mode) to save the readings. The button is dark green after readings are saved.



Tap to record (Tap mode)



Pull cable to record (Hands-free mode)



## Survey Modes

Tap the options icon to change survey mode.




Choose Tap or Hands-Free. In Tap mode, you tap the record button to save a reading. In hands-free mode, you pull the cable to record the reading. There is no need to hold the tablet or tap the screen except at the beginning and end of a pass.

## Changing the Active Depth

If cable depth and “active depth” get out of sync:

1. Tap & hold the active depth until arrows appear.
2. Tap the arrow to change the depth.
3. Move the probe to the new depth
4. Tap OK to resume the survey. The new “in-sync” readings overwrite the previous “out-of-sync” readings.

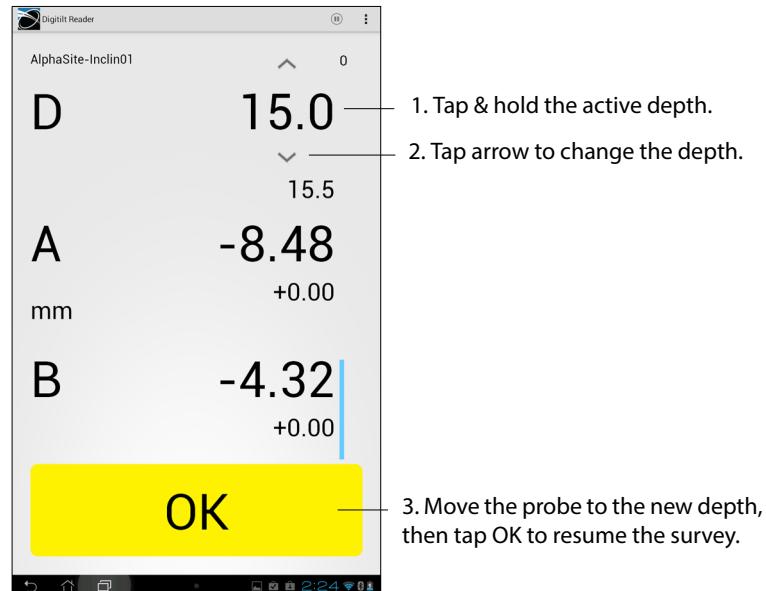


---

## Resuming an Interrupted Survey

The Reader keeps a “bookmark” with each recorded reading. If a survey is interrupted, the bookmark lets you resume from the last recorded depth.

1. Display the inclinometer list.
2. Tap the inclinometer to start a survey. A dialog appears.
3. Tap OK to start the survey from the bookmark. To abandon the bookmarked survey and start a new survey, choose New.

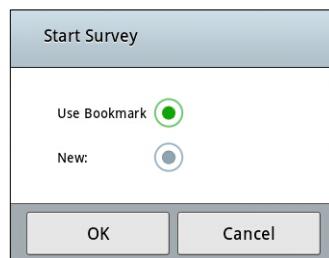


## Halting a Survey

1. Tap Pause to halt the survey for any reason.



2. Make a choice, then tap OK.  
Or tap Cancel to resume the survey.

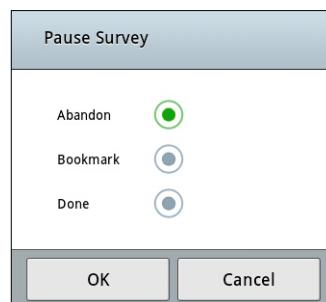

**Abandon:** Deletes the current survey.

**Bookmark:** Sets a bookmark at the last recorded reading.

**Done:** Saves the current survey as is. This is useful if you are correcting a few readings and then want to stop.

# Survey Run-Through

## Set Up

1. Switch on Reel and Reader. Tap the Digitilt Reader icon to start the app. Wait for a steady blue glow from the Bluetooth LED to show that a connection has been made.



2. Tap “Survey”.

You can switch between Tap mode and Hands-free mode at any time. The examples here show Tap mode.




3. Tap an inclinometer to survey.



4. The Reader displays the start depth for the survey.

Insert the probe, with + mark facing the A0 groove, and lower it to the start depth.

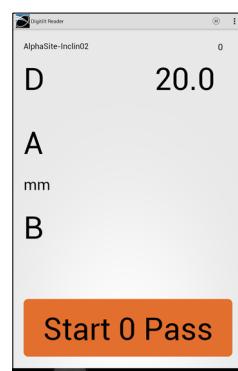


5. Place the cable gate onto the casing and lock in the cable.

6. Wait ten minutes for temperature adjustment. You can switch off the Reader while you wait.


---

## Run the 0-Pass

1. Switch on the Reader and tap “Start 0 Pass.”

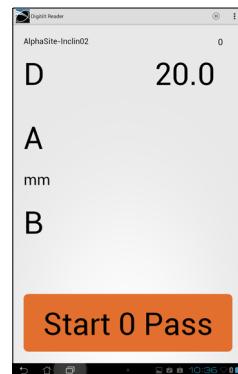


2. The A and B readings appear. Readings are stable, so the record button is green. Tap to record.

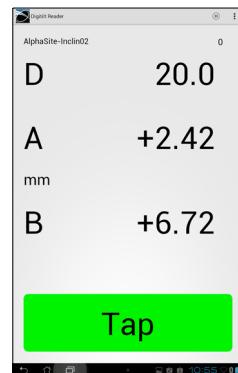


3. The Reader displays the next active depth. Raise the probe to this depth and wait for stable readings.

The last recorded depth appears just below the new active depth.

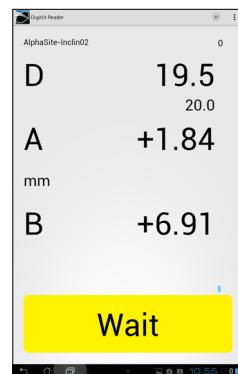


4. Tap the record button when it is green.
5. The Reader displays the next active depth. Raise the probe to this depth, wait for stable readings, and then tap the record button.
6. Repeat these operations until the probe reaches the top depth.

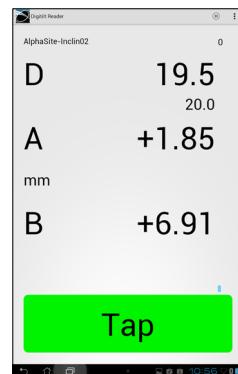


---

### 0-Pass continued

Now the Reader displays the top depth.  
Raise the probe to this depth and wait for  
a stable reading.

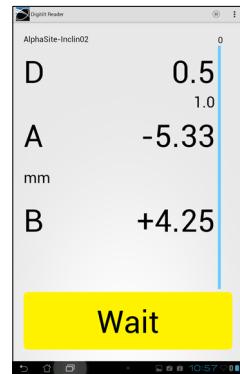


7. Tap when the record button is green.

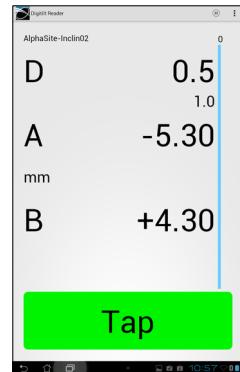


8. Tap End 0 Pass.

This disables recording so you can handle  
the probe.

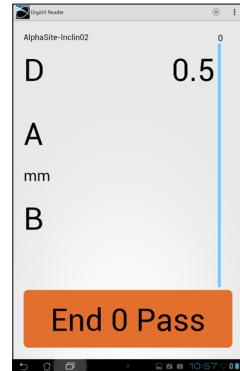

9. Now the Reader displays the start depth  
for the 180-Pass. Recording is still  
disabled.

Remove the probe, rotate it 180 degrees,  
and insert it with the + mark facing the  
A180 groove. Lower it to the start depth.

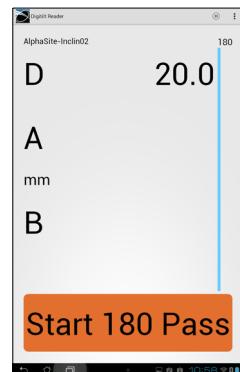


---

## Run the 180 Pass


1. Tap “Start 180 Pass.”

This enables recording.

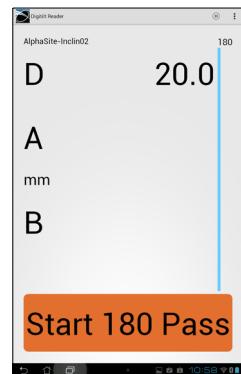


2. Tap the record button when it is green.

You can see checksums now.

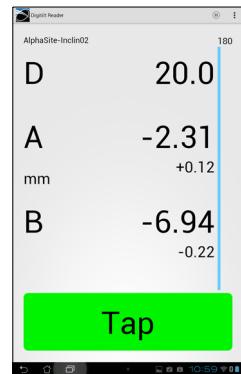


3. The Reader displays the next active depth. Raise probe to this depth and wait for a stable reading.

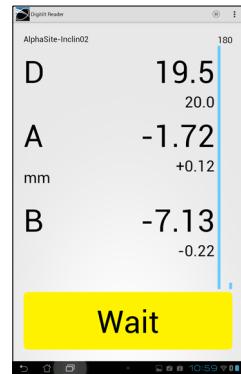

4. Tap the record button when it is green.

5. The Reader displays the next active depth. Raise the probe to this depth, wait for stable readings, and then tap the record button.


Repeat these operations until the probe reaches the top depth.

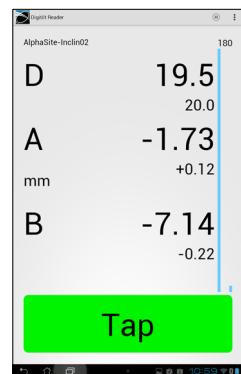


---

180-Pass continued

6. Now the Reader displays the top depth.  
Wait for a stable reading.

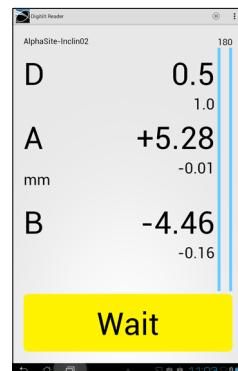


7. Tap the record button when it is green.

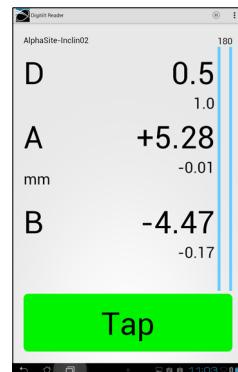

8. Tap "End 180 Pass."

The survey is complete. The Reader saved readings during the survey so there is no need to save anything now.


When you tap the End button, the Reader takes you to the Plots screen.

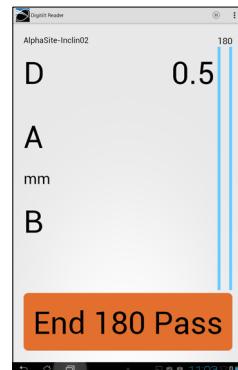

# Plotting Inclinometer Surveys

## Introduction

The Reader app can display four types of plots. These are useful for validating the survey. The Reader cannot print plots. Use DigiPro2 for that.

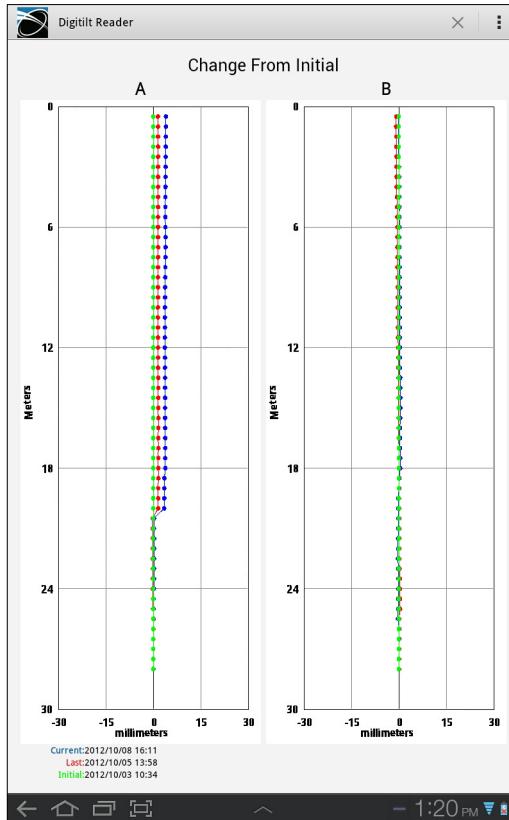

## Checksums

Checksums are the sum of the 0 and 180 reading at each depth. The ideal checksum is 0. In practice, checksums are typically some non-zero value. Checksum plots are displayed in the reading units used in the survey.

## Change from Initial

This plot shows changes in profile (cumulative displacement): current- initial, last-initial, and initial-initial (which plots on the 0 line).

## Change from Last

This plot shows change in profile from the last survey. Calculations are current-last and last-last (which plots on the 0 line).

## Profile

This plot shows the casing profile (cumulative deviation).

---

## **View Data**

This shows a table of data. If your checksum plot shows a bad reading, look at the data table to identify the depth and pass (0 or 180) of the bad reading.

If you are still on site, you can reopen the survey and make the correction with the inclinometer probe. The steps are:


- 1.** Tap and hold the depth the bad reading.
- 2.** Choose 0 or 180.
- 3.** The Reader displays that depth and a live reading. Orient the probe for 0 or 180, insert it into the casing, and lower it to the depth displayed on the Reader.
- 4.** Click OK to enable recording. Tap the record button to record a replacement reading. Continue upwards as needed, or tap the “Pause” button to exit the survey.

# Sending Data Files to a PC

## Introduction

Inclinometer data files have a .dux extension. For convenience, we call them “dux” (Digitilt Uniform eXchange) files.

You can send dux files to the PC by email or Dropbox. Or you can transfer files by USB cable and a Windows file manager).

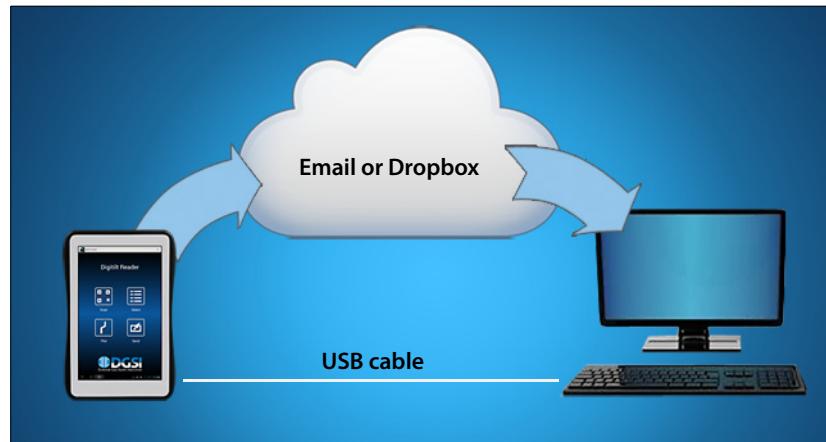


## Send by Email


Email transfers require an internet connection and an email program. The instructions below assume you have a Gmail account, since that is usual with Android devices.

### Set Email Recipients

1. Setup is a one-time task. Tap Options - Share.

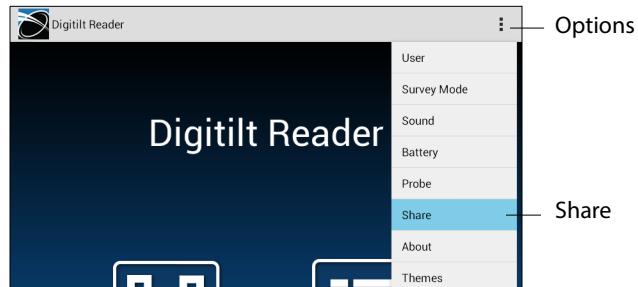

2. Enter one or more email addresses. Then tap Done.

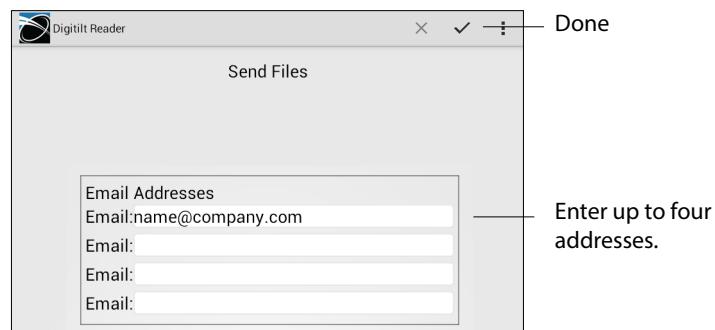


---

## Sending by Email


1. Tap Send.



2. Tap Share.

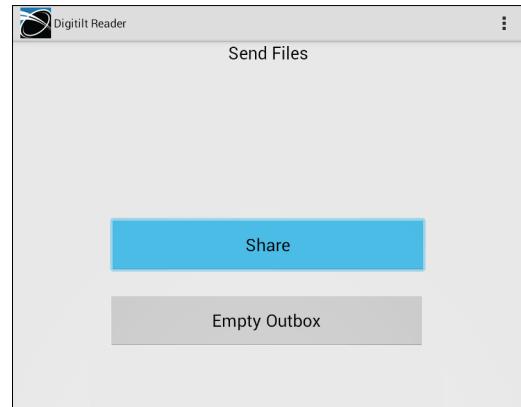


3. Tap Gmail.

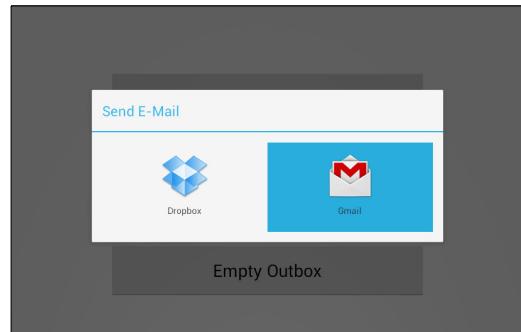

4. Tap Send.

(The Reader  
attaches dux files  
automatically)

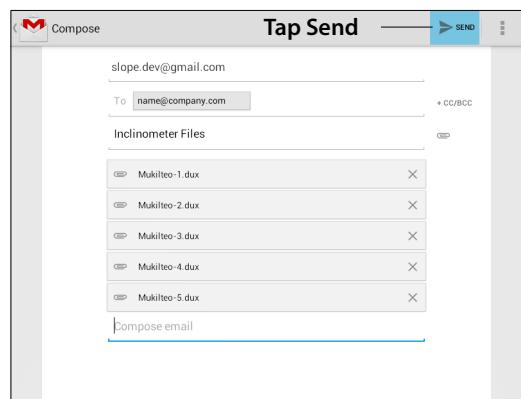

5. When the email arrives, the recipient saves the attached files into a folder on the PC. If you are using DigPro2, paste the files into your default import folder.

## Send by Dropbox

Dropbox is a “cloud” service. Dropbox transfers are more automated than email transfers. No user actions are required. The dux files sent from the Reader simply appear in the Dropbox folder on your PC.



The convenience of Dropbox is well worth the time that it takes to set up. Other cloud services such as Google Drive can be set up in a similar way.

### Set Up Dropbox

1. Visit [Dropbox.com](https://www.dropbox.com) using your web browser. Create a free Dropbox account. Enter an email address for the User ID, then create a Dropbox password. User ID and password are used again in the next steps
2. Download Dropbox for Windows. Run the setup program and then log in to Dropbox, using your User ID and password. Now your PC is linked to Dropbox in the cloud.
3. If you are using DigiPro2, create a default import folder in Dropbox (See the DigiPro2 manual). Otherwise, just create a folder in Dropbox to hold the dux files.
4. Visit the Google Play store using your Android device. Search for Dropbox and install it. You already have a Dropbox account, so login using your User ID and password. Now the Android device is linked to Dropbox, too.
5. The Dropbox file listing on your Android device now shows the folder you created in step 3. That is where the Reader app will send dux files.


---

## Sending by Dropbox


1. Tap Send.




2. Tap Share.

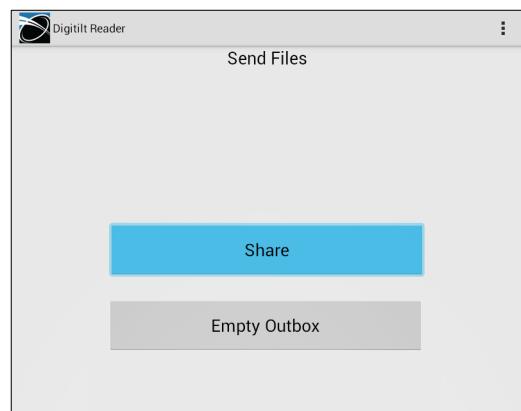

3. Tap Dropbox.

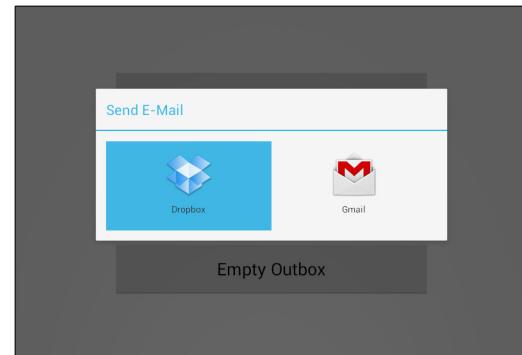


4. Tap Upload. The Reader uploads the dux files to the specified folder.

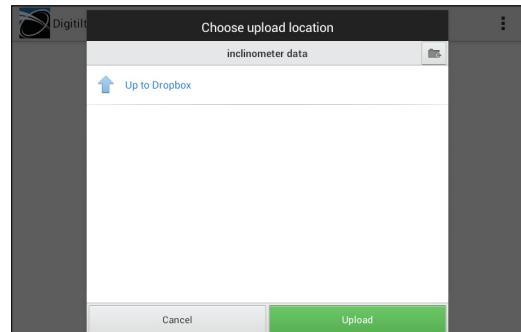


5. Soon afterwards, the files appear in the Dropbox folder on your PC.

(Look in  
My Documents).

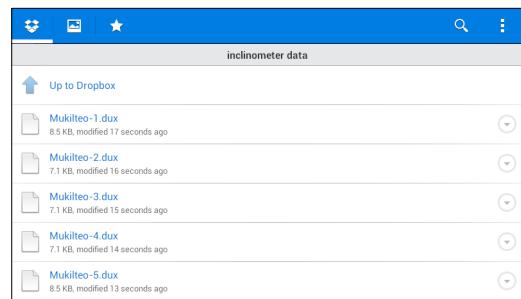


## USB Transfers

This method requires the USB cable supplied with your Reader device and the Windows file manager (Windows Explorer).

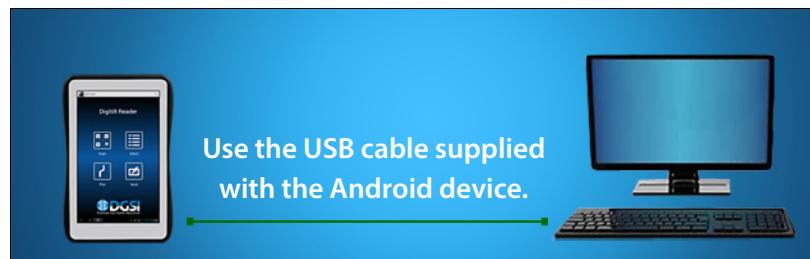


1. Connect the Reader to the PC using the USB cable.


Choose “Open device.”

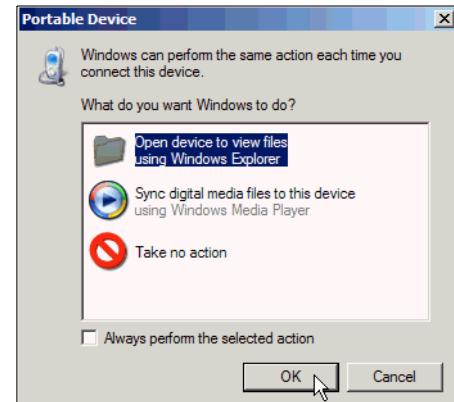

2. The Reader device appears in the address line. Click on Internal storage.

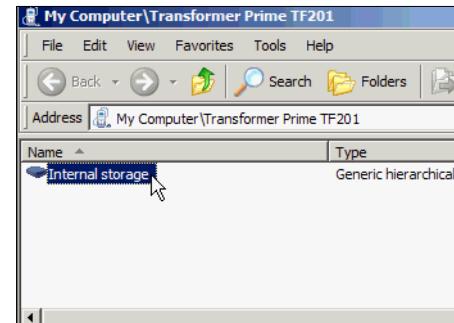


3. Click on the “Download” folder. Then click on the Digitilt Reader folder.

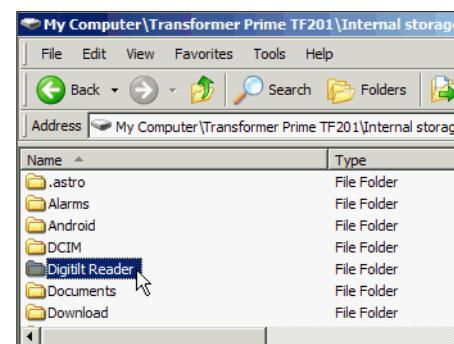


---

## USB Transfers Continued

4. Click on the Outbox folder. This folder holds any updated dux files.

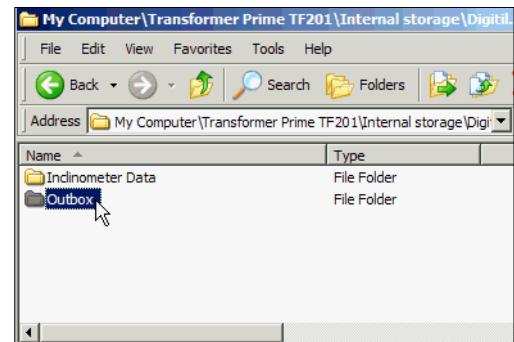

5. Copy all the dux files in the Outbox.

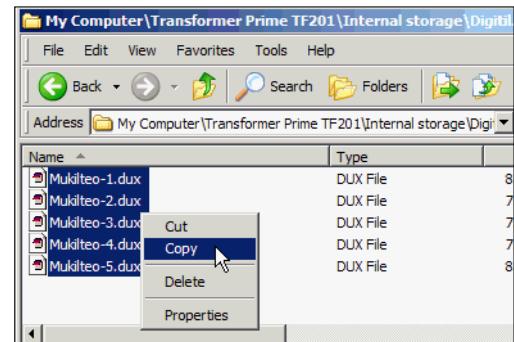

6. Paste the files into a folder on your PC. If you are using Digi-Pro2, paste them into the default import folder.

# Options Menu

Options Tap the Options icon.



User A user name is saved with the survey. Choose a name from the list. Tap and hold to edit the list.

Survey Mode: Choose “Tap” mode if you want to tap the record button to record readings. Choose Hands-Free if you want to pull the cable (rather than tap the button) to record readings.

Sound Choose the sound that the reader makes when you record a reading. You can add your preferred sounds by saving a sound file to the reader’s Notification folder. The sound file will then appear in the list of selectable sounds.

Battery Displays battery level of the Reader, but not the Reel.

Probe Displays “live readings” from the probe. Tap the units label to specify different units (Keep in mind that metric units should be used with metric probes and English units should be used with English probes).

Share Set default email addresses for sending data files by email.

About Displays embedded serial number and firmware version.

Themes Light theme shows black text on a light background. Dark theme shows white text on a black background. Choose theme that provides best visibility.

Survey Control These settings can improve your surveys.

**Stability:** This is the variation allowed for stable readings. The default value is 6 sine units, equivalent to 0.03mm or .001 inch. The Digitilt DataMate - which is the defacto standard - uses a stability threshold that is two times larger. If your readings take a long time to stabilize, consider using a value up to 12.

---

**Motion:** When a reading exceeds this number, the reader app assumes the probe is in motion. Used for hands-free mode. If the reader fails to detect your pulls, try setting a lower number. Users who pull slowly need a lower number. Users who pull quickly can use a higher number. Normal values are 80 to 100.

If there is a lot of vibration at the site, tap mode may be your only choice, but you could try setting "motion" to a higher number and then make your pulls quick, rather than slow. The higher number decreases sensitivity to the ground vibration, but you must accelerate the probe faster so that a pull can be detected.

**Tap Lockout:** This tells the reader how long to display the "saved" message. During that time, the app will not accept new input. The default is 2 seconds.

**Pull Lockout:** Same as above, but used for hands-free mode. Lockout is more important for hand-free mode. Experiment to find the right lockout timing. New users may be more comfortable with a lockout of 3 seconds or more. Expert users who develop a rythm may prefer a 2 second lockout.

Exit      Turns off the Bluetooth connection and closes the reader app.

# Inspection & Maintenance

## Probe Inspection

Wheel yoke ( <i>all systems</i> )	<b>Yoke does not return to fully extended position:</b> If yoke is dirty, clean it. If problem persists, spring may be broken or weak.
Wheel ( <i>all systems</i> )	<b>Does not turn freely:</b> Lubricate wheel bearings with light machine oil.
Connector keyways ( <i>connector systems only</i> )	<b>Wear or corrosion:</b> Worn keyway may degrade O-ring seal. Learn how to connect cable without “hunting.” Remove corrosion and change practice - allow connector to dry after use.
Connector O-ring ( <i>connector systems only</i> )	<b>Flattened, split:</b> Replace if flattened or split.
Connector pins ( <i>connector systems only</i> )	<b>Bent pins:</b> Bent pins are easily broken when straightened. Replacement of connector requires recalibration of probe. Change connection practice.

## Probe Maintenance

Moisture Management ( <i>all systems</i> )	Wipe off the control cable and probe when you finish the day's final survey. Do not store wet cloth with the probe.  Allow the connector to dry thoroughly: remove connector cap and allow connector to air-dry for a number of hours.  Lubricate the wheels. This helps displace moisture.
Wheels ( <i>all systems</i> )	Lubricate the wheels by applying drops of a light machine oil on the wheel bearings. Do <i>not</i> use WD-40 or any other lubricant spray that contains chlorinated solvents. Wheels should be lubricated at the end of each day of usage, prior to storage of the probe.
O-Ring ( <i>connector systems only</i> )	Lubricate regularly with O-ring lube or silicone based grease. Do <i>not</i> use WD-40 or any other lubricant spray that contains chlorinated solvents.

---

Connectors <i>(connector systems only)</i>	<p>Clean connectors as necessary. Use a slim cotton swab moistened with alcohol. Be careful not to bend pins.</p> <p><i>Do not</i> use electrical contact cleaners, especially sprays. Solvents in these products will attack the neoprene inside the connectors. When attacked, the neoprene swells and reduces the effectiveness of the O-ring seal.</p>
Storage <i>(all systems)</i>	<p>Store probe in dry place. Be sure that the box is dry, the wheels are oiled, the connector is dry.</p>

## Control Cable Inspection

Cable <i>(all systems)</i>	<p><b>Twists:</b> Twists indicate poor coiling technique. Change practice: do <i>not</i> pull the cable over the side of the reel - reel off and reel on.</p> <p><b>Worn markings:</b> user is dragging cable through cable gate. Change practice - pull cable out then up.</p> <p><b>Kinks and/or gouges:</b> if kinks do not straighten, there is probably internal damage and likelihood of intermittent reading failures. If any deep gouges, water can enter cable. In both cases, bad section of cable must be removed, either by shortening the cable or replacing the cable.</p>
Connector key <i>(connector systems only)</i>	<p><b>Wear:</b> Change connection practice - use witness marks.</p> <p><b>Corrosion:</b> Remove corrosion and change practice - allow connector to dry after use.</p>
Connector rubber insert <i>(connector systems only)</i>	<p><b>Swelling, poor seal:</b> Rubber swells when attacked by WD-40 or contact cleaners. Swelling may prevent good seal and allow water to enter connector. Return for service if sealing is compromised.</p>
Connector for Probe <i>(connector systems only)</i>	<p><b>Check O-ring:</b> Do <i>not</i> disassemble this connector. Requires about two hours and a pressure test to reassemble.</p>

---

## Control Cable Maintenance

<b>Moisture Management (<i>all systems</i>)</b>	<p>Wipe off the control cable as you draw the probe up on the last run of the day.</p> <p>When you return to the office, remove connector caps and allow connectors to air-dry for a number of hours.</p>
<b>Cable (<i>all systems</i>)</b>	<p>When necessary, rinse cable (but not connectors) in clean water or wash the cable in a laboratory-grade detergent, such as Liquinox.</p> <p>Do not use solvents to clean the cable. Do not submerge the reel.</p>
<b>Connectors (<i>connector systems only</i>)</b>	<p>If it is necessary to clean the connector, use a cotton swab moistened with alcohol. Sockets can be cleaned with a brush.</p> <p>Do not use spray lubricants or electric contact cleaners. Solvents contained in such products will attack the neoprene inserts in the connectors.</p>

---

# Technical Details

Reading Units	The Digitilt AT stores tilt readings as $100000 \times \sin(\theta)$ , where $\theta$ is the angle of tilt. During the survey, the Reader app displays the following units:
Metric Units	<ul style="list-style-type: none"><li>• mm of deviation, assuming a 500 mm gauge length.</li><li>• digi-metric, <math>25000 \times \sin(\theta)</math>, the metric unit displayed by the Digitilt DataMate readout.</li></ul>
English Units	<ul style="list-style-type: none"><li>• inches of deviation, assuming a 24 inch gauge length.</li><li>• digi-English, <math>20000 \times \sin(\theta)</math>, the English unit displayed by the Digitilt DataMate readout.</li></ul>
Inclinometer “dux” Files	The Digitilt Reader app creates a file for each inclinometer. The file has a .dux extension. For convenience, it is called a dux file. The dux file contains the parameters of the inclinometer (depth, etc) and all the surveys for that inclinometer. New surveys are appended to the end of the file.
Folders	<p>The Digitilt Reader app creates the following folders within the Android system “Download Folder:”</p> <p><b>Digitilt Reader:</b> Top Level folder.</p> <p><b>Inclinometer Data:</b> This folder holds all the inclinometer (.dux) files. The Reader app scans the Inclinometer Data folder to create its list of inclinometers.</p> <p><b>Outbox:</b> This folder holds a copy of any dux file that has been updated with a new survey. All the file transfer methods use files from the Outbox folder.</p> <p><b>System:</b> Holds system files. It contains the bookmark file which allows any interrupted survey to be restarted with no loss of data. Most files are machine-readable, not human-readable.</p>

---

<b>File Management</b>	<p>The final repository for your inclinometer data should be a database on your PC or network. The .dux files on the Reader should be regarded as temporary, not long term.</p> <p><b>Inclinometer Data:</b> This folder holds the “original” files. As mentioned above, the Reader scans the inclinometer folder to create its list of inclinometers.</p> <ul style="list-style-type: none"><li>• If you want two Readers to have the same list of inclinometers, copy the dux files from one Reader to the other.</li><li>• If you want to remove an inclinometer from the list, delete its dux file in the Inclinometer data folder.</li></ul> <p><b>Outbox:</b> After you transfer the files from the Reader to the PC, you can delete the files in the Outbox, either with the “Empty Outbox” button on the Reader or via a file manager.</p>
<b>FCC notice</b>	<p>The Digitilt AT system reel contains a Bluetooth wireless module: FCC ID T9JRN41-1. The module label may be viewed by removing the Reel control panel.</p>